

GPIB Command Syntax

for

**GSM/GPRS/EGPRS Mobile Test Application E1968A Revision
A.03**

**GSM/GPRS Lab Application E6701C (including E6704A EGPRS)
Revision C.03**

1000-1889 (to order use part number **5971-5995**)



Agilent Technologies

Notice

Information contained in this document is subject to change without notice.

All Rights Reserved. Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

This material may be reproduced by or for the U.S. Government pursuant to the Copyright License under the clause at DFARS 52.227-7013 (APR 1988).

Agilent Technologies, Inc.
Learning Products Department
24001 E. Mission
Liberty Lake, WA 99019-9599
U.S.A.

Contents

Diagram Conventions	7
Description	7
ABORt	9
AFGenerator	10
CALibration	10
CALCulate:SMONitor	11
CALL:ATTached	12
CALL:BA	12
CALL:BAND	15
CALL:BCCode	15
CALL:BCCode	15
CALL:BCHannel	16
CALL:BURSt	16
CALL:CONNected	17
CALL:COUNt	18
CALL:DATA:PING	19
CALL:DCONnected	20
CALL:DEModulation	20
CALL:END	20
CALL:FUNction	21
CALL:HANDover HANDoff	23
CALL:IMEI	23
CALL:LACode	23
CALL:MCCode	23
CALL:MNCCode	24
CALL:MODulation	24
CALL:MS	25
CALL:NCCode	32
CALL:OPERating	32
CALL:ORIGinate	32
CALL:PAGing	33
CALL:PBCChannel	33
CALL:PBPTest	33
CALL:PDTCH PDTChannel	34
CALL:PLOGging	40
CALL:PMNCode	41
CALL:POWer	42
CALL:PPRocedure:ATTach	42
CALL:PPRocedure:DETach	43
CALL:PPRocedure:IDEntity	43
CALL:PPRocedure:PDPContext	44
CALL:PPRocedure:PMEasurement:ADATa	45

Contents

CALL:PPRocedure:PMEasurement:MPRequest	45
CALL:PPRocedure:PMEasurement:PERRor	51
CALL:PPRocedure:PMEasurement:PRESponse:AVailable?	51
CALL:PPRocedure:PMEasurement:PRESponse:LIError	51
CALL:PPRocedure:PMEasurement:PRESponse:LINformation	52
CALL:PPRocedure:PMEasurement:PRESponse:MINformation	52
CALL:PPRocedure:PMEasurement:PRESponse:MSETs	54
CALL:PPRocedure:PMEasurement:PRESponse:RIDentity	54
CALL:RACode	54
CALL:RFGenerator	55
CALL:SETup	56
CALL:SIGNaling	59
CALL:SMService	60
CALL:STATus	63
CALL:TCHannel	64
CALL:TRANsferring	66
CALL:TRIGger	66
DISPlay	73
FETCh:AAUDio	74
FETCh:BERRor	76
FETCh:<BFIndication BFI>	78
FETCh:BLERror	79
FETCh:DAUDio	79
FETCh:DPOWer	80
FETCh:EMACcuracy	81
FETCh:ETXPower	85
FETCh:FBERror	86
FETCh:FFERate	86
FETCh:GBERror	87
FETCh:IQTuning	87
FETCh:MTAudio	88
FETCh:ORFSpectrum	89
FETCh:PFERror	91
FETCh:PVTime	93
FETCh:SMONitor	97
FETCh:TXPower	97
INITiate	98
READ	100
RFANalyzer	103
RFGenerator:OUTPut	104
SETup:AAUDio	104
SETup:BERRor	106

Contents


SETup:<BFINdication BFI>	107
SETup:BLERror	107
SETup:CONTInuous	108
SETup:DAUDio	109
SETup:DPOWer	110
SETup:EMACcuracy	111
SETup:ETXPower	113
SETup:FBERror	116
SETup:FFERate	117
SETup:GBERror	118
SETup:IQTuning	118
SETup:MTAudio	121
SETup:ORFSpectrum	128
SETup:PFERror	132
SETup:PVTime	135
SETup:SMONitor	140
SETup:TXPower	142
STATus:OPERation	144
STATus:PRESet	149
STATus:QUEStionable	150
Status Byte Register	157
Standard Event Status Register	157
SYSTem:APPLication	158
SYSTem:AUDio	159
SYSTem:BEEPer	159
SYSTem:CONFigure	159
SYSTem:COMMunicate	160
SYSTem:CORRection	161
SYSTem:CURRent:TA	162
SYSTem:DATE	162
SYSTem:ERRor?	162
SYSTem:FTRigger	163
SYSTem:MEASurement	163
SYSTem:PRESet	163
SYSTem:REGister	164
SYSTem:ROSCillator	164
SYSTem:SYNChronized	164
SYSTem:TIME	164
SYSTem:TZONE	165
SYSTem:UTC	165
IEEE 488.2 Common Commands	166

Contents

GPIB Syntax for E1968A, E6701C and E6704A

Diagram Conventions

Description

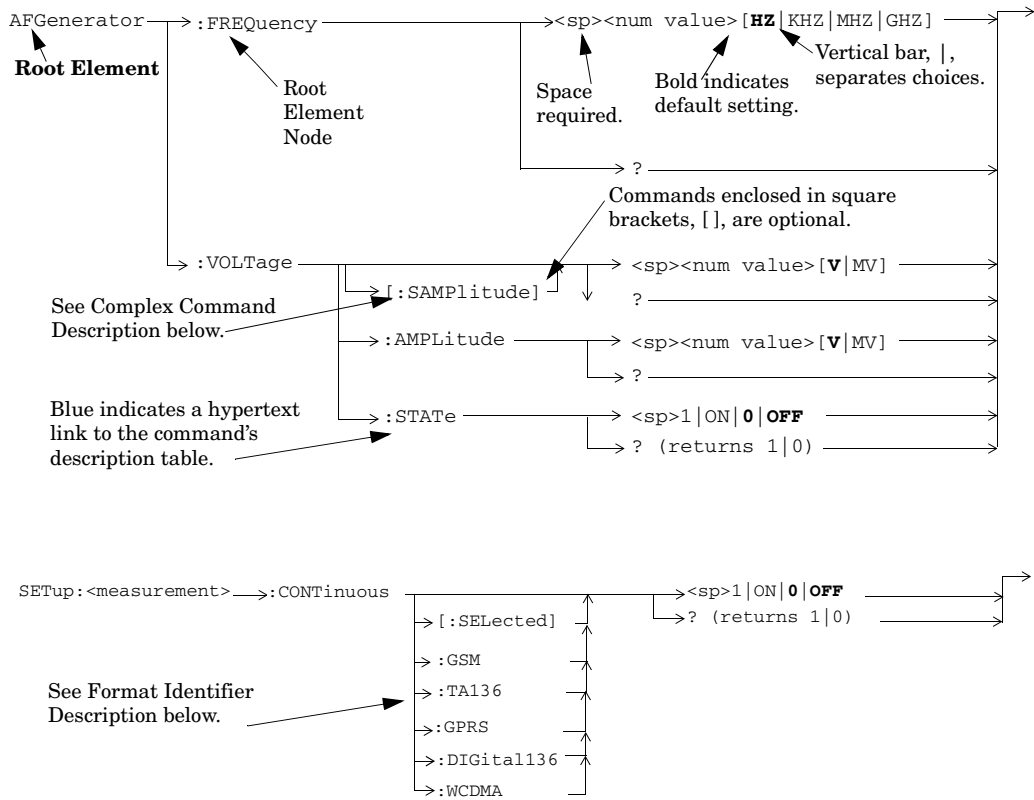

GPiB Syntax for E1968A, E6701C and E6704A

Diagram Description

Statement elements are connected by lines. Each line can be followed in only one direction, as indicated by the arrow at the end of the line. Any combination of statement elements that can be generated by starting at the **Root Element** and following the line the **direction of the arrow** is syntactically correct. The drawings show the proper use of spaces. Where spaces are required they are indicated by **<sp>**, otherwise no spaces are allowed between statement elements.

Complex Command Description

A complex command sets the state of the parameter to ON, and is used to set a value for that parameter. These parameters; amplitude, frequency, gain, number, time, and value can be used as a complex command. Refer to the specific command for the parameter that applies.

Format Identifier Description

In fast switching applications there are some GPiB commands/queries that are common to more than one radio format. Format identifiers are used to identify which radio format the command applies to. The format identifier is added at the end of the command string and makes it possible to, for example, perform measurement setup changes to an inactive format.

The command/query is sent to the active format if you don't use a format identifier.

Developing Code


It is recommended that you set the Test Set's operating environment to debug. To set the Test Set debug mode to "ON" use the following syntax:

```
SYSTem:COMMunicate:GPiB:DEBug ON
```

Units-of-Measure

Amplitude (linear)	V
Frequency	Hz
Power (logarithmic)	dBm
Time	s


ABORt

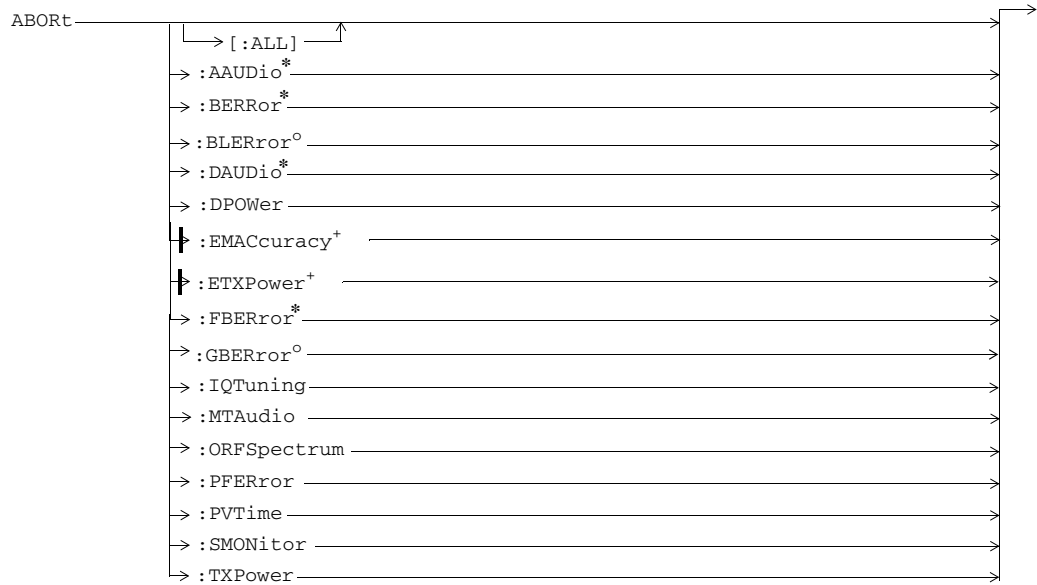


* Not applicable to GPRS.
 ° Not applicable to GSM.
 + Only applicable to EGPRS.

GPIB Syntax for E1968A, E6701C and E6704A




AFGenerator

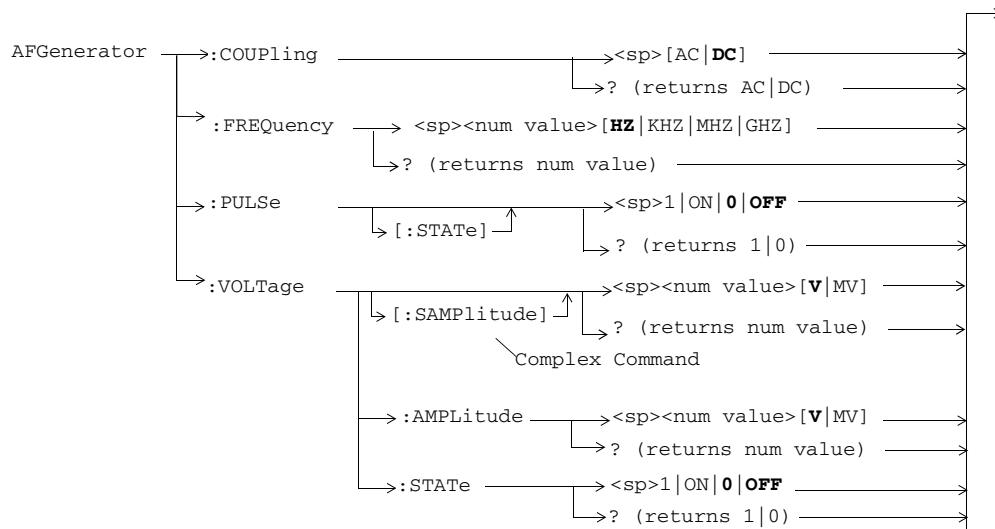

CALibration

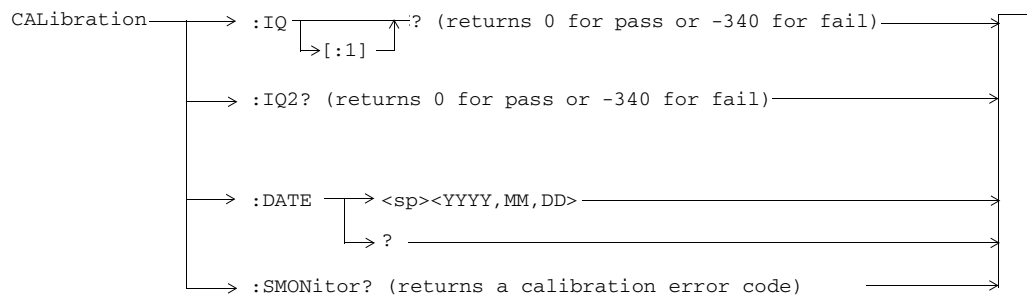


CALCulate:SMONitor

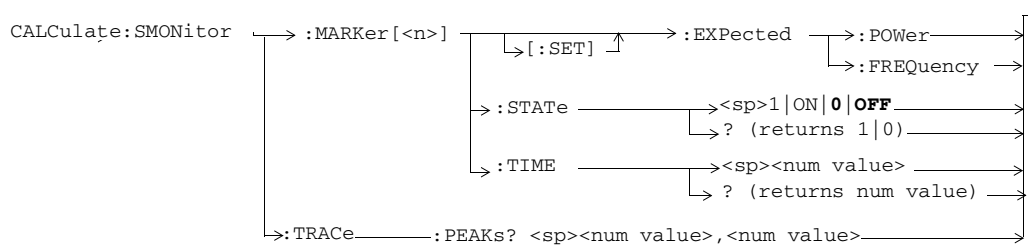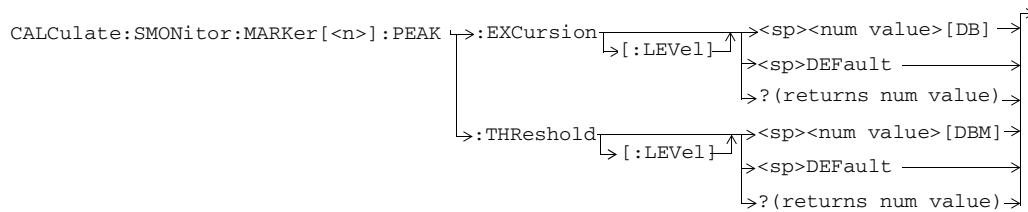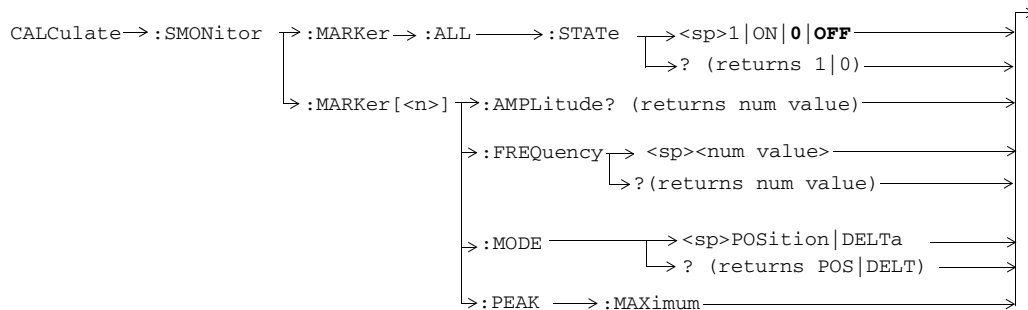


GPiB Syntax for E1968A, E6701C and E6704A

 CALL:ATTached





This diagram is not applicable to GSM.


CALL:BA

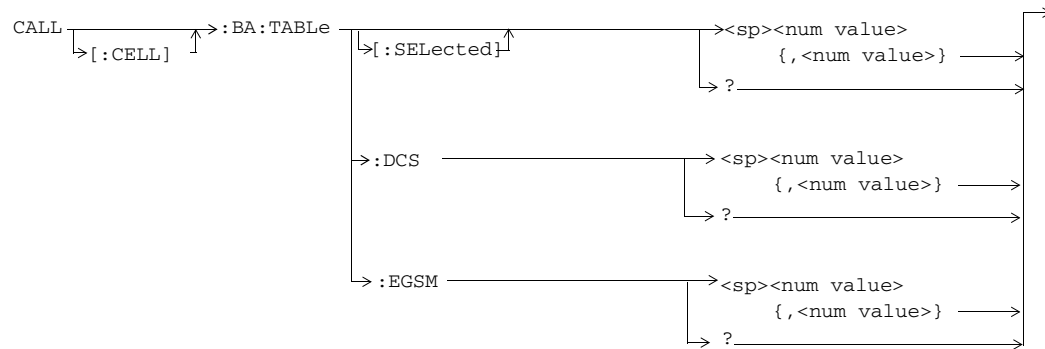


GPB Syntax for E1968A, E6701C and E6704A

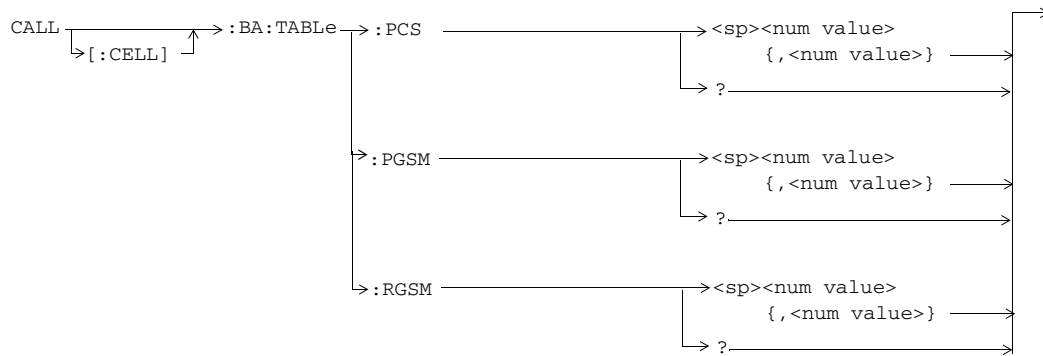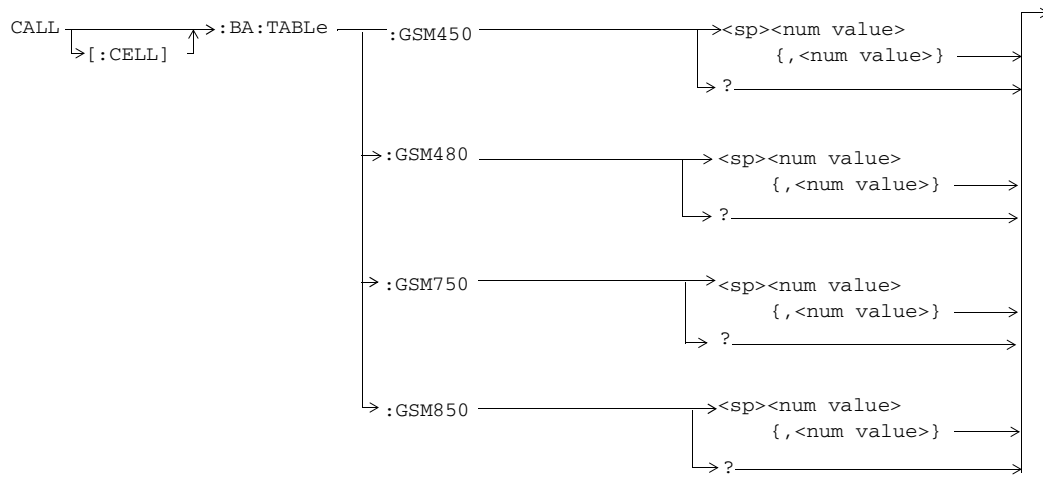


GPIB Syntax for E1968A, E6701C and E6704A

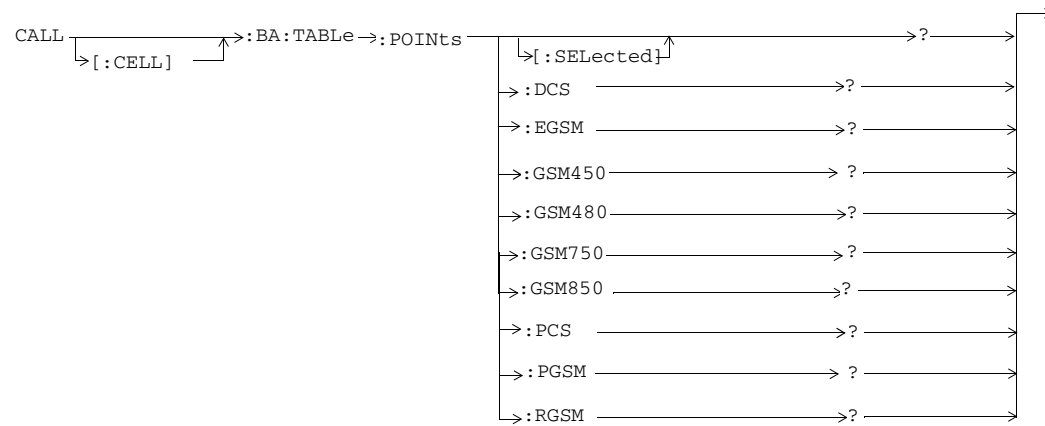


CALL:BAND

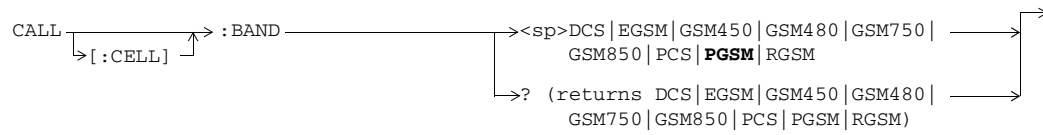

CALL:BCCode

 


CALL:BCCode

 


GPIB Syntax for E1968A, E6701C and E6704A


CALL:BCHannel

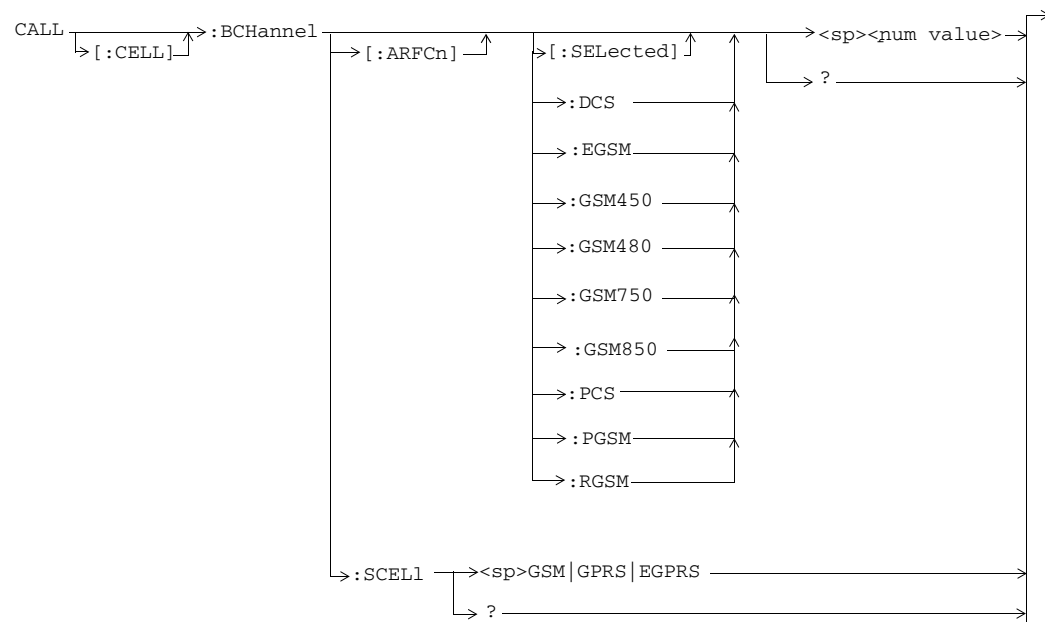

CALL:BURSt

 



CALL:CONNEcted

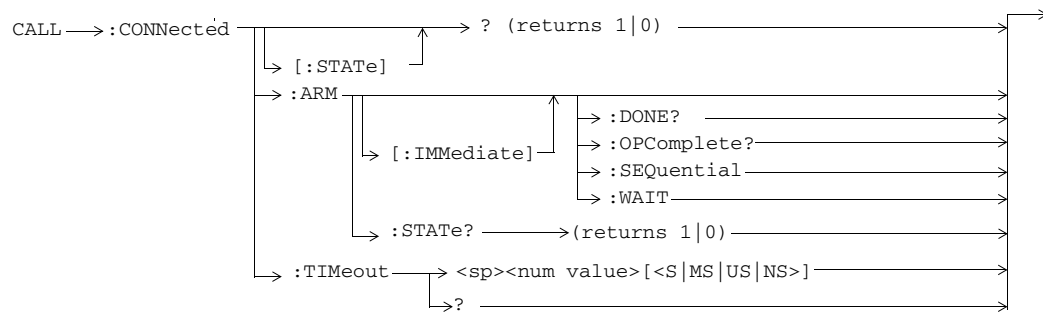


These commands are not applicable to GPRS.

GPIB Syntax for E1968A, E6701C and E6704A

CALL:COUNT

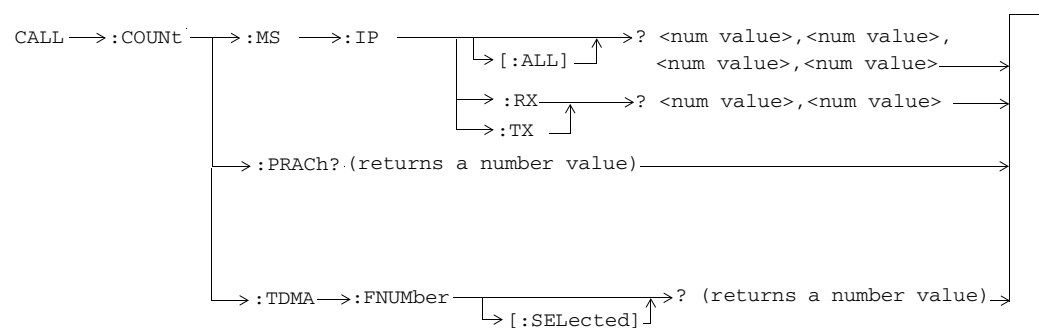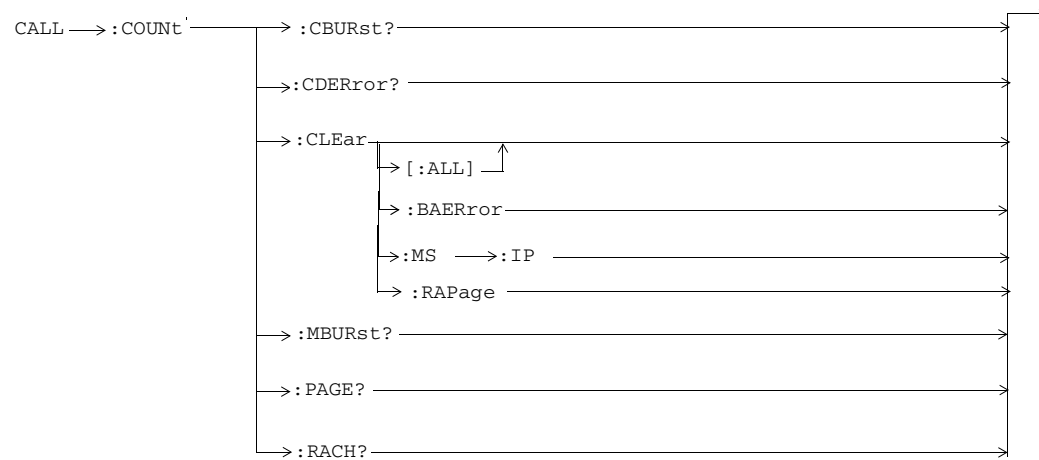


 These commands are only applicable to the GPRS lab application.



GPiB Syntax for E1968A, E6701C and E6704A

CALL:DCONnected

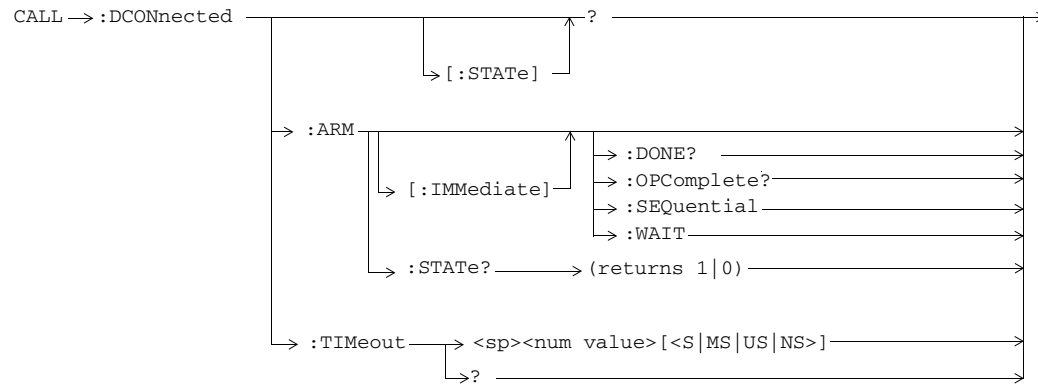

These commands are not applicable to the GSM TA.

CALL:DEModulation

```

CALL---+:DEModulation---:DElay-----<sp><num value>---+
                                     +-----? returns <num value>---+
    
```

These commands are only applicable to the GSM/GPRS and EGPRS lab applications.

 
CALL:END

```


CALL -> :END ->
    
```

This command is not applicable to the GPRS TA.

CALL:FUNCTION




- o Not applicable to GSM TA.
- # Only applicable to EGPRS.

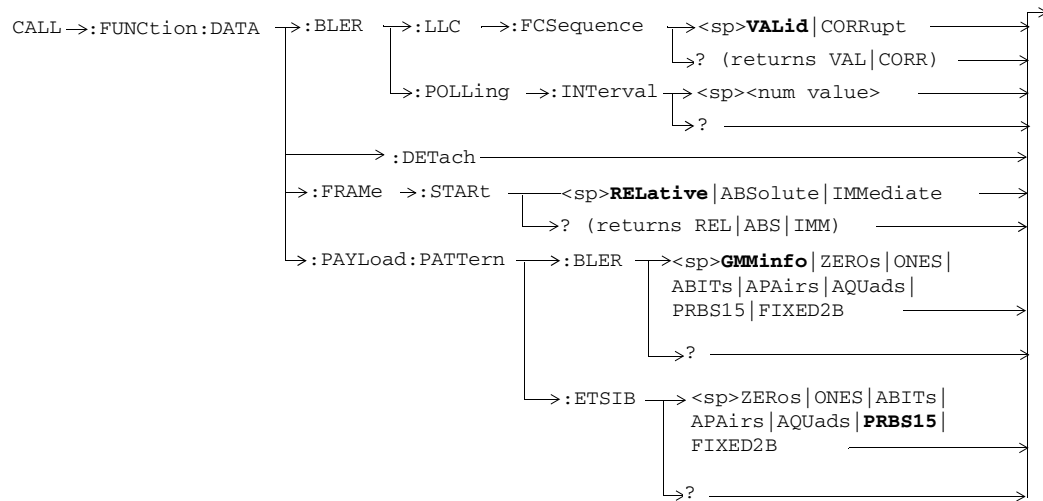


These commands are not applicable to GSM.

GPiB Syntax for E1968A, E6701C and E6704A

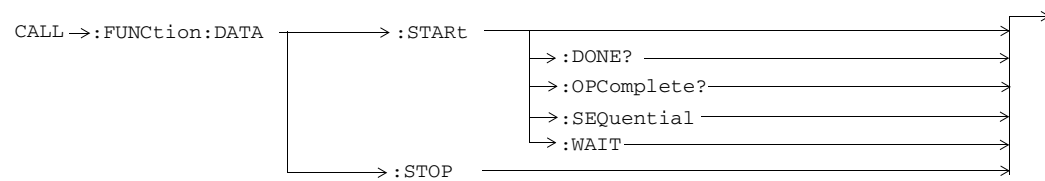

These commands are not applicable to GSM.


CALL:HANDoVer|HANDoFF

 


CALL:IMEI




CALL:LACode

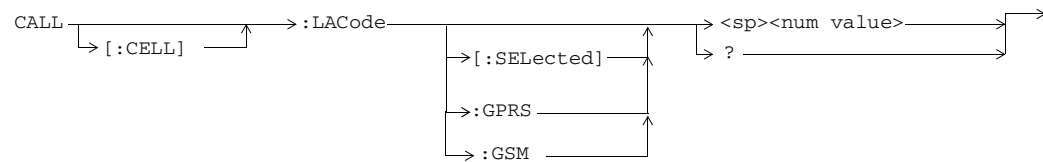

CALL:MCCode

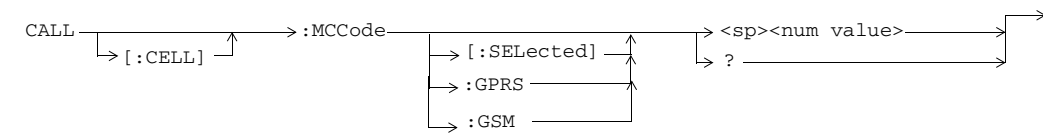

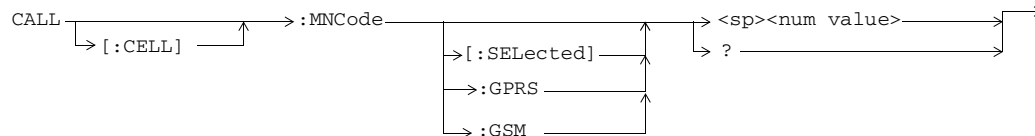CALL:MNCcode[illegible]

24

CALL:MS

CALL → :MS → :CCHannel — :Power:OFFSet:DCS → <sp>0 | 1 | 2 | 3

CALL → :MS → :DTX → **<sp>1|ON|0|OFF** → **[:STATel]** → ? (returns 1|0)

This command is not applicable to the GPRS test application and GPRS and EGPRS lab applications.

```
CALL → :MS → :IP → :ADDRESS → <sp>'<string>' →
```

```

      |
      + ? (returns string) →

```

This command is applicable only to the GSM/GPRS and EGPRS lab applications.


CALL → :MS → :REported → :CLear

This command is not applicable to the GPRS test application.



```
CALL → :MS → :REPORTed → :CVALue → :AVERAge? → (returns num value) →  
                                |  
                                |→ :ILEVel → :TSLot<Timeslot number> → :AVERAge?  
                                |  
                                |→ (returns num value) →
```

These commands apply only to the GSM/GPRS and EGPRS lab applications.


GPIB Syntax for E1968A, E6701C and E6704A

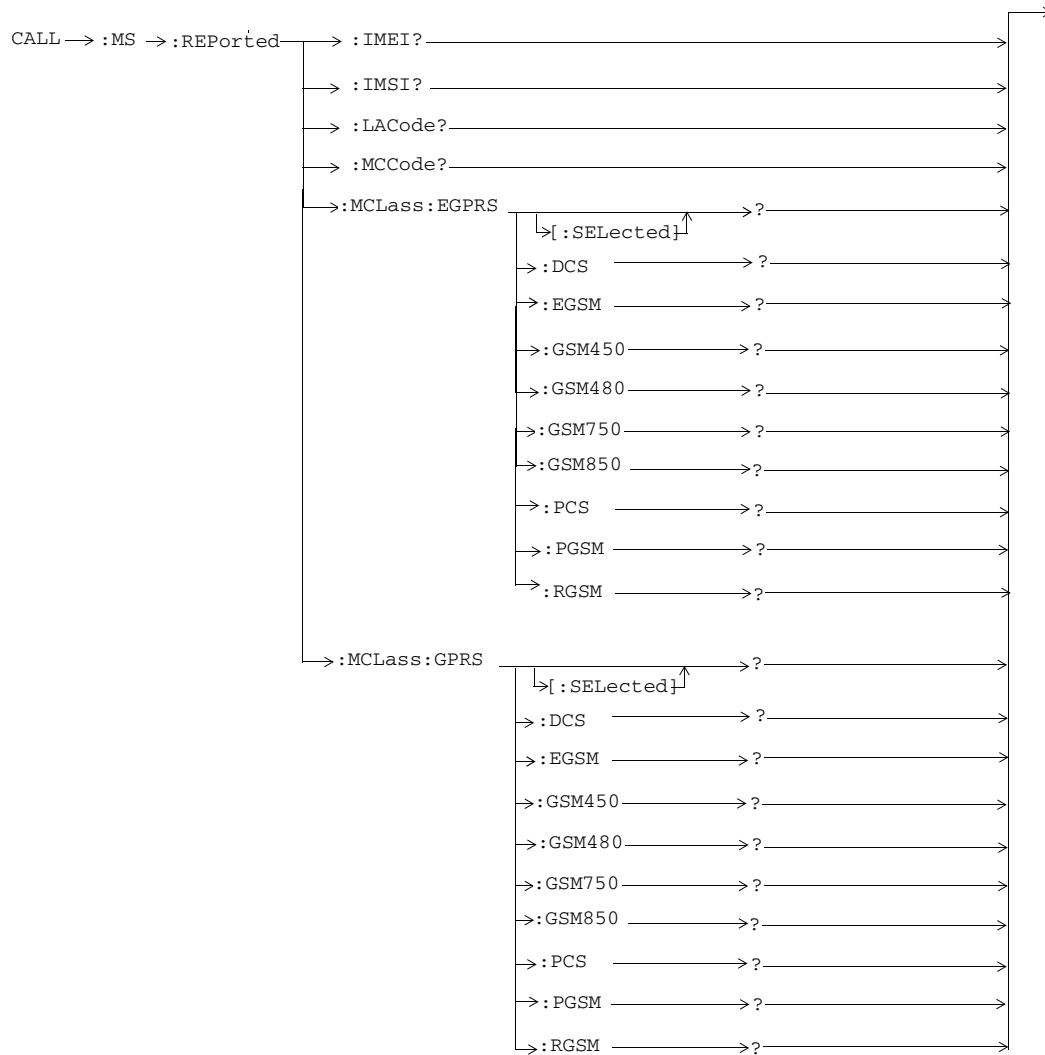

 
 
GPIB Syntax for E1968A, E6701C and E6704A





This command is not applicable to GPRS.

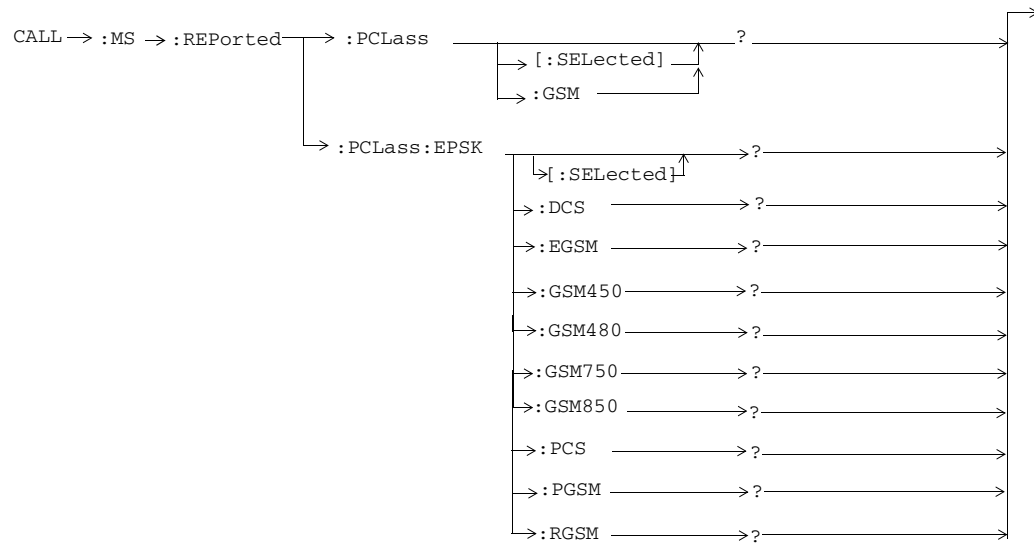

 GPIB Syntax for E1968A, E6701C and E6704A

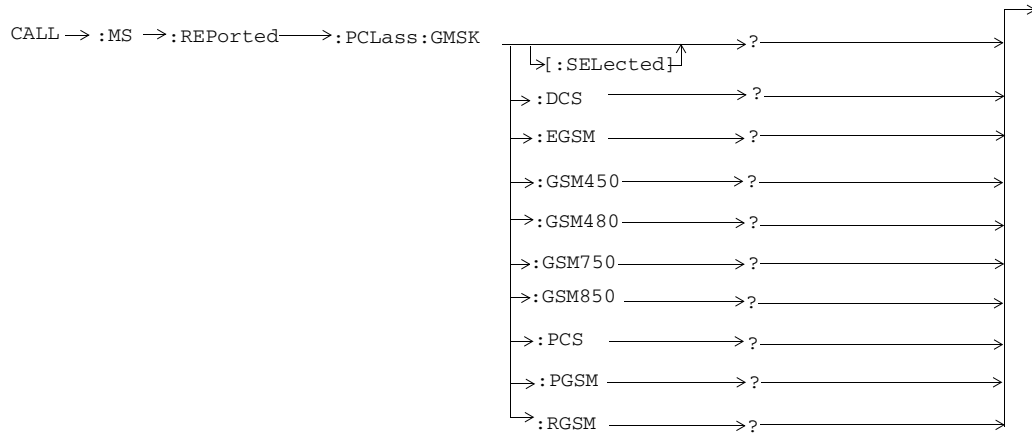


This command is not applicable to GPRS.

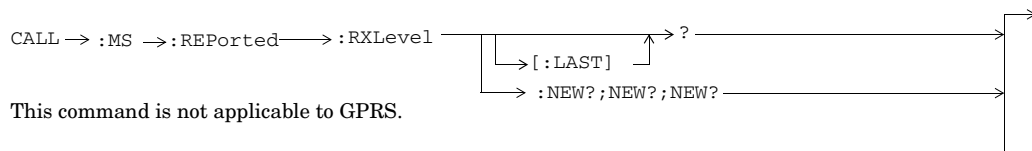 


This command is not applicable to GPRS.

GPIB Syntax for E1968A, E6701C and E6704A



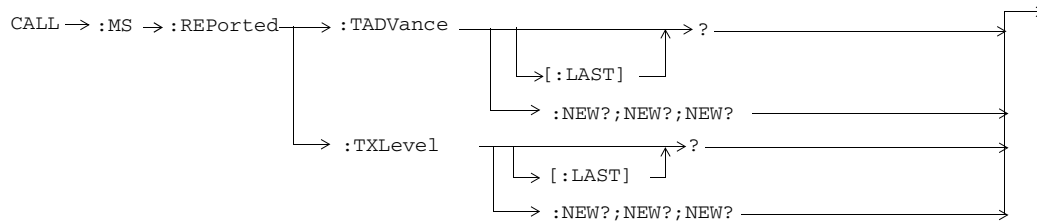


These commands are not applicable to GPRS.

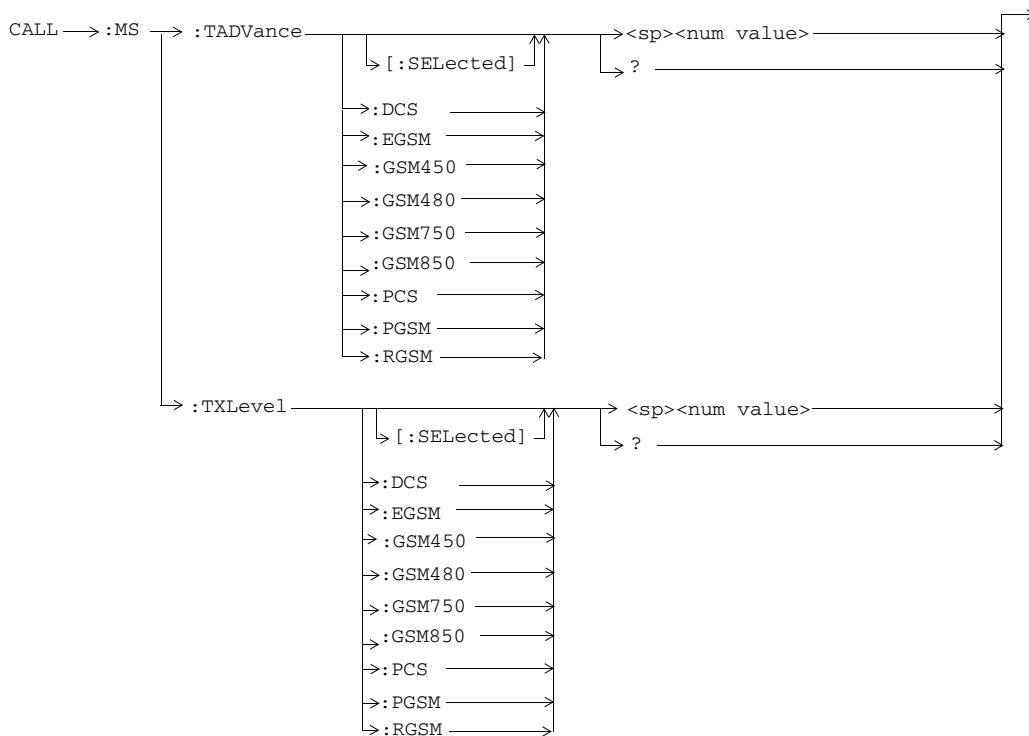


These commands are not applicable to GPRS.

  GPB Syntax for E1968A, E6701C and E6704A

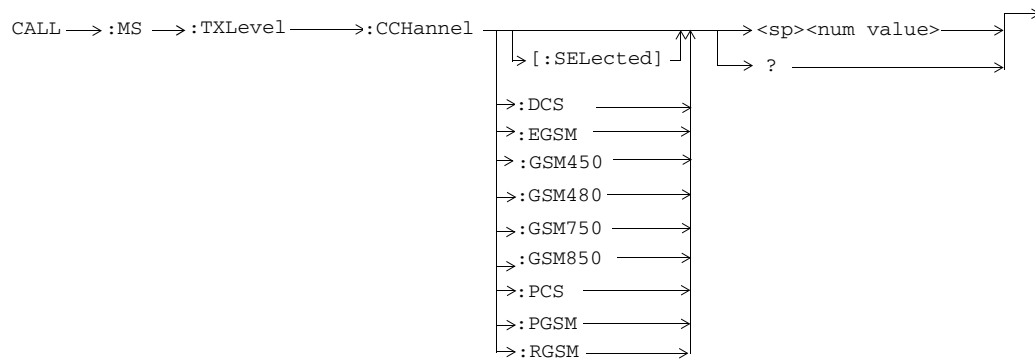


GPiB Syntax for E1968A, E6701C and E6704A

CALL:NCCode

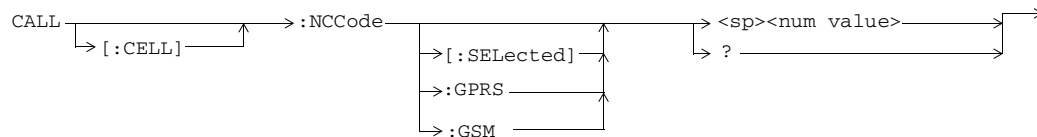


CALL:OPERating

 

Only applicable to EGPRS


o Not applicable to GSM TA

CALL:ORIGinate

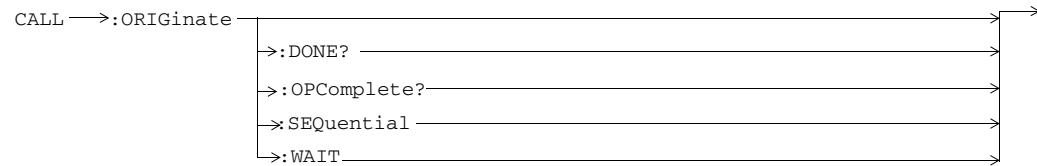


These commands are not applicable to the GPRS TA.

CALL:PAGing

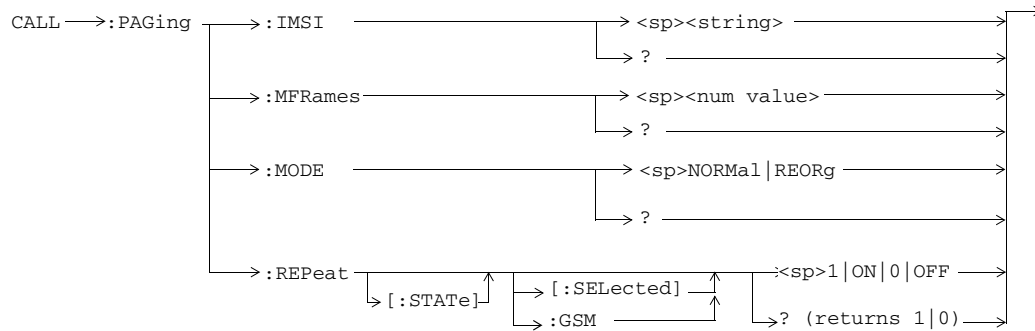


These commands are not applicable to the GPRS TA.

CALL:PBCChannel

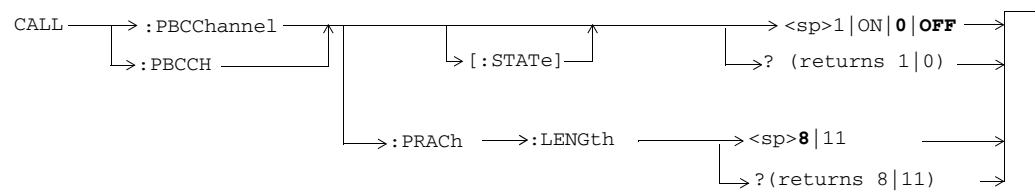

These commands are only applicable to the GSM/GPRS and EGPRS lab applications.

 
CALL:PBPTest




This command is not applicable to GSM.

GPB Syntax for E1968A, E6701C and E6704A


CALL:PDTCH|PDTChannel

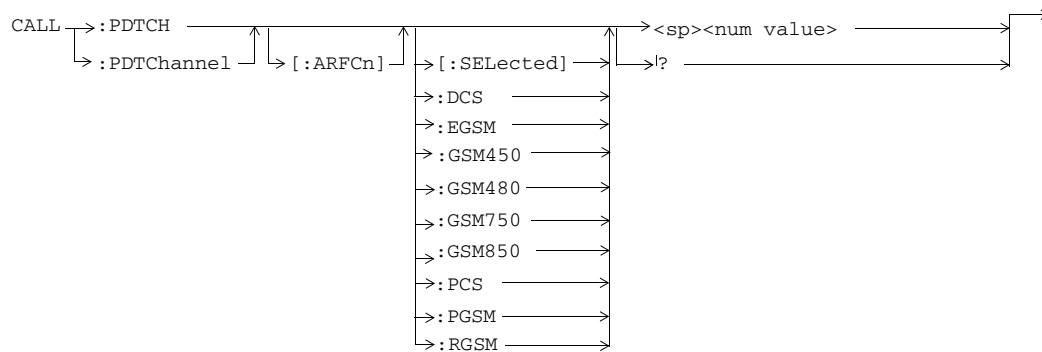

 These commands are not applicable to GSM.




This command is not applicable to GSM.

 


This command is not applicable to GSM or EGPRS.

GPIB Syntax for E1968A, E6701C and E6704A

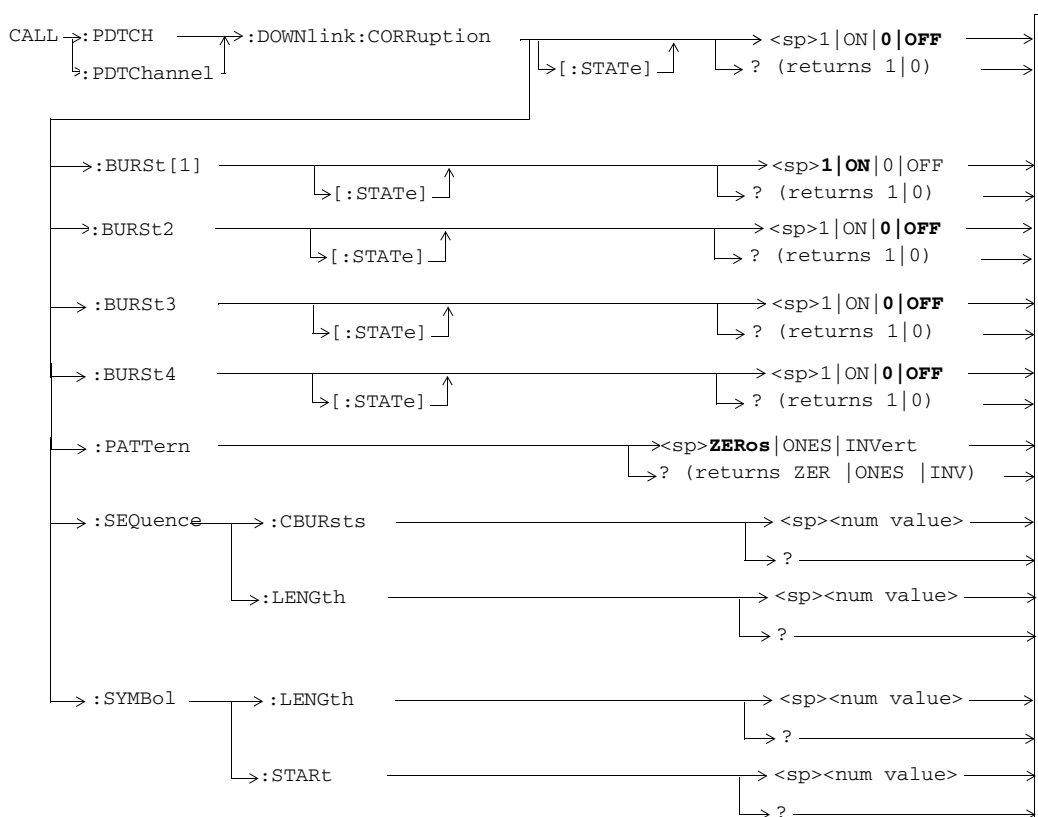


 These commands are applicable only to the EGPRS lab application.




These commands are applicable only to the EGPRS lab application.

GPiB Syntax for E1968A, E6701C and E6704A

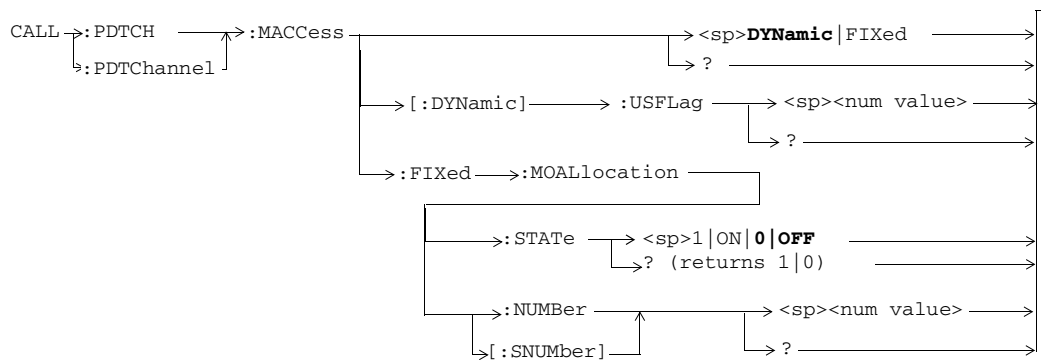


These commands are applicable only to the GSM/GPRS and EGPRS lab applications.

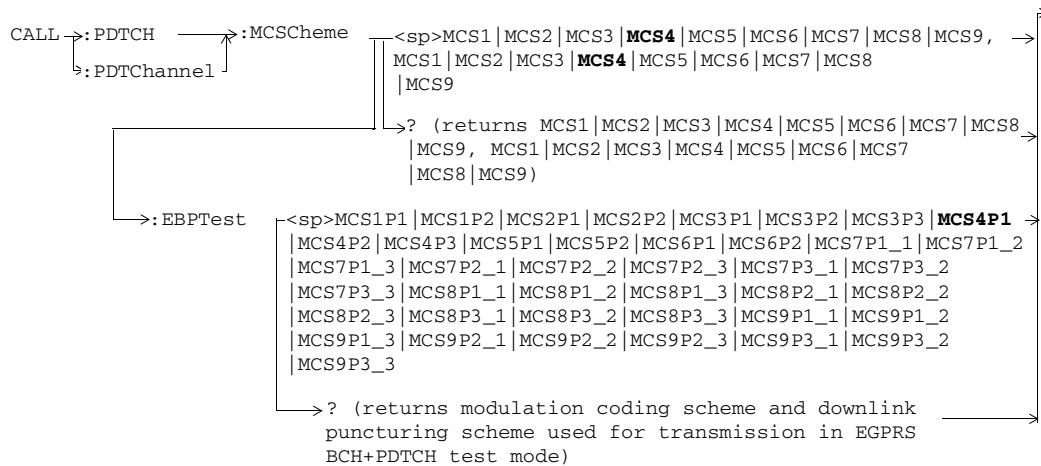


These commands are only applicable to EGPRS.

 GPIB Syntax for E1968A, E6701C and E6704A




These commands are only applicable to the EGPRS lab application.

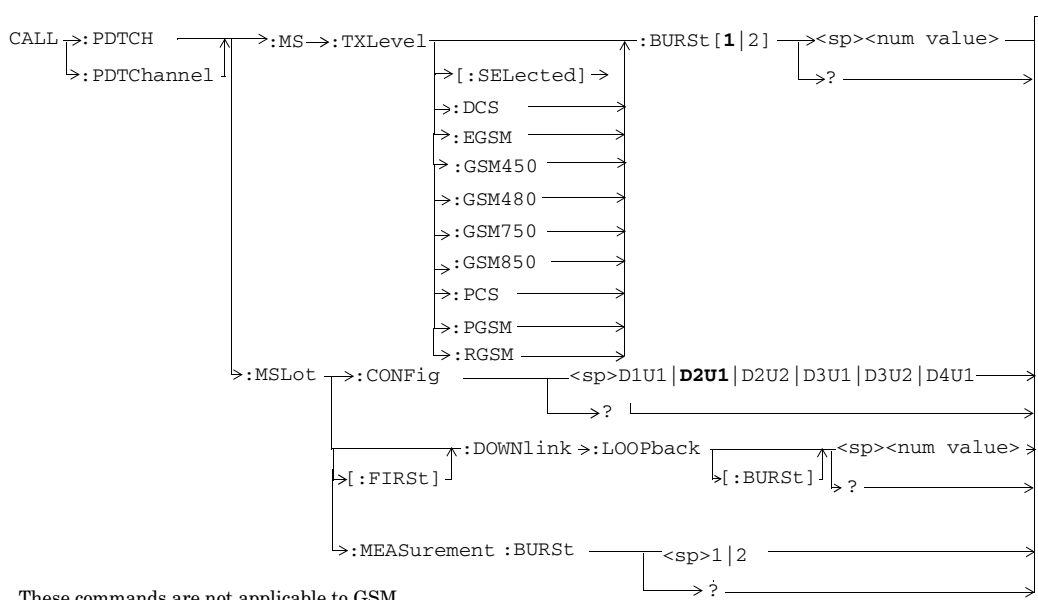


These commands are not applicable to GSM.

GPiB Syntax for E1968A, E6701C and E6704A

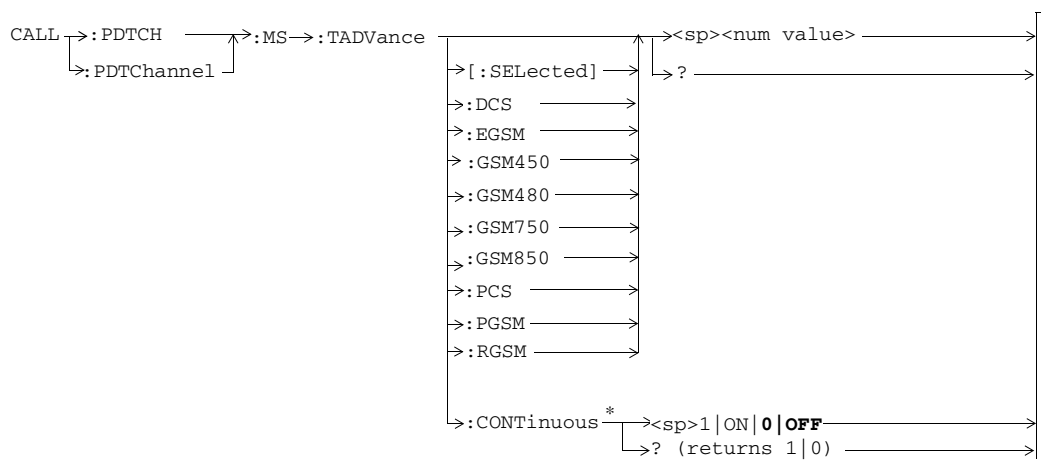


These commands are not applicable to GSM.

*Only applicable to the GSM/GPRS and EGPRS LAs.

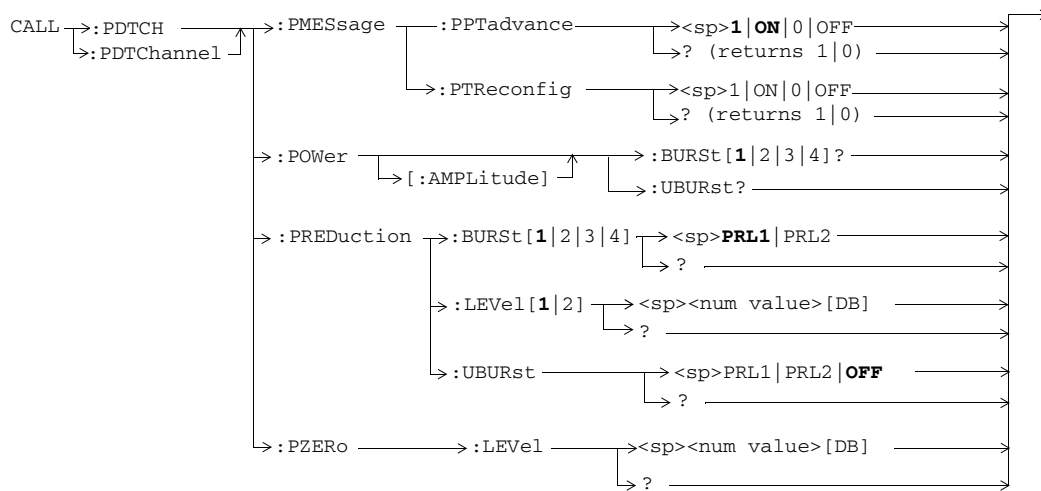


These commands are not applicable to GSM.

GPIB Syntax for E1968A, E6701C and E6704A

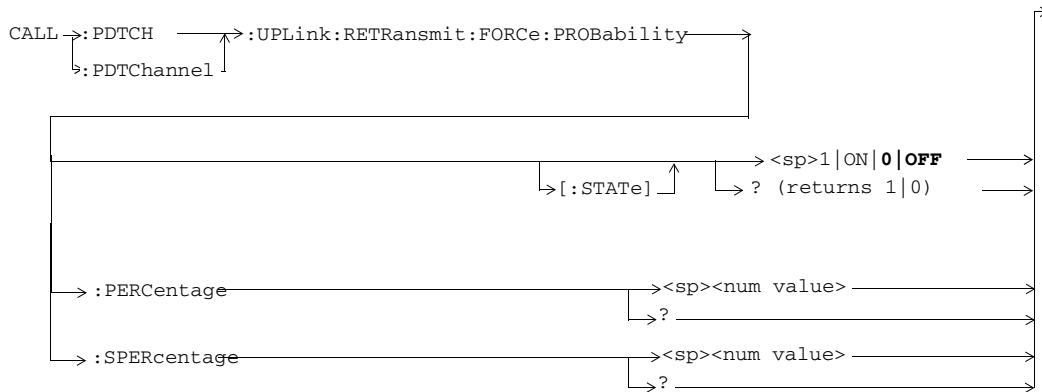

 
These commands are applicable only to the EGPRS lab application.





These commands are only applicable to the lab applications.

GPIB Syntax for E1968A, E6701C and E6704A

CALL:PLOGging

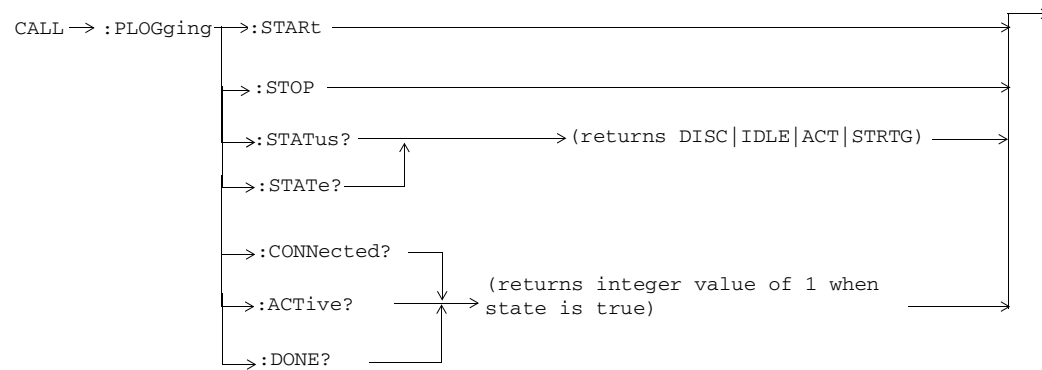


 These commands are only applicable to the GSM/GPRS and EGPRS lab applications.

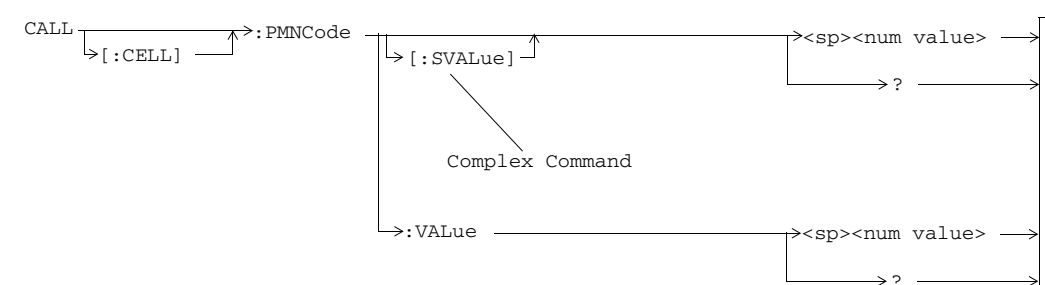
CALL:PMNCode

GPIB Syntax for E1968A, E6701C and E6704A

CALL:POWer

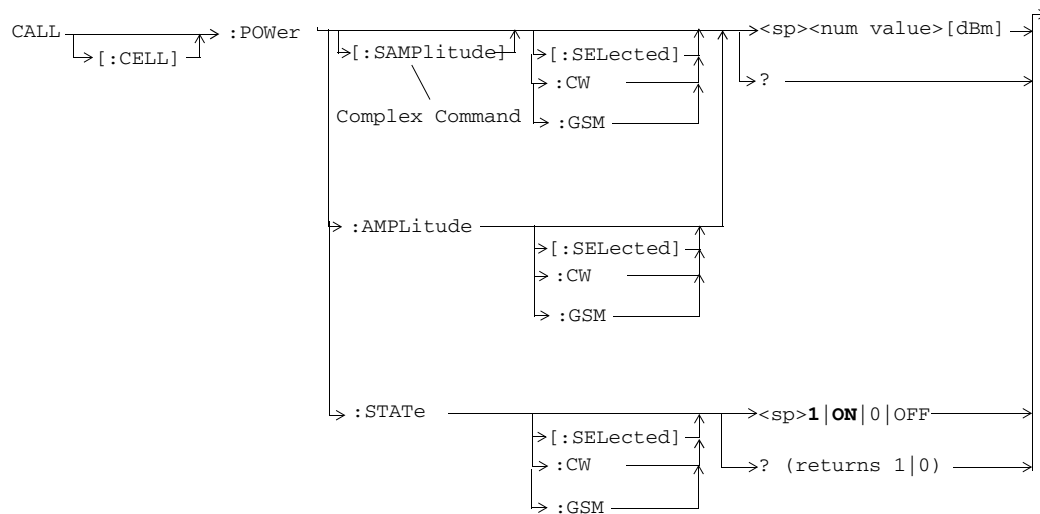

CALL:PPRocedure:ATTach

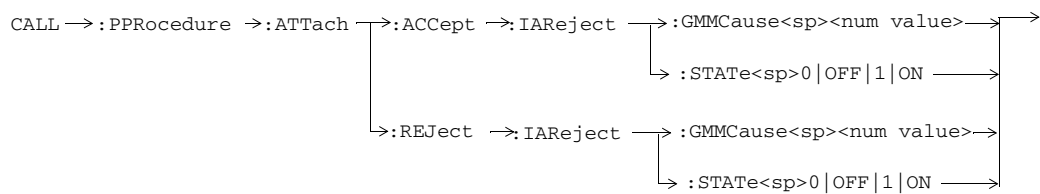

These commands are only applicable to the GSM/GPRS and EGPRS lab applications.

CALL:PPRocedure:DETach

```
CALL---:PPRocedure--+                               +->
      |
+-----+
|
+--:DETach---:REQuest-----+
      |
      +[:IMMediate]+
      |
      +:GMMCause-----+-----<sp><num value>--+
                        +-----? returns <num value>--+
```

These commands are only applicable to the GSM/GPRS and EGPRS lab applications.

CALL:PPRocedure:IDEntity

```
CALL---:PPRocedure--+                               +->
      |
+-----+
|
+--:IDEntity---:REQuest-----+
      |
      +[:IMMediate]+
      |
      +:RESults-----+-----? returns 4x<string>--+
      |
      +:CLEar-----+
      |
      +:TYPE-----+-----<sp>EISV|IMEI|IMSI|TMSI--+
                        +----? returns EISV|IMEI|IMSI|TMSI--+
```

These commands are only applicable to the GSM/GPRS and EGPRS lab applications.

GPiB Syntax for E1968A, E6701C and E6704A

CALL:PPRocedure:PDPContext

```
CALL---:PPRocedure---:PDPContext---:AACcept--+
|
+-----+
|
+---:QOService---:RCLass---+:ENForce-----+-----+-----<sp><num value>--+
|
|                                     +[:SVALue]+ +-? returns <num value>--+
|                                     |
|                                     +:STATe-----+-----<sp>1|ON|0|OFF--+
|                                     |               +-----? returns 1|0--+
|                                     |
|                                     +:VALue-----+-----<sp><num value>--+
|                                     +-? returns <num value>--+
|
|                                     +:SUBScribed--+-----<sp><num value>--+
|                                     +-----? returns <num value>--+
```

These commands are only applicable to the GSM/GPRS and EGPRS lab applications.

```
CALL---:PPRocedure---:PDPContext--+
|
+-----+
|
+---:AREJect---+:SMCause--+-----<sp><num value>--+
|               +-? returns <num value>--+
|
|               +:STATe--+-----<sp>1|ON|0|OFF--+
|               +-----? returns 1|0--+
```

These commands are only applicable to the GSM/GPRS and EGPRS lab applications.

CALL:PPRocedure:PMEasurement:ADATa

```
CALL---:PPRocedure---:PMEasurement--+          +-->
|
+-----+
|
+---:ADATa---+:ACKnowledged-----? returns 1|0--+
|
|          +---? returns EXCL|INCL--+
|
|          +---? returns EXCL|INCL--+
|
+---:MORE-----+-----<sp><num value>--+
|
|          +---? returns <num value>--+
|
|          +---? returns EXCL|INCL--+
|
+---:RADATA-----+-----<sp>EXCLude|INCLude--+
|
|          +---? returns EXCL|INCL--+
|
|          +---? returns EXCL|INCL--+
|
+---:RELease98-----+-----<sp>EXCLude|INCLude--+
|
|          +---? returns EXCL|INCL--+
|
+---:SEND-----+
|
```

These commands are only applicable to the GSM/GPRS and EGPRS lab applications.

CALL:PPRocedure:PMEasurement:MPRequest

```
CALL---:PPRocedure---:PMEasurement---:MPRequest---:MADATA---+          +-->
|
+-----+
|
+---+-----+-----<sp>EXCLude|INCLude--+
|
|          +---? returns EXCL|INCL--+
|
```

These commands are only applicable to the GSM/GPRS and EGPRS lab applications.

GPIB Syntax for E1968A, E6701C and E6704A

```

CALL---:PPRocedure---:PMEasurement---:MPRequest---:MADData---+
|
+-----+
|
+--+:BTS<n>---+:BCHCarrier---+-----<sp><num value>---+
|                                     +-----? returns <num value>---+
|                                     |
+--:BSICode-----+-----<sp><num value>---+
|                                     +-----? returns <num value>---+
|                                     |
+--:CASSistance---+-----<sp>EXCLUDE|INCLUDE---+
|                                     +-----? returns EXCL|INCL---+
|                                     +:FRTDiff-----+-----<sp><num value>---+
|                                     |                                     +-----? returns <num value>---+
|                                     |                                     |
|                                     +:RALTitude---+-----<sp>EXCLUDE|INCLUDE---+
|                                     |                                     +-----? returns EXCL|INCL---+
|                                     |                                     +:VALue---+-----<sp><num value>---+
|                                     |                                     +-? returns <num value>---+
|                                     |
|                                     +:REASt-----+-----<sp><num value>---+
|                                     |                                     +-----? returns <num value>---+
|                                     |
|                                     +:RNORth-----+-----<sp><num value>---+
|                                     |                                     +-----? returns <num value>---+
|                                     |
+--:MOFFset-----+-----<sp><num value>---+
|                                     +-----? returns <num value>---+

```

These commands are only applicable to the GSM/GPRS and EGPRS lab applications.

GPIB Syntax for E1968A, E6701C and E6704A

```
CALL---:PPRocedure---:PMEasurement---:MPRequest---:MADat---+      +-->
                                     |                          |
+-----+-----+-----+-----+-----+-----+-----+-----+
|
+--+:BTS-----+:NUMBER-----+-----<sp><num value>--+
                                     +-----? returns <num value>--+
```

These commands are only applicable to the GSM/GPRS and EGPRS lab applications.

```
CALL---:PPRocedure---:PMEasurement---:MPRequest---:MADat---+      +-->
                                     |                          |
+-----+-----+-----+-----+-----+-----+-----+-----+
|
+--+:BTS<n>---+:RRTDiff-----+-----<sp><num value>--+
                                     |                          |
                                     +-----? returns <num value>--+
                                     |
                                     +:TSSScheme-----+-----<sp><num value>--+
                                     +-----? returns <num value>--+
```

These commands are only applicable to the GSM/GPRS and EGPRS lab applications.

GPIB Syntax for E1968A, E6701C and E6704A

```

CALL---:PPRocedure---:PMEasurement---:MPRequest--+          +-->
|
+-----+
|
+---:PINstruction---+:ACCuracy---+-----<sp>EXCLude| INCLude--+
|                                     +-----? returns EXCL| INCL--+
|                                     +:VALue---+-----<sp><num value>--+
|                                     +-? returns <num value>--+
|
+---:ECharacter---+-----<sp>EXCLude| INCLude--+
|                                     +-----? returns EXCL| INCL--+
|                                     +:VALue---+-----<sp><num value>--+
|                                     +-? returns <num value>--+
|
+---:MSETs-----+-----<sp><num value>--+
|               +-----? returns <num value>--+
|
+---:MTYPE-----+-----<sp><num value>--+
|               +-----? returns <num value>--+
|
+---:RTIME-----+-----<sp><num value>--+
|               +-----? returns <num value>--+

```

These commands are only applicable to the GSM/GPRS and EGPRS lab applications.

GPiB Syntax for E1968A, E6701C and E6704A

```

CALL---:PPRocedure---:PMEasurement---:MPRequest--+
|
+-----+
|
+---:RAData--+-----<sp>EXCLude|INCLude--+
|
+-----? returns EXCL|INCL--+
+---:BTSPosition--+-----<sp>EXCLude|INCLude--+
|
+-----? returns EXCL|INCL--+
+---:ALTitude--+-----<sp><num value>--+
|
+-----? returns <num value>--+
|
+---:DIRection--+-----<sp>ABOVe|BELow--+
|
+-----? returns ABOV|BEL--+
|
+---:LATitude---:DEGREes---+-----<sp><num value>--+
|
|
+---? returns <num value>--+
|
|
+---:SIGN-----+-----<sp>NORT|SOUT--+
|
+-----? returns NORT|SOUT--+
|
+---:LONGitude---:DEGREes---+-----<sp><num value>--+
|
+---? returns <num value>--+
|
+---:TYPE-----+-----<sp>EPALtitude|EPOint--+
|
+-----? returns EPAL|EPO--+

```

These commands are only applicable to the GSM/GPRS and EGPRS lab applications.

GPiB Syntax for E1968A, E6701C and E6704A

```

CALL---:PPRocedure---:PMEasurement---:MPRequest--+          +-->
|
+-----+
|
+--+:RELease98--+-----<sp>EXCLude|INCLude--+
|          +-----? returns EXCL|INCL--+
|          +:BTS[1-8]---:EOTDiff--+-----<sp><num value>--+
|          +-----? returns <num value>--+
|          +:UNCertainty--+-----<sp><num value>--+
|          +-? returns <num value>--+
|
+ :SEND-----+

```

These commands are only applicable to the GSM/GPRS and EGPRS lab applications.

CALL:PPRocedure:PMEasurement:PERRor

```
CALL---:PPRocedure---:PMEasurement--+    +->
                                     |    |
+-----+
|
+--:PERRor--+CODE-----<sp><num value>--+
          |           +-? returns <num value>--+
          |
          +:SEND-----+
```

These commands are only applicable to the GSM/GPRS and EGPRS lab applications.

CALL:PPRocedure:PMEasurement:PRESpOnse:AVAILable?

```
CALL---:PPRocedure---:PMEasurement---:PRESpOnse--+    +->
                                     |    |
+-----+
|
+--:AVAILable-----? returns 1|0--+
```

These commands are only applicable to the GSM/GPRS and EGPRS lab applications.

CALL:PPRocedure:PMEasurement:PRESpOnse:LIERror

```
CALL---:PPRocedure---:PMEasurement---:PRESpOnse--+    +->
                                     |    |
+-----+
|
+--:LIERror-----+:INCLuded-----? returns 1|0--+
          +:REASon-----? returns <num value>--+
```

These commands are only applicable to the GSM/GPRS and EGPRS lab applications.

GPiB Syntax for E1968A, E6701C and E6704A

CALL:PPRocedure:PMEasurement:PREsponse:LINformation

```
CALL---:PPRocedure---:PMEasurement---:PREsponse---+>
|
+-----+
|
+---:LINformation---:FTYPE-----? returns <num value>---+
|
|   +:INCLuded-----? returns 1|0---+
|   +:PEStimate---:ALTitude-----? returns <num value>---+
|   |               |               +:DIRection-----? returns <num value>---+
|   |               |               +:UNCertainty---? returns <num value>---+
|   |               |               |
|   |               +:CONFidence-----? returns <num value>---+
|   |               +:LATitude---:DEGREes-----? returns <num value>---+
|   |               |               +:SIGN-----? returns <num value>---+
|   |               |               |
|   |               +:LONGitude---:DEGREes-----? returns <num value>---+
|   |               +:MAJor-----:ORientation---? returns <num value>---+
|   |               +:SMAJor-----:UNCertainty---? returns <num value>---+
|   |               +:SMINor-----:UNCertainty---? returns <num value>---+
|   |               +:TYPe-----? returns <num value>---+
|   |               +:UCODE-----? returns <num value>---+
|   |               |
|   +:RFRame-----? returns <num value>---+
```

These commands are only applicable to the GSM/GPRS and EGPRS lab applications.

CALL:PPRocedure:PMEasurement:PREsponse:MINformation

```
CALL---:PPRocedure---:PMEasurement---:PREsponse---:MINformation---+>
|
+-----+
|
+---:INCLuded-----? returns 1|0---+
```

These commands are only applicable to the GSM/GPRS and EGPRS lab applications.

GPIB Syntax for E1968A, E6701C and E6704A

```

CALL---:PPRocedure---:PMEasurement---:PRESponse---:MINformation--+
|
+-----+
|
+---:SET[1-3]---+:BTS-----+:BSICode-----? returns 10x<num value>--+
|
|           +:CARRier-----? returns 10x<num value>--+
|           +:CIDentity-----? returns 10x<num value>--+
|           +:CITYpe-----? returns 10x<num value>--+
|           +:LACode-----? returns 10x<num value>--+
|           +:MEASurements---+:NUMBer-----? returns 10x<num value>--+
|           |           +:SDEVIation---? returns 10x<num value>--+
|           |
|           +:MOFFset-----? returns 10x<num value>--+
|           +:NIPResent-----? returns 10x<num value>--+
|           +:NUMBer-----? returns <num value>--+
|           +:OTDifference-----? returns 10x<num value>--+
|           +:RINDEX-----? returns 10x<num value>--+
|           +:SIINDEX-----? returns 10x<num value>--+
|           +:TSLot-----? returns 10x<num value>--+
|
|           +:FNuMber-----? returns <num value>--+
+:+:MREference---+:INCLuded-----? returns 1|0--+
|           +:NUMBer-----? returns <num value>--+
|           +:QUALity-----? returns <num value>--+
|
|           +:SRESolution-----? returns <num value>--+
+:+:TACorrection--+-----? returns <num value>--+
|           +:INCLuded-----? returns 1|0--+
|
|           +:TSLot-----? returns <num value>--+


```

These commands are only applicable to the GSM/GPRS and EGPRS lab applications.


CALL:PPRocedure:PMEasurement:PRESpense:MSETs

These commands are only applicable to the GSM/GPRS and EGPRS lab applications.

```
CALL---:PPRocedure---:PMEasurement---:PRESponse---+>
|
+-----+
|
+++:RIDentity---+:BSICode-----? returns 3x<num value>--+
+++:CARRier-----? returns 3x<num value>--+
+++:CIDentity-----? returns 3x<num value>--+
+++:CITYpe-----? returns 3x<num value>--+
+++:INCLuded-----? returns 1|0--+
+++:LACode-----? returns 3x<num value>--+
+++:RINdex-----? returns 3x<num value>--+
+++:SIINdex-----? returns 3x<num value>--+
```

 
CALL:RACode

 CALL:RFGenerator




GPB Syntax for E1968A, E6701C and E6704A

CALL:SETup

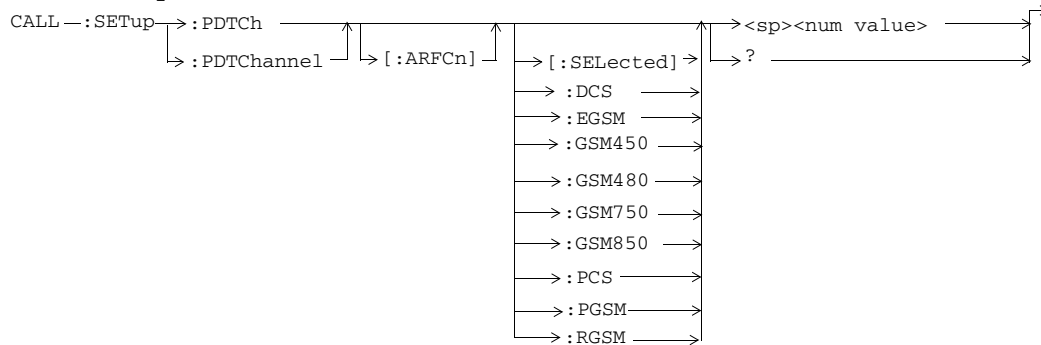



These commands are not applicable to GSM.

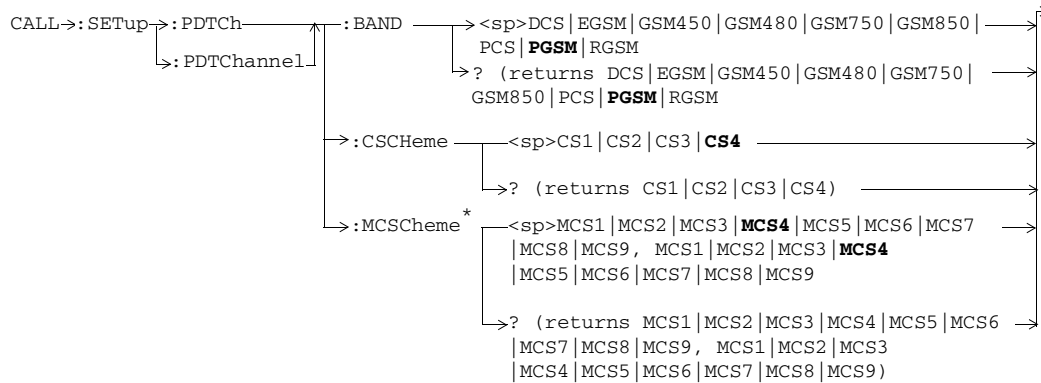

These commands are not applicable to GSM.

* This command is only applicable to the EGPRS lab application

 
GPIB Syntax for E1968A, E6701C and E6704A

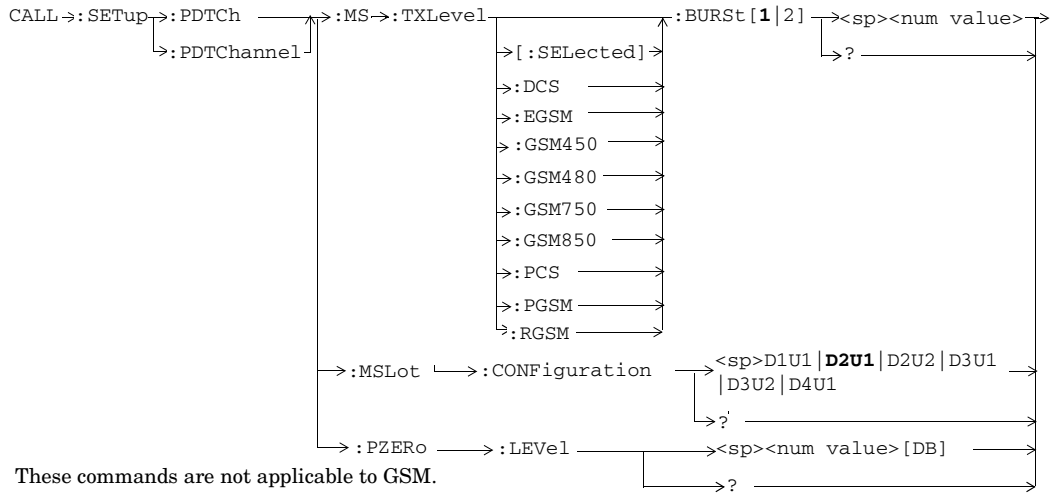


```

sequenceDiagram
    participant CALL as CALL
    participant TCH as TCH
    participant TChannel as TChannel
    participant ARFCn as [ :ARFCn ]
    participant SSelected as [ :SElected ]
    participant DCS as :DCS
    participant EGSM as :EGSM
    participant GSM450 as :GSM450
    participant GSM480 as :GSM480
    participant GSM750 as :GSM750
    participant GSM850 as :GSM850
    participant PCS as :PCS
    participant PGSM as :PGSM
    participant RGSM as :RGSM
    participant Sp as <sp><num value>
    participant Q as ?


    CALL->>TCH: :SETup
    TCH->>TChannel: 
    TChannel->>ARFCn: 
    ARFCn->>SSelected: 
    SSelected->>Q: 
    Q->>Sp: 
    Sp->>DCS: 
    DCS->>EGSM: 
    EGSM->>GSM450: 
    GSM450->>GSM480: 
    GSM480->>GSM750: 
    GSM750->>GSM850: 
    GSM850->>PCS: 
    PCS->>PGSM: 
    PGSM->>RGSM: 
    RGSM->>Q: 
    Q->>Sp: 
    Sp->>Q: 
    Q->>Q: 
    
```

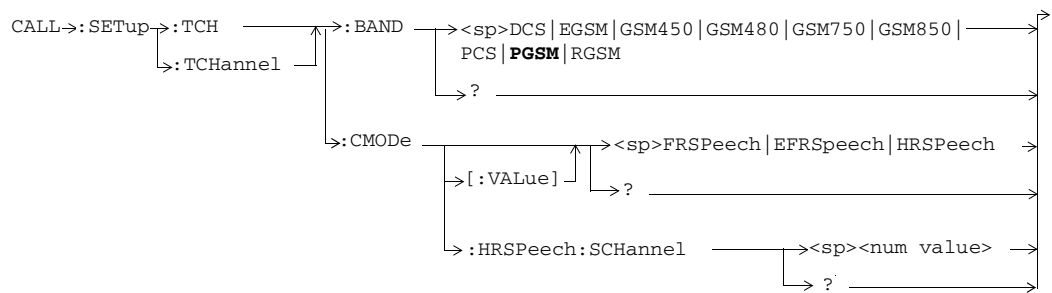

GPB Syntax for E1968A, E6701C and E6704A

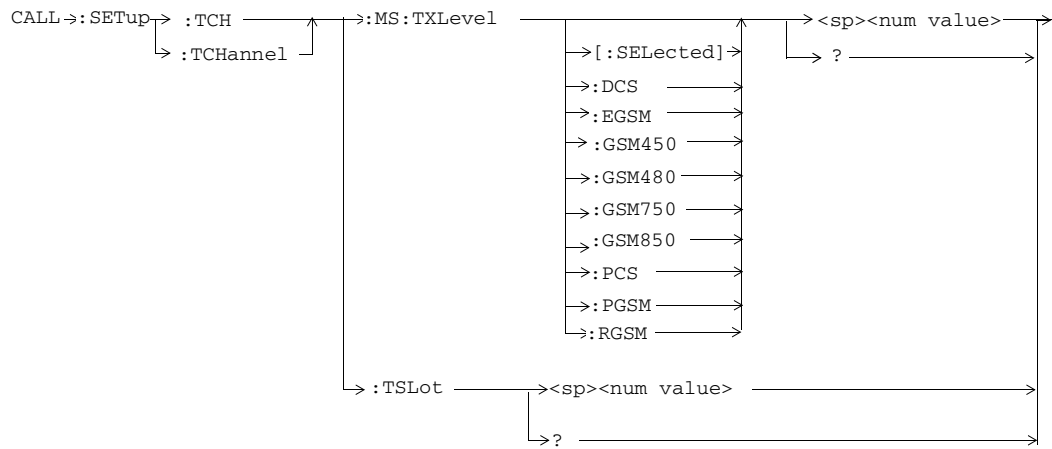


CALL:SIGNaling

 

This command is not applicable to GPRS.


GPIB Syntax for E1968A, E6701C and E6704A

CALL:SMSERVICE

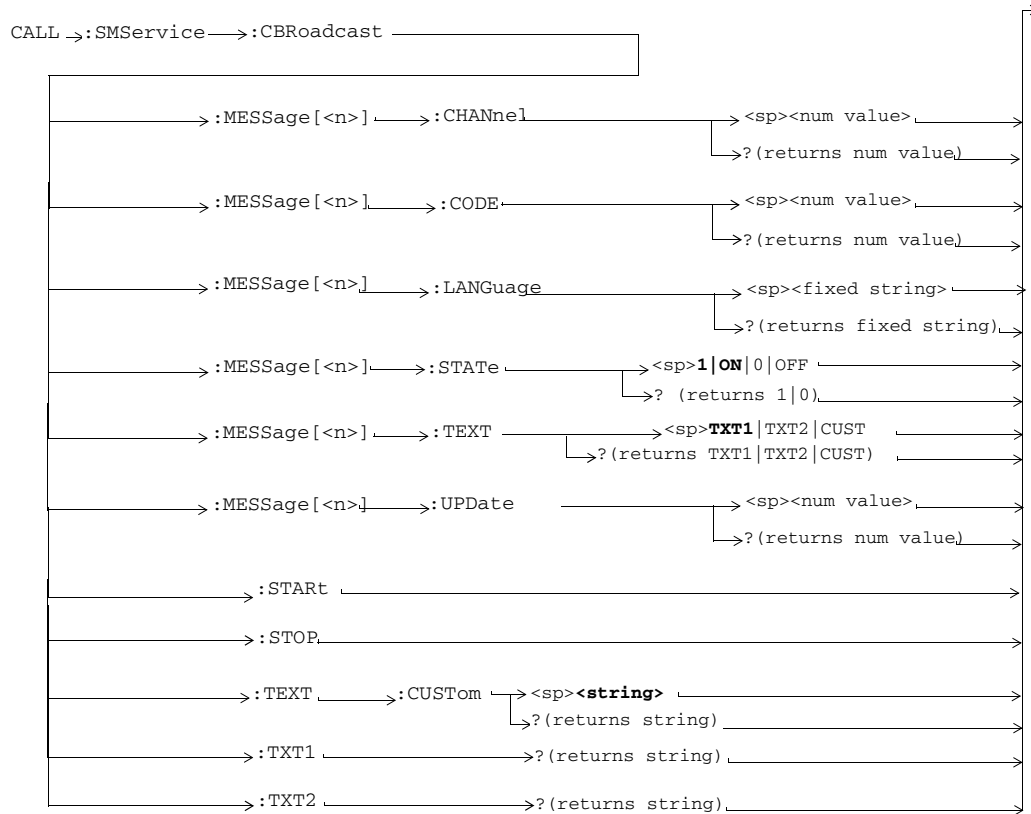


These commands are only applicable to the GSM/GPRS and EGPRS lab applications.

GPiB Syntax for E1968A, E6701C and E6704A

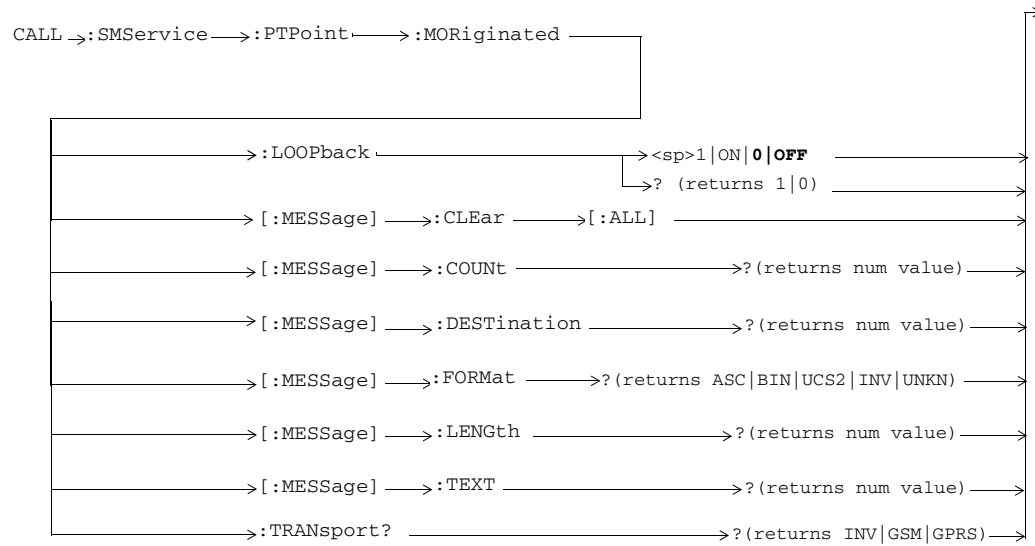


These commands are only applicable to the GSM/GPRS and EGPRS lab applications.

GPIB Syntax for E1968A, E6701C and E6704A

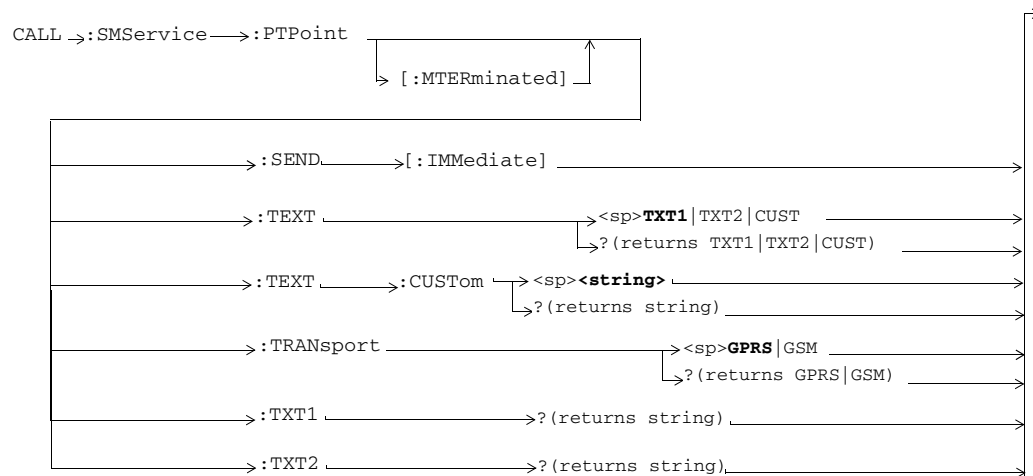


These commands are only applicable to the GSM/GPRS and EGPRS lab applications.

 
CALL:STATus



These commands are not applicable to GPRS.

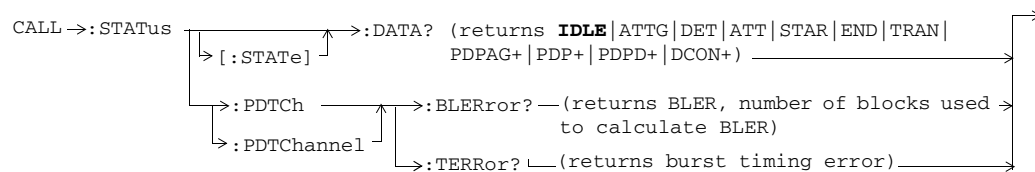

 
These commands are not applicable to GSM.
+Only applicable to the GSM/GPRS and EGPRS LAs.




This command is applicable only to the GSM/GPRS and EGPRS lab applications.

GPiB Syntax for E1968A, E6701C and E6704A

 
CALL:TCHannel



These commands are not applicable to GPRS.



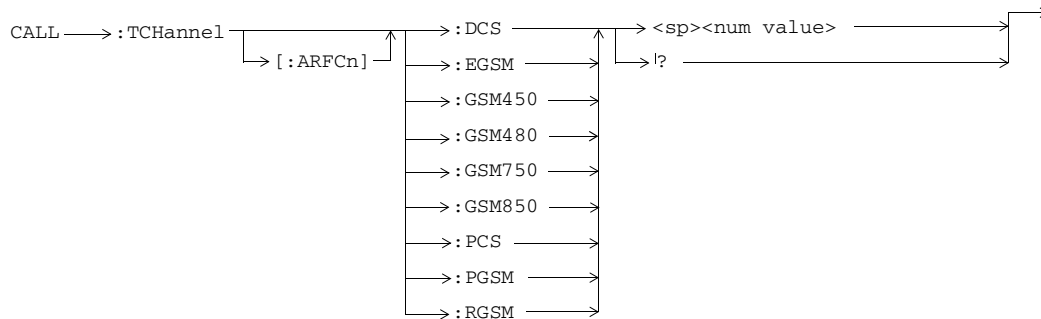


These commands are not applicable to GPRS.

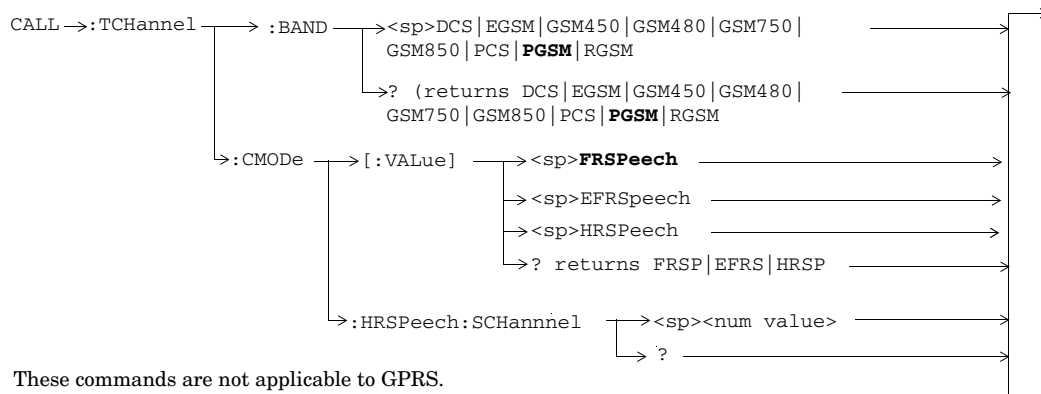

These commands are not applicable to GPRS.

 GPIB Syntax for E1968A, E6701C and E6704A

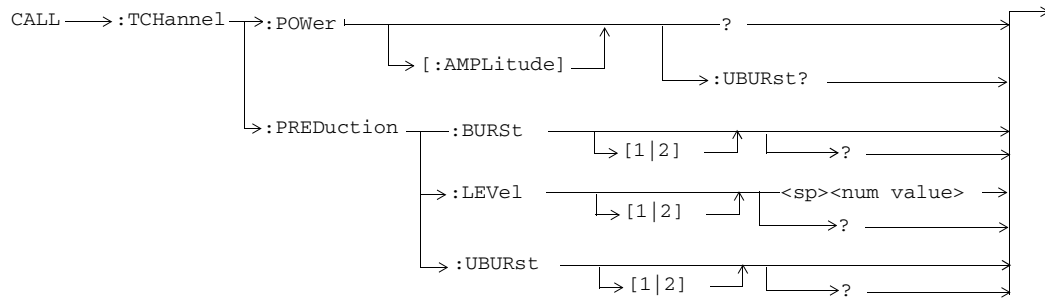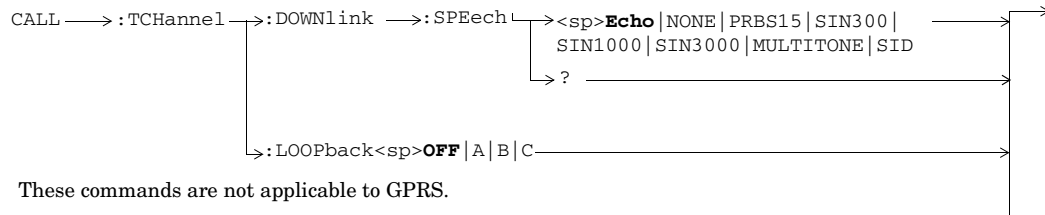

These commands are not applicable to GPRS.

GPiB Syntax for E1968A, E6701C and E6704A

CALL:TRANsferring

CALL → :TRANsferring → ? (returns 1|0) →

↳ [:STATe]

This command is not applicable to GSM.

CALL:TRIGger

CALL → :TRIGger → [:ALL] → :STATe → :OFF →

↳ [:OUTPut]

This command is only applicable to the GSM/GPRS and EGPRS lab applications.

CALL → :TRIGger → [:OUTPut]


→ :FRAMe → :STATe → <sp>1|ON|**0**|OFF → ? (returns 1|0) →

→ :NIDLe → :STATe → <sp>1|ON|**0**|OFF → ? (returns 1|0) →


→ :TSlot → <sp><num value> → ? (returns num value) →

→ :SYMBol → <sp><num value> → ? (returns num value) →

GPIB Syntax for E1968A, E6701C and E6704A

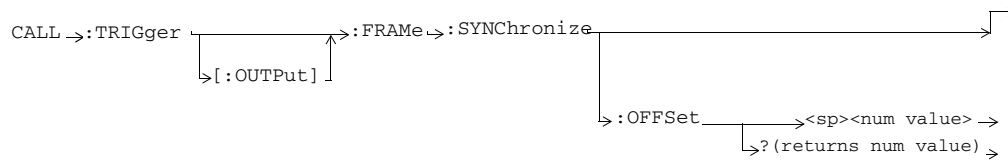


These commands are only applicable to the GSM/GPRS and EGPRS lab applications.

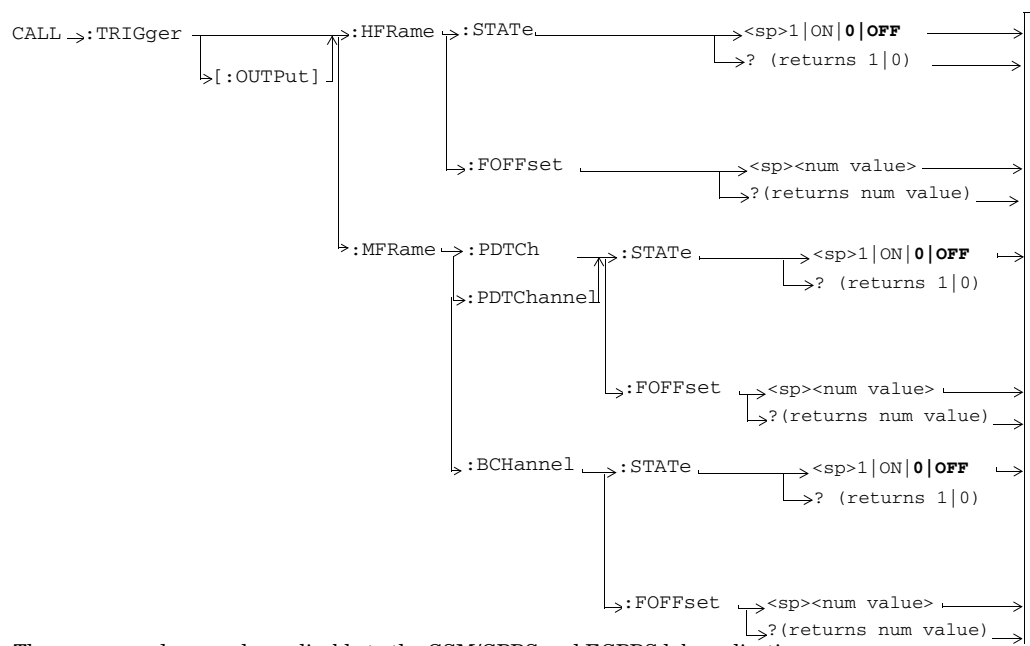


These commands are only applicable to the GSM/GPRS and EGPRS lab applications.

GPiB Syntax for E1968A, E6701C and E6704A

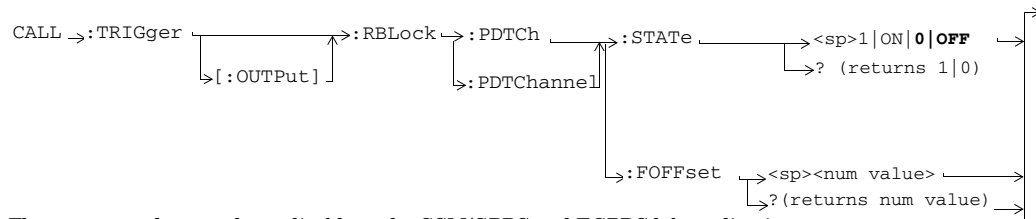


These commands are only applicable to the GSM/GPRS and EGPRS lab applications.

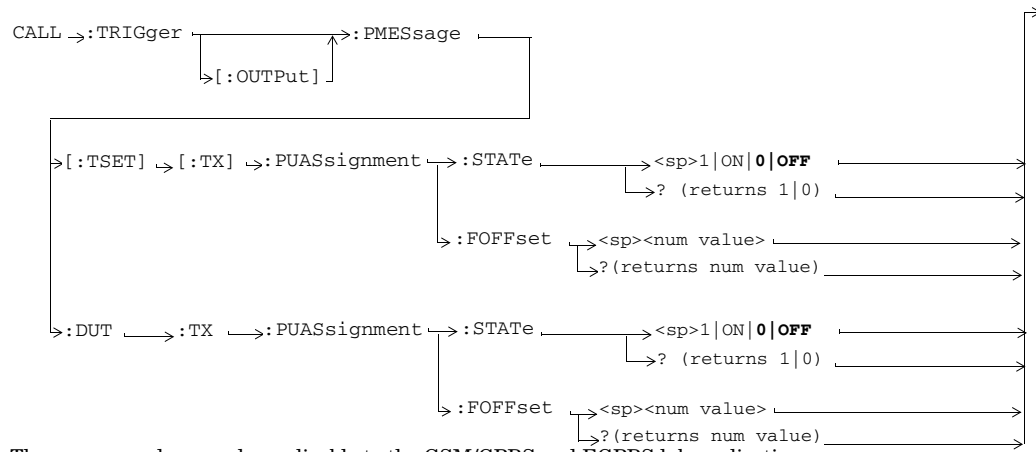


These commands are only applicable to the GSM/GPRS and EGPRS lab applications.

GPiB Syntax for E1968A, E6701C and E6704A

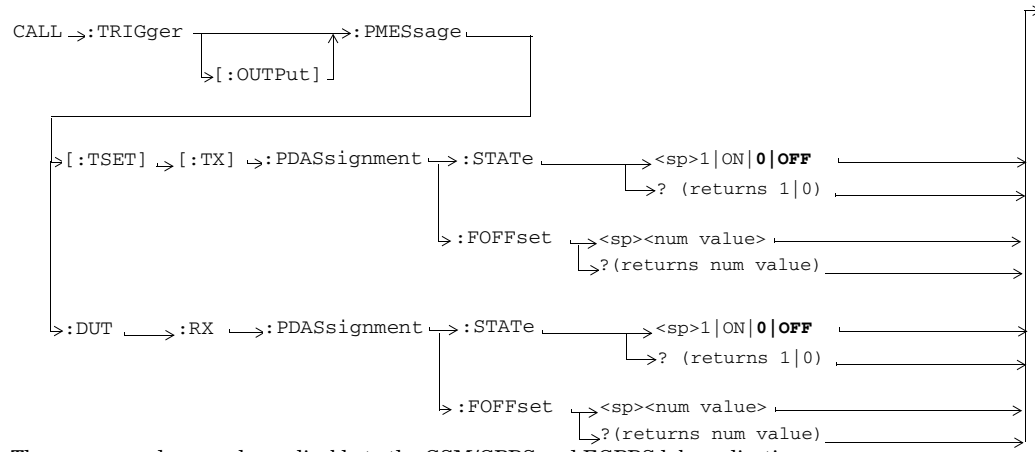


These commands are only applicable to the GSM/GPRS and EGPRS lab applications.

GPIB Syntax for E1968A, E6701C and E6704A

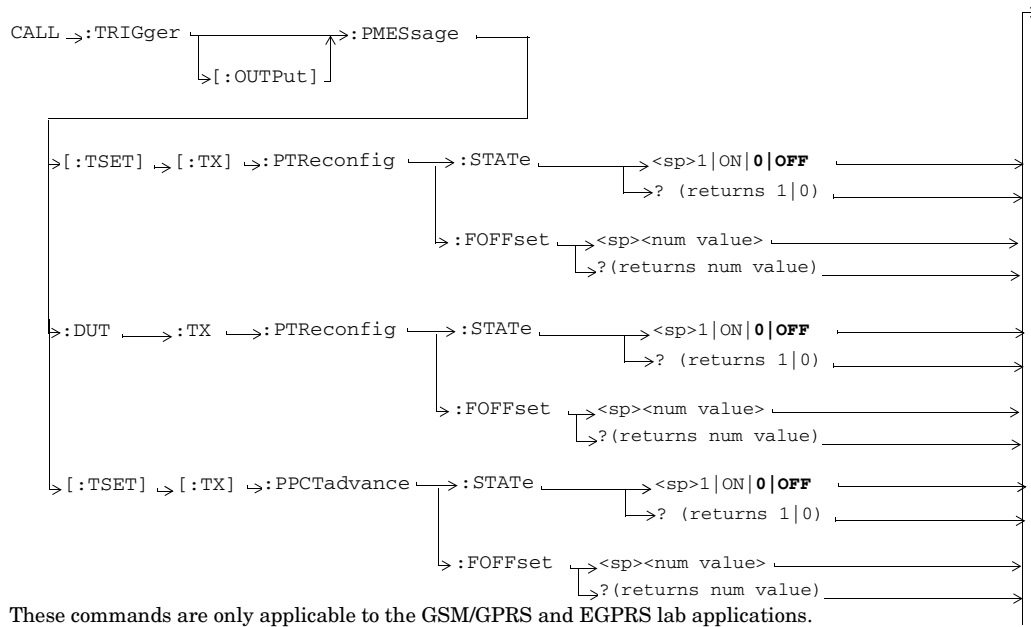


GPIB Syntax for E1968A, E6701C and E6704A

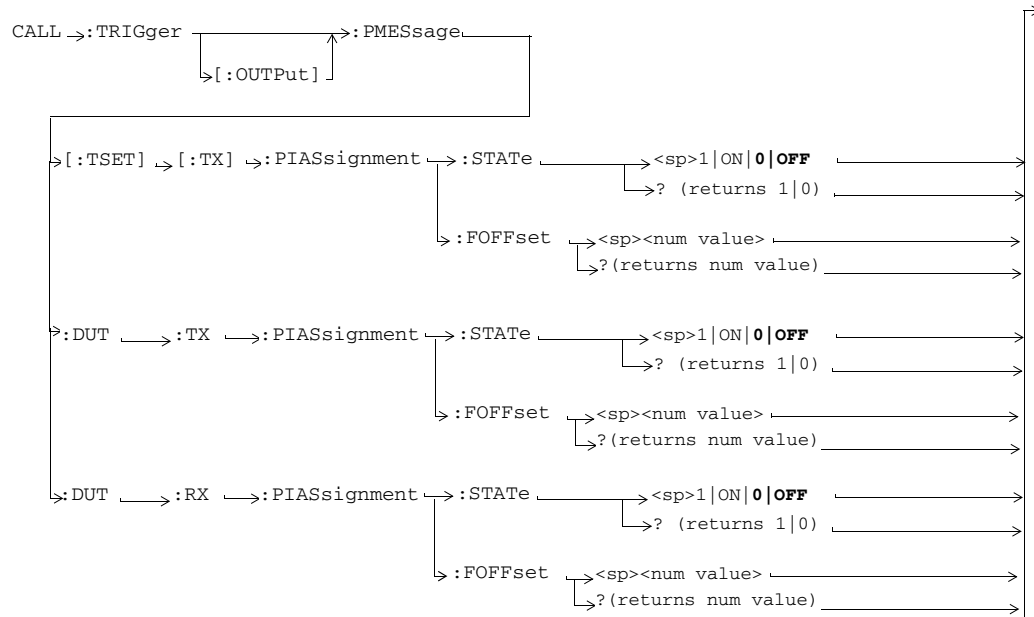


These commands are only applicable to the GSM/GPRS and EGPRS lab applications.

GPIB Syntax for E1968A, E6701C and E6704A

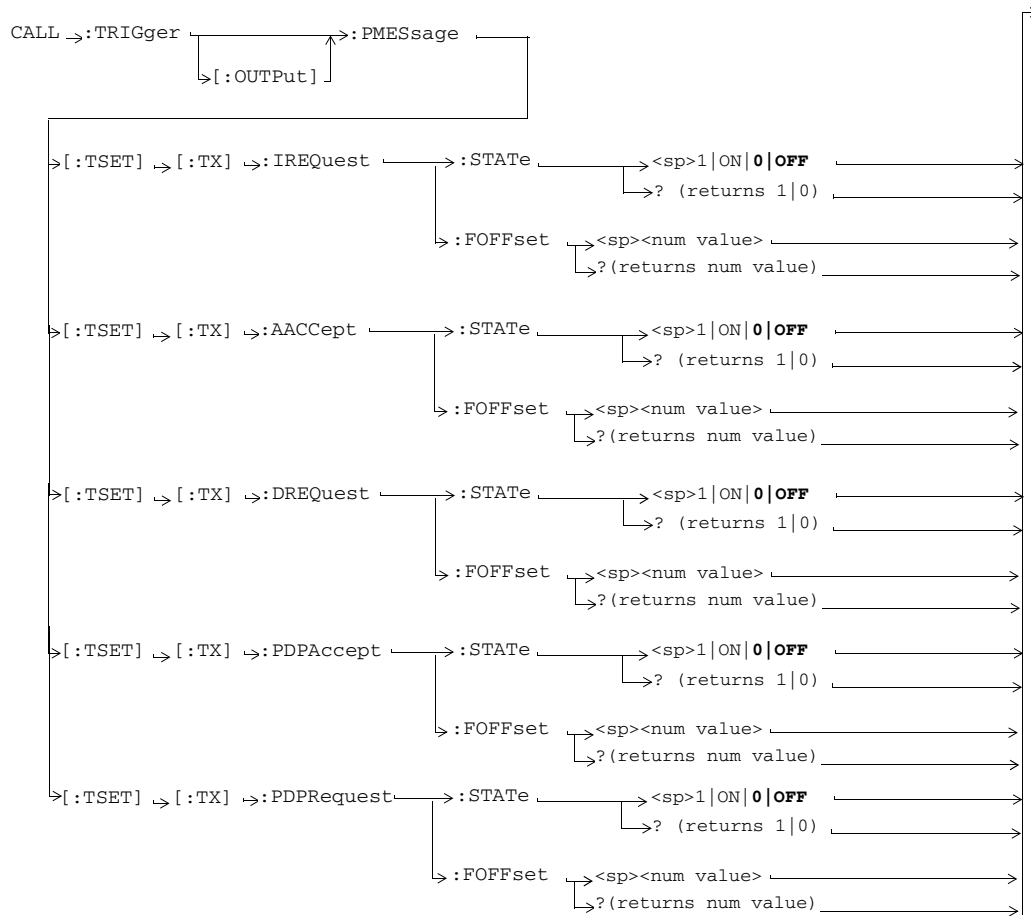


These commands are only applicable to the GSM/GPRS and EGPRS lab applications.

DISPlay

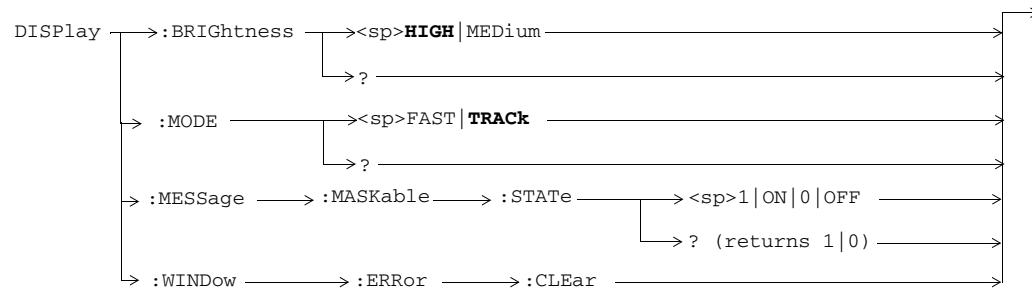


GPIO Syntax for E1968A, E6701C and E6704A


FEtCh:AAUDio

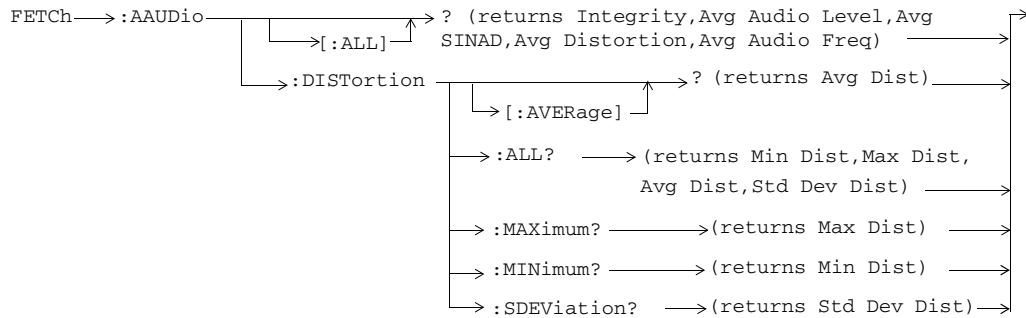

These commands are not applicable to GPRS.

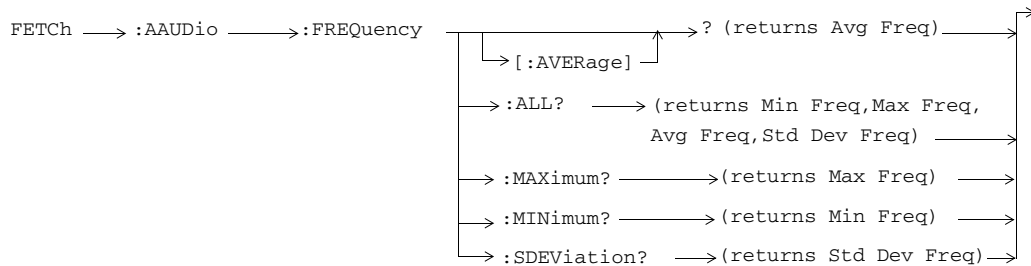


 These commands are not applicable to GPRS.




These commands are not applicable to GPRS.

GPIB Syntax for E1968A, E6701C and E6704A

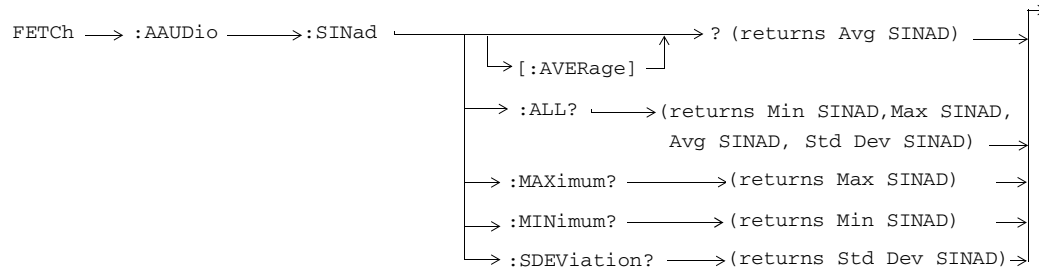


These commands are not applicable to GPRS.

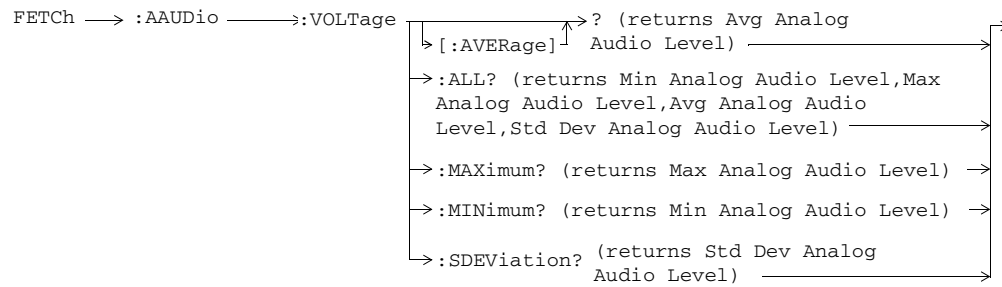


These commands are not applicable to GPRS.

FEtCh:BERRor

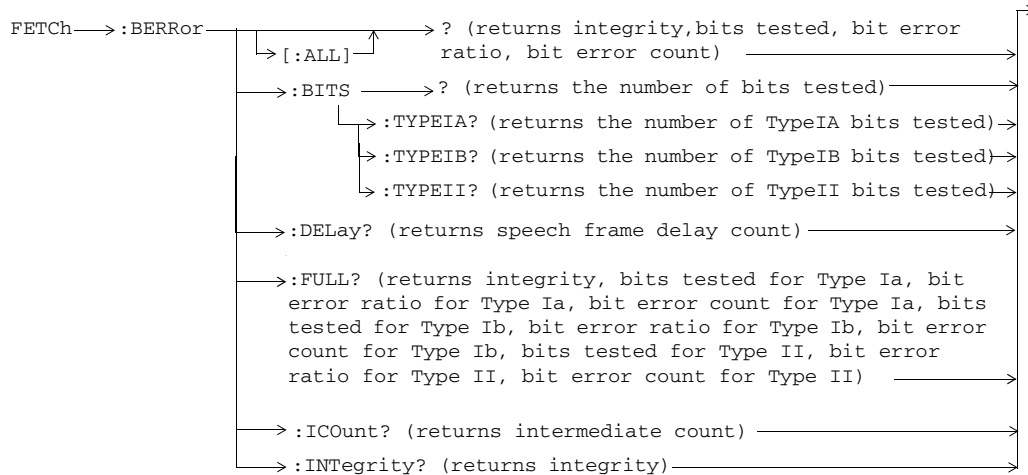


These commands are not applicable to GPRS or EGPRS.

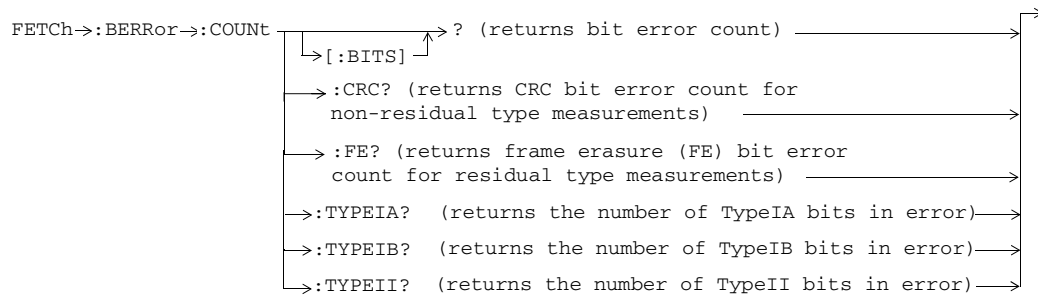

These commands are not applicable to GPRS or EGPRS.


GPB Syntax for E1968A, E6701C and E6704A

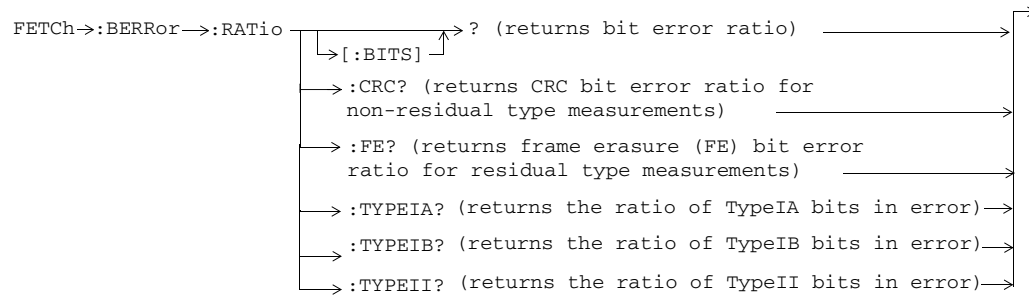

These commands are not applicable to GPRS or EGPRS.


GPIB Syntax for E1968A, E6701C and E6704A

FETCH:<BFI>

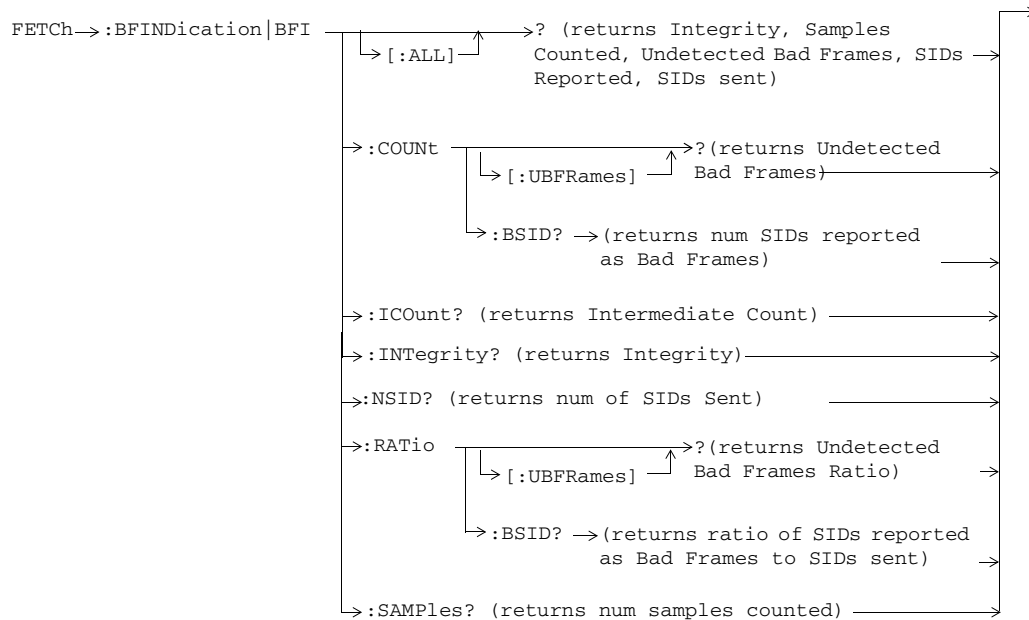


These commands are only applicable to the GSM/GPRS and EGPRS lab applications.

FEtCh:BLERror

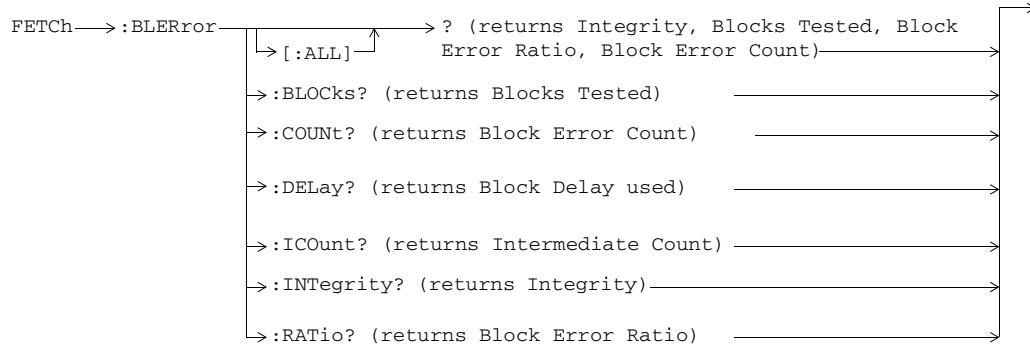

These commands are not applicable to GSM.


FEtCh:DAUDio

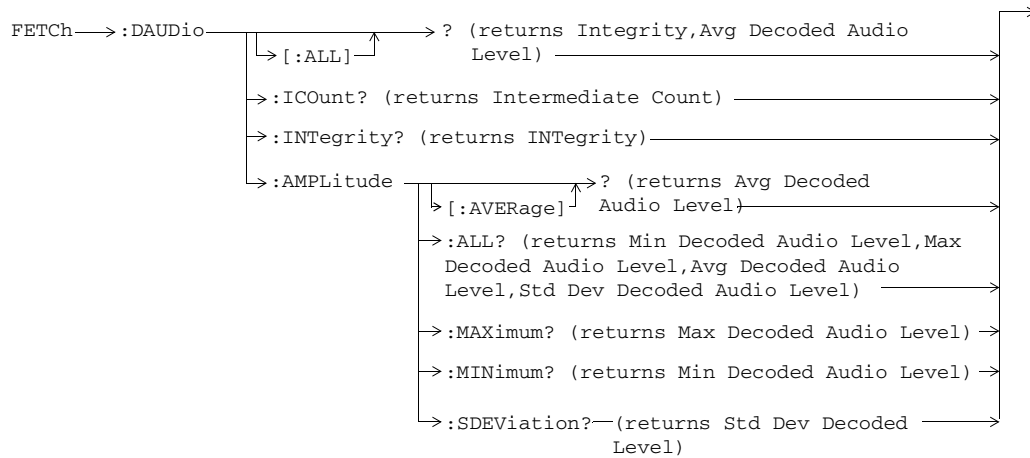


These commands are not applicable to GPRS.

GPIB Syntax for E1968A, E6701C and E6704A

FEtCh:DPOWer

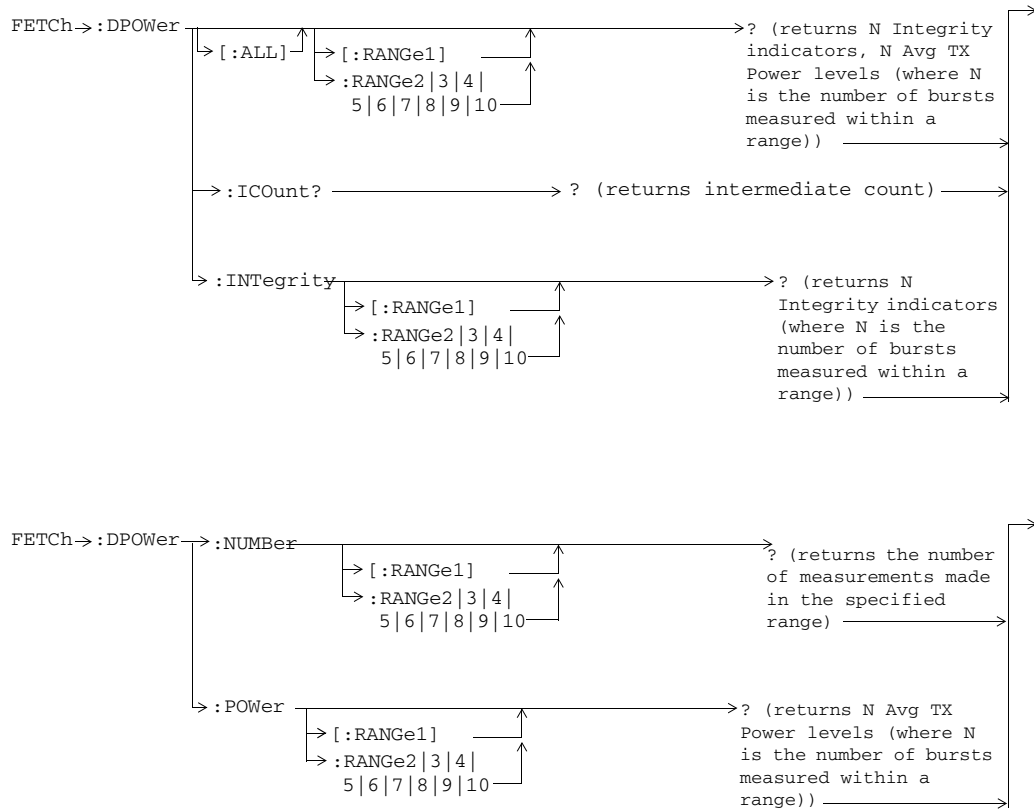


FEtCh:EMACcuracy

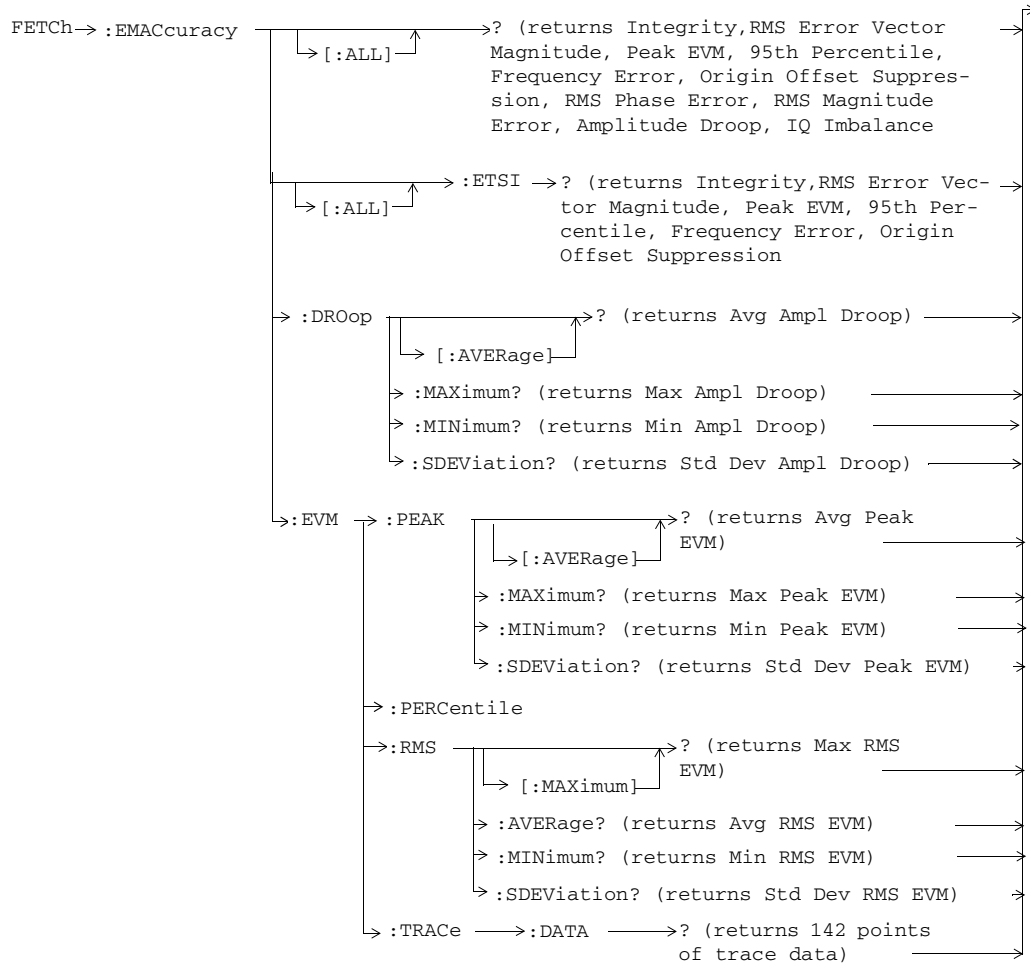


These commands are only applicable to EGPRS.

GPIB Syntax for E1968A, E6701C and E6704A

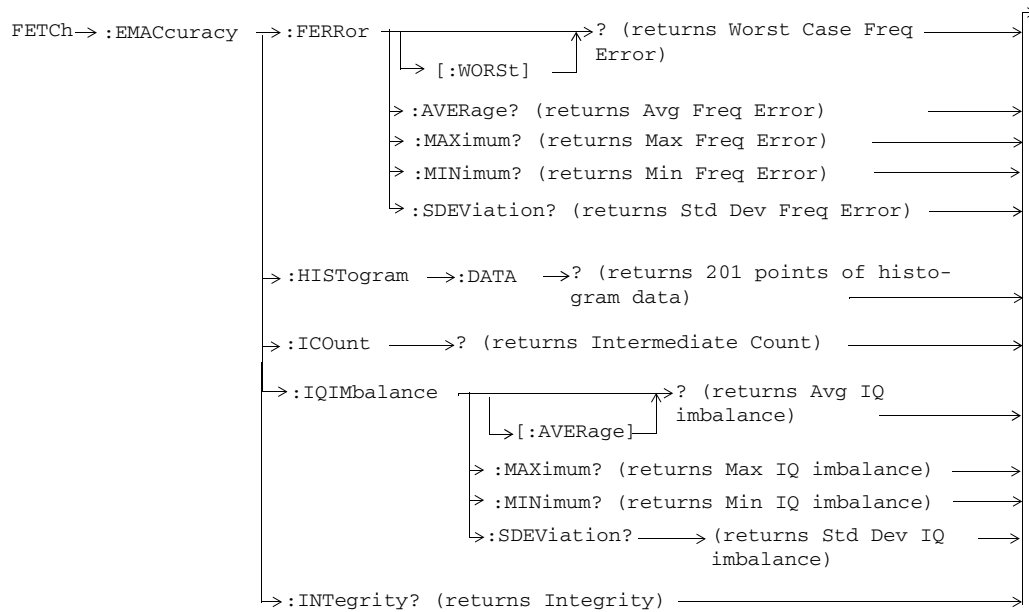


These commands are only applicable to EGPRS.

GPIB Syntax for E1968A, E6701C and E6704A

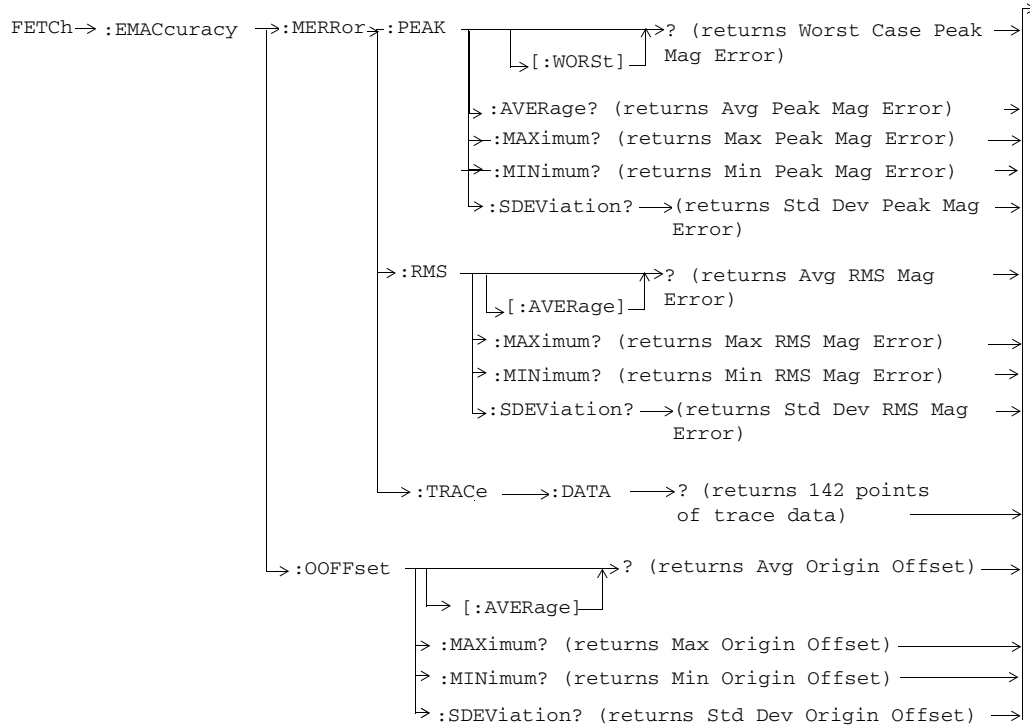


These commands are only applicable to EGPRS.


GPIB Syntax for E1968A, E6701C and E6704A

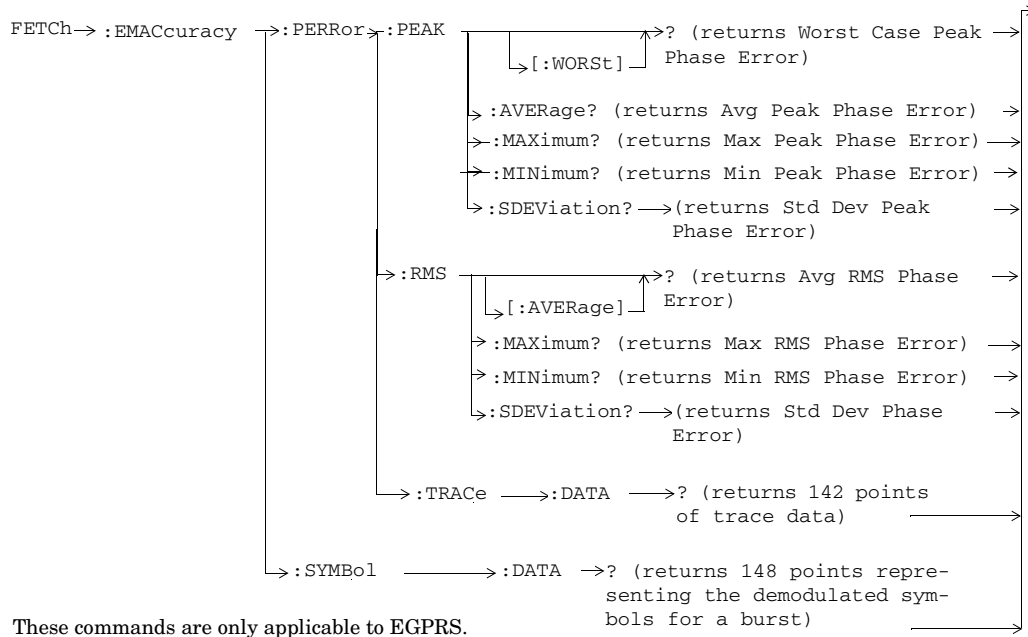

FETCH:ETXPower

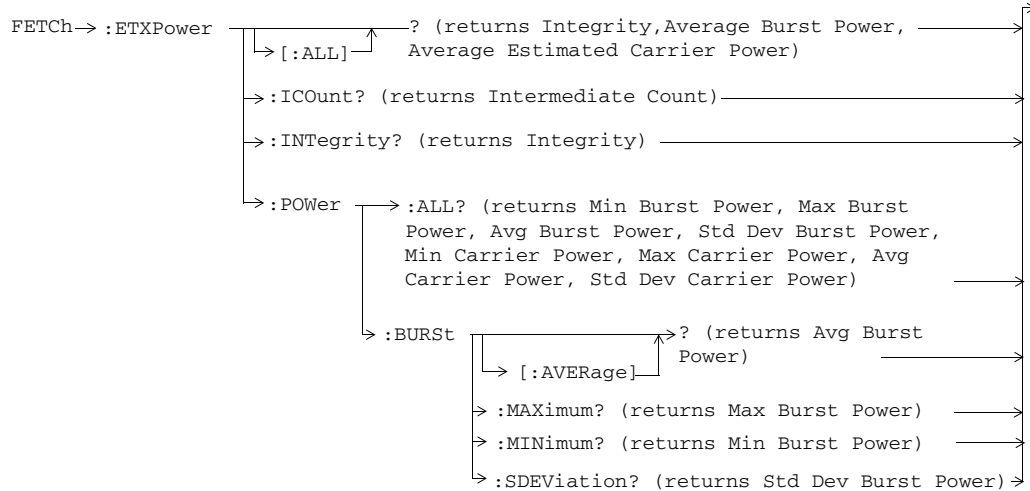


These commands are only applicable to EGPRS.

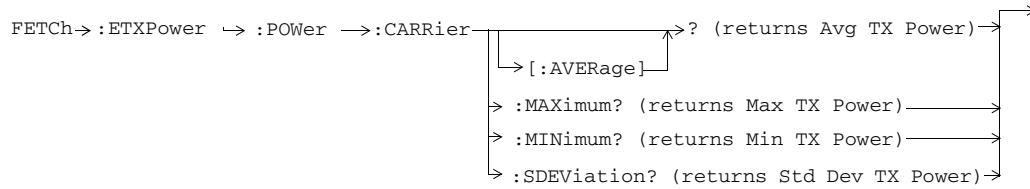

These commands are only applicable to EGPRS.


GPiB Syntax for E1968A, E6701C and E6704A

FEtCh:FBERror

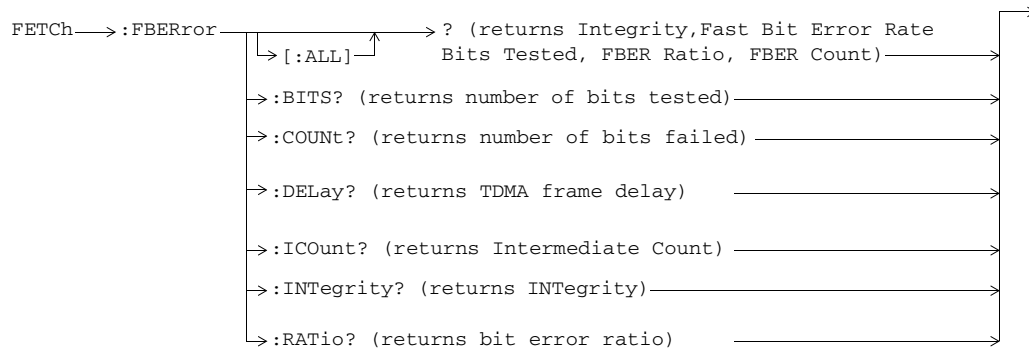


These commands are not applicable to GPRS.

FEtCh:FFERate

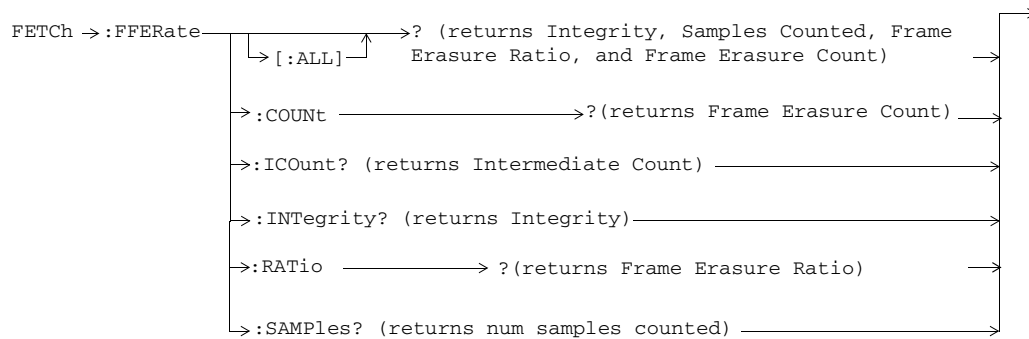


These commands are only applicable to the GSM/GPRS and EGPRS lab applications.

FEtCh:GBERror

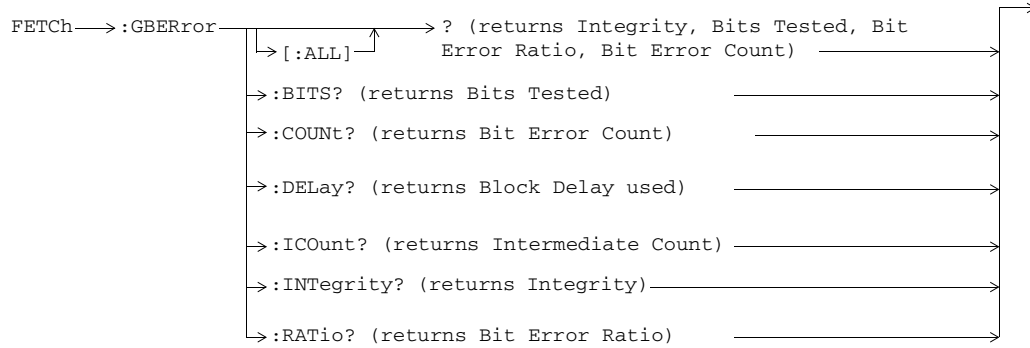


These commands are not applicable to GSM.

FEtCh:IQTuning

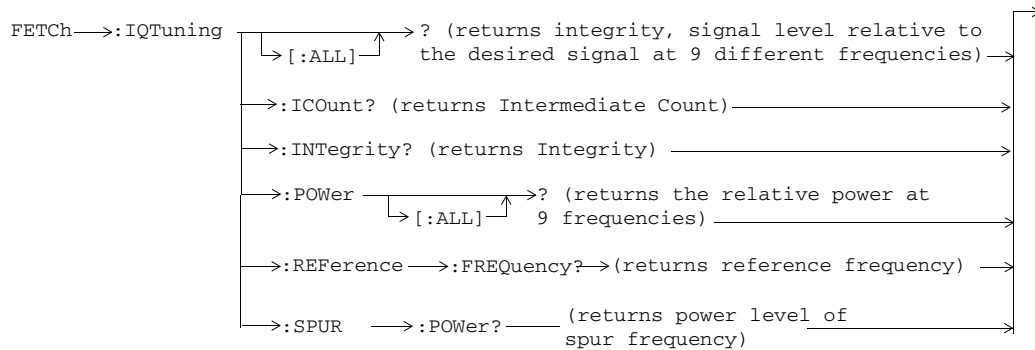



GPIB Syntax for E1968A, E6701C and E6704A

FETCH:MTAudio

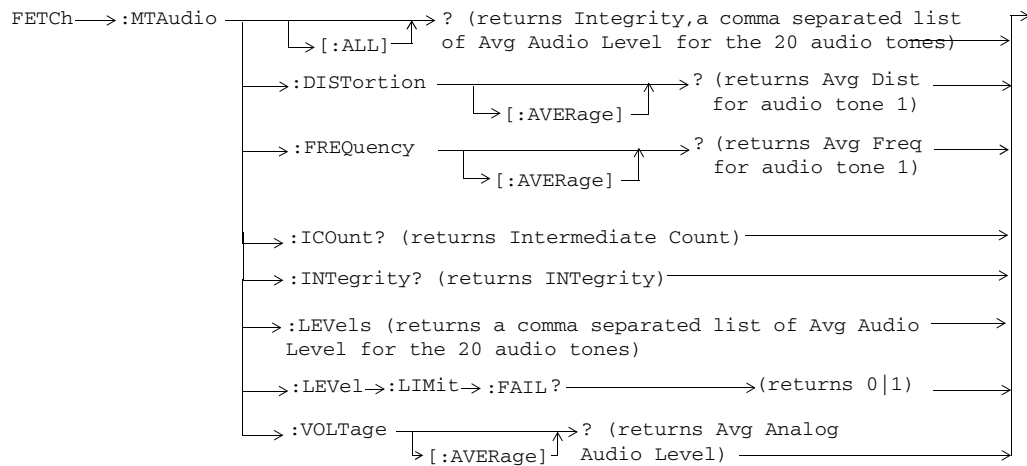


These commands are not applicable to GPRS or EGPRS.



FEtCh:ORFSpectrum

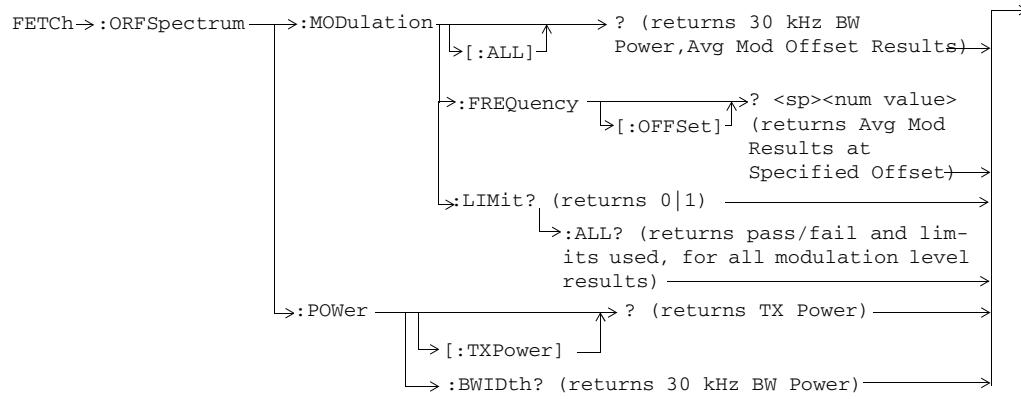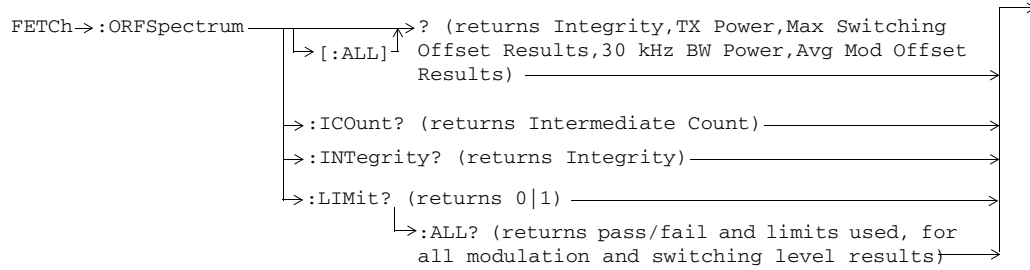


GPIB Syntax for E1968A, E6701C and E6704A

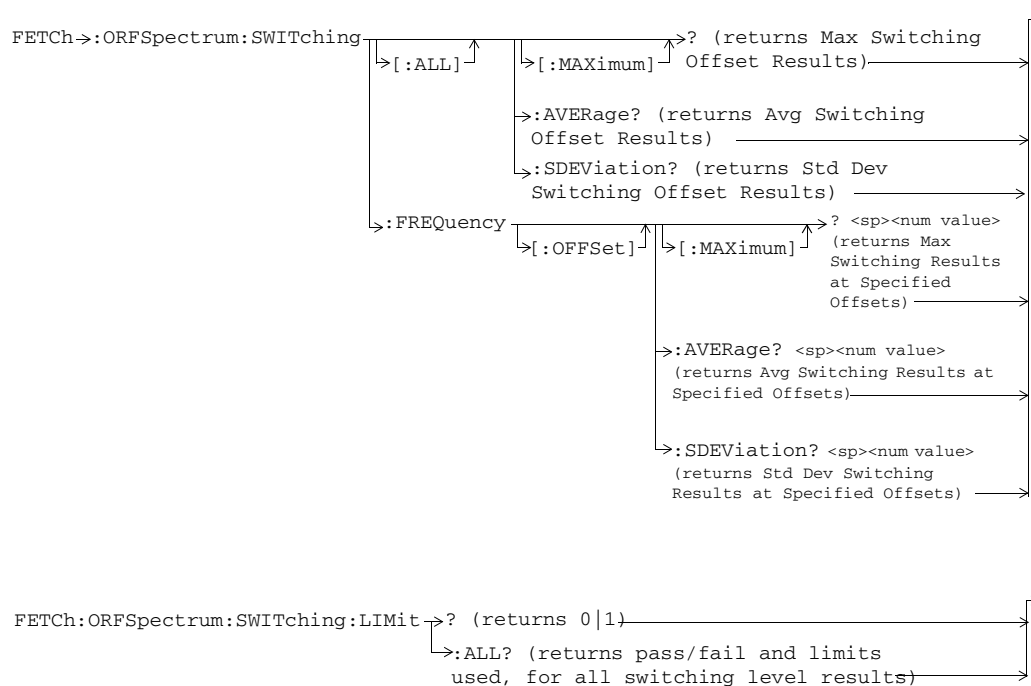


FEtCh:PFERror

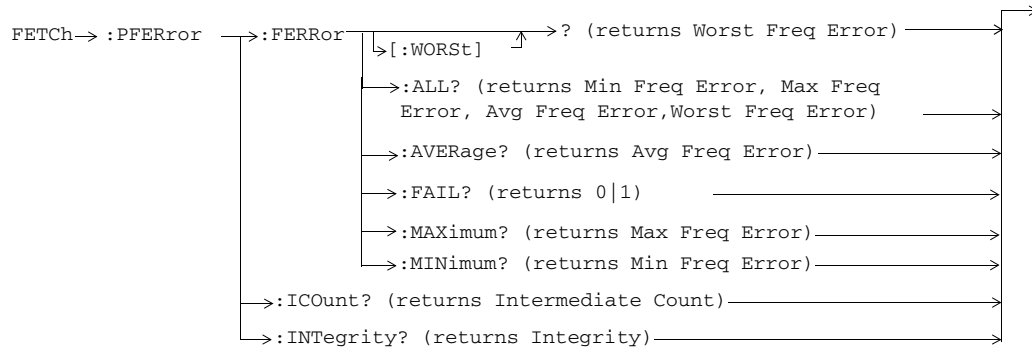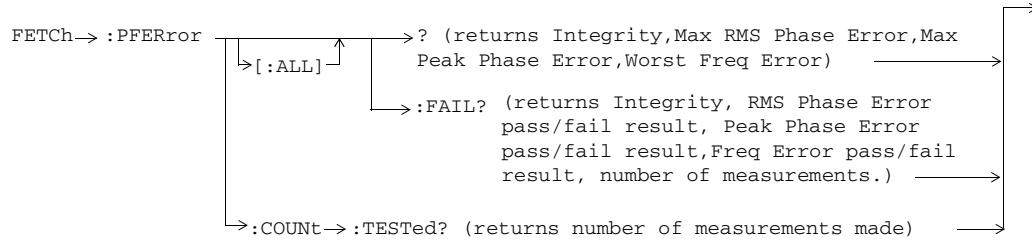


GPIB Syntax for E1968A, E6701C and E6704A

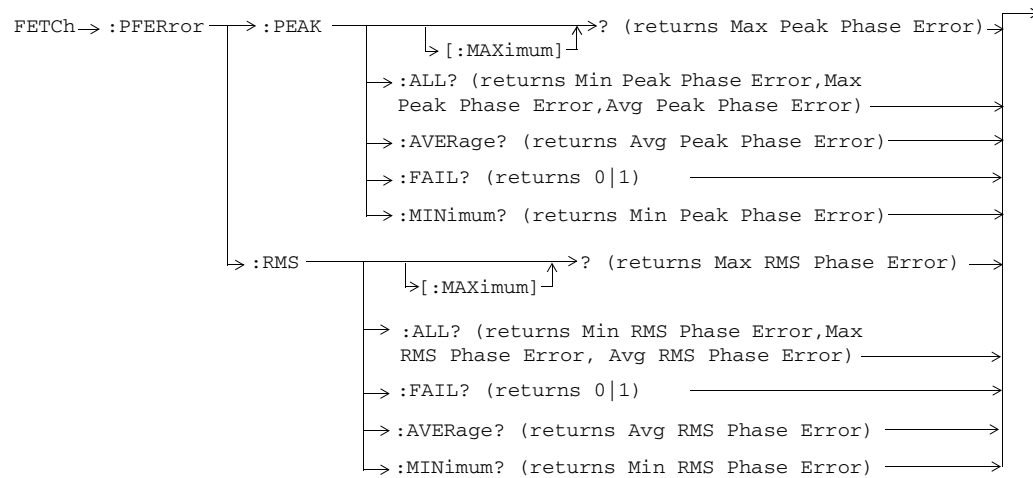

FEtCh:PvTime

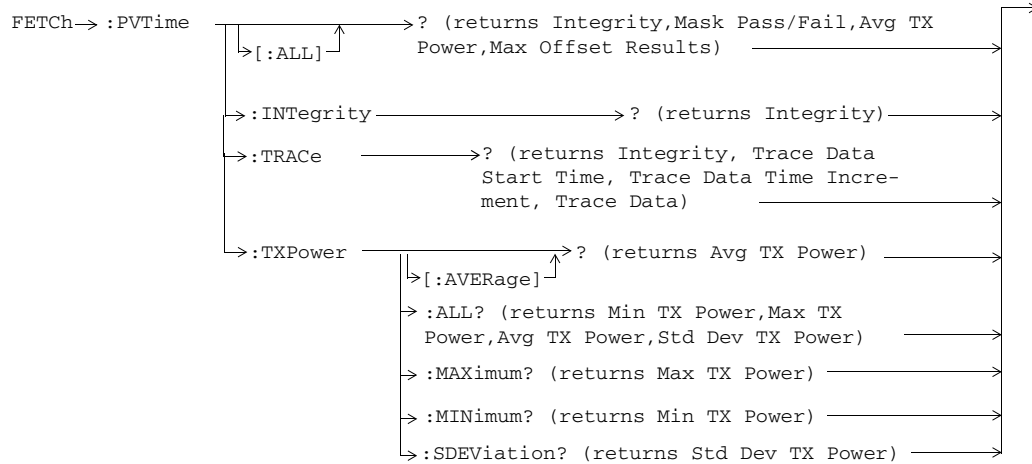


These commands are not applicable to GPRS or EGPRS.

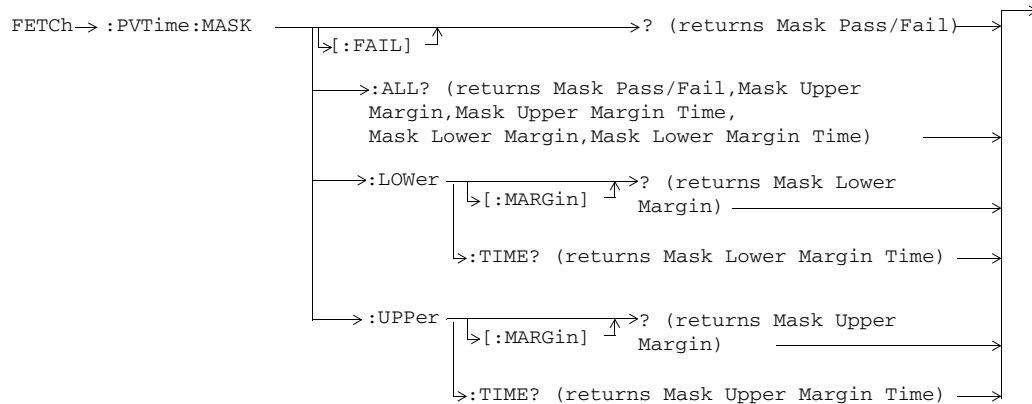


These commands are not applicable to GPRS or EGPRS.


GPIB Syntax for E1968A, E6701C and E6704A

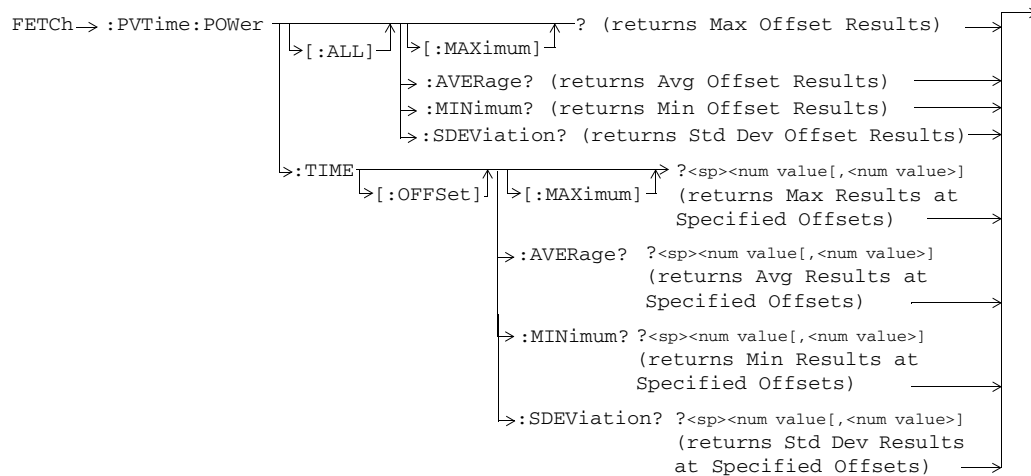


These commands are not applicable to GPRS or EGPRS.

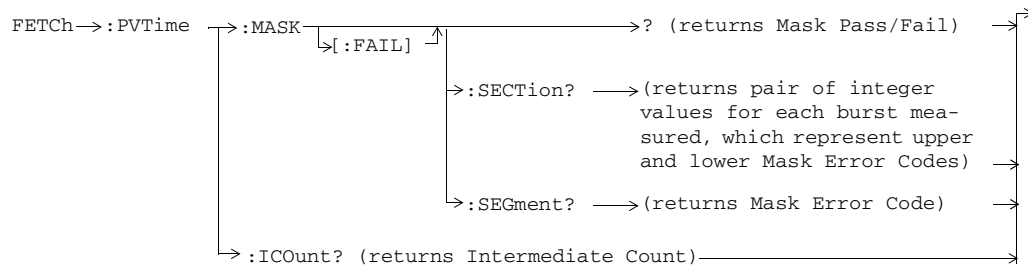

GPiB Syntax for E1968A, E6701C and E6704A

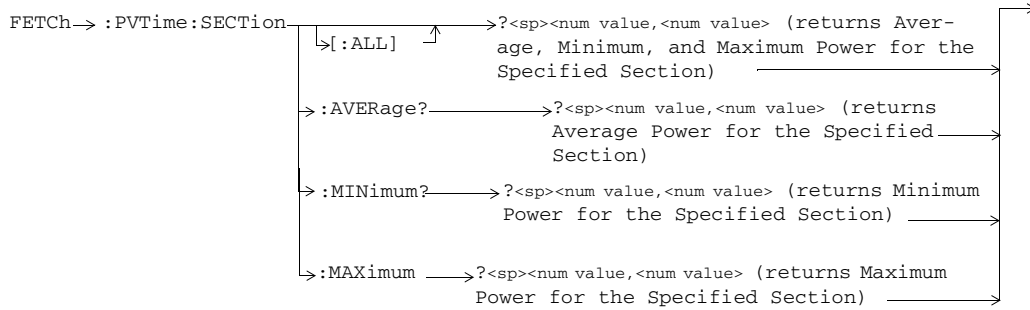


These commands are not applicable to GPRS or EGPRS.

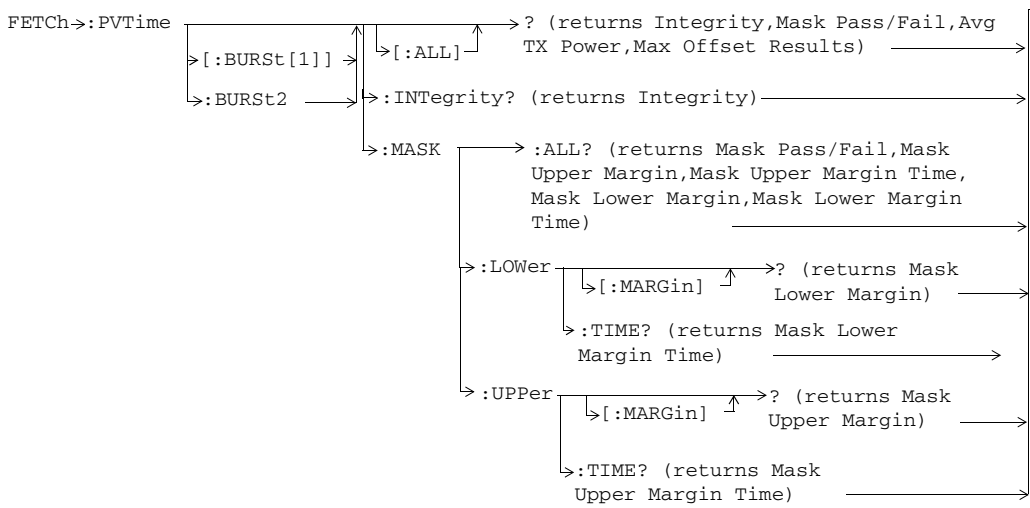


These commands are not applicable to GSM.

GPiB Syntax for E1968A, E6701C and E6704A

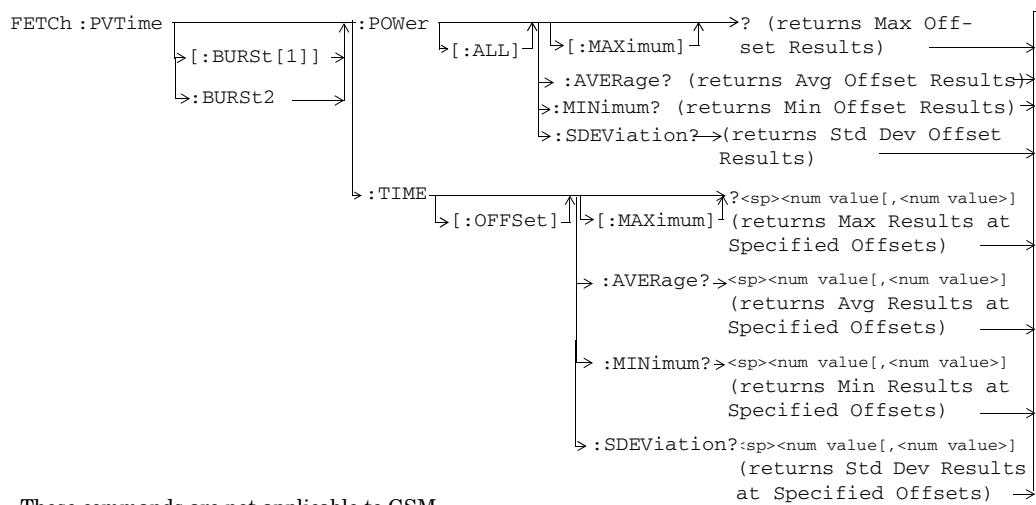


These commands are not applicable to GSM.

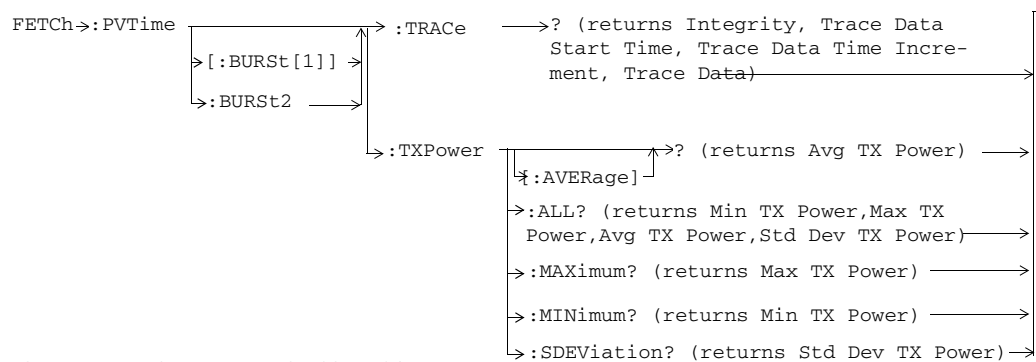


These commands are not applicable to GSM.

 
FEtCh:SMONitor



FEtCh:TXPower

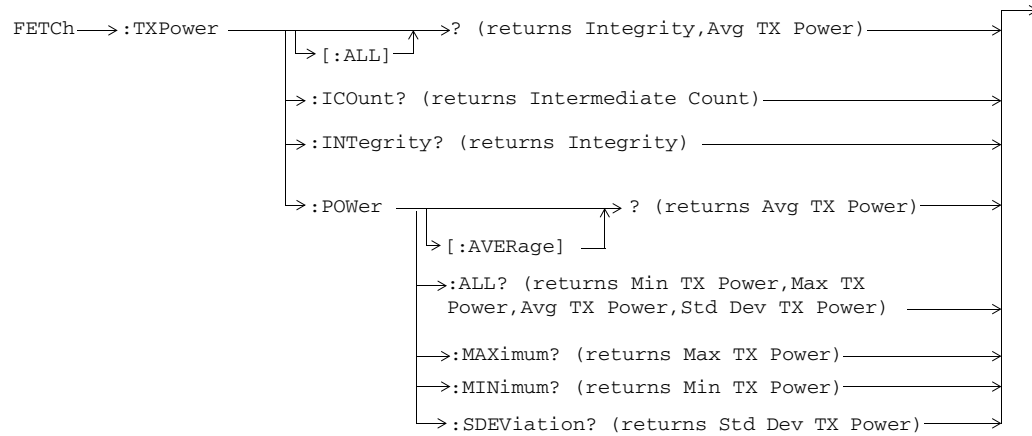

INITiate

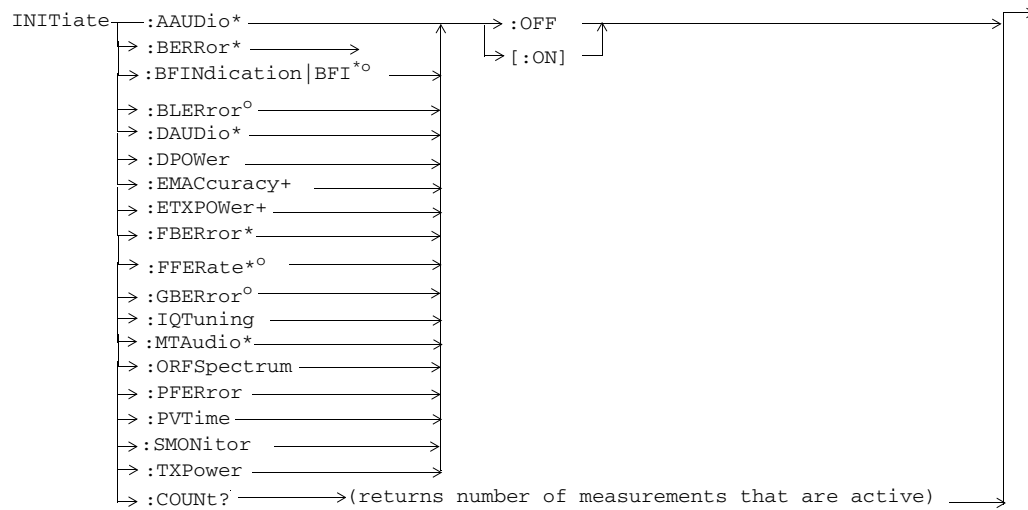


* Not applicable to the GPRS test application

° Not applicable to the GSM test application

+ Only applicable to EGPRS

GPiB Syntax for E1968A, E6701C and E6704A

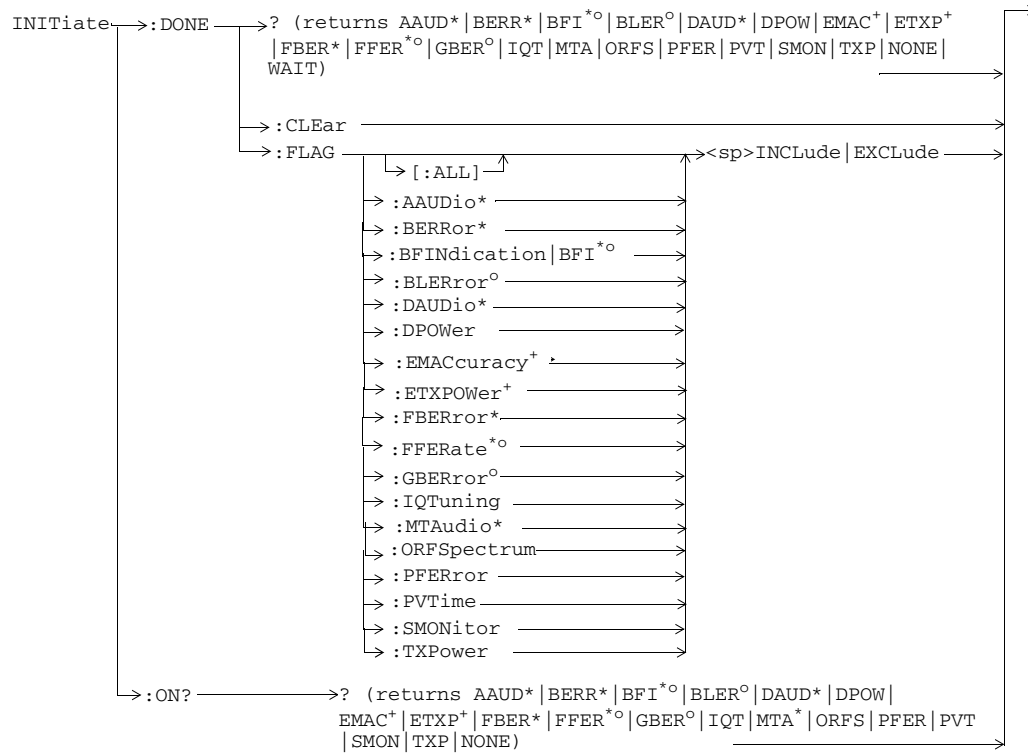


* Not applicable to the GPRS test application

° Not applicable to the GSM test application

+ Only applicable to EGPRS


GPB Syntax for E1968A, E6701C and E6704A

READ

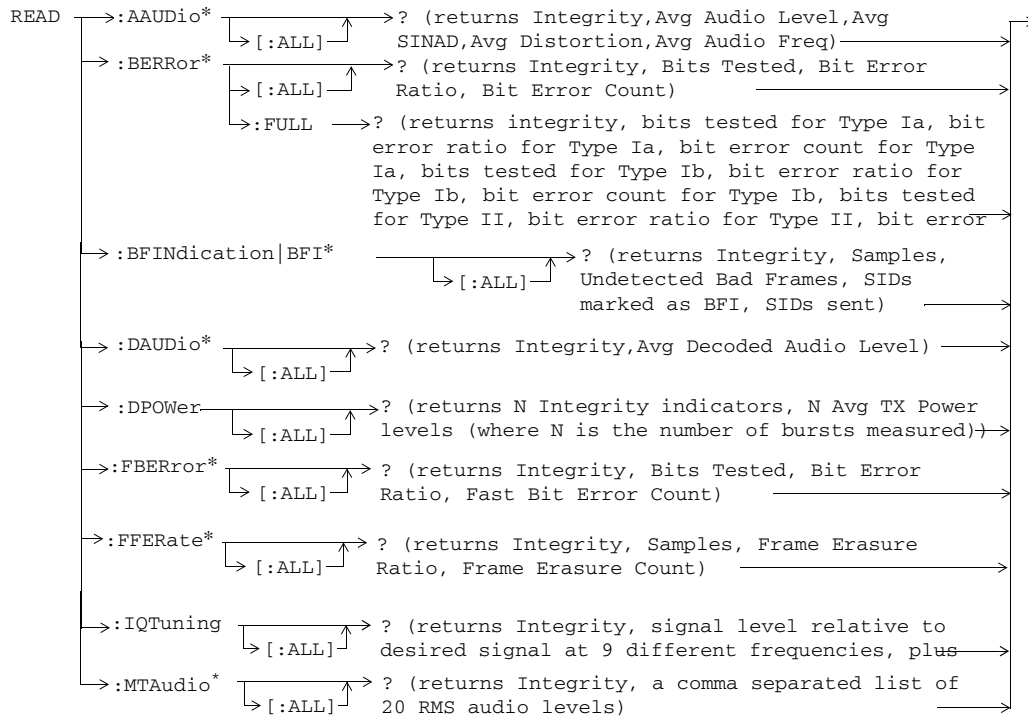

* These commands are not applicable to GPRS.



GPIB Syntax for E1968A, E6701C and E6704A

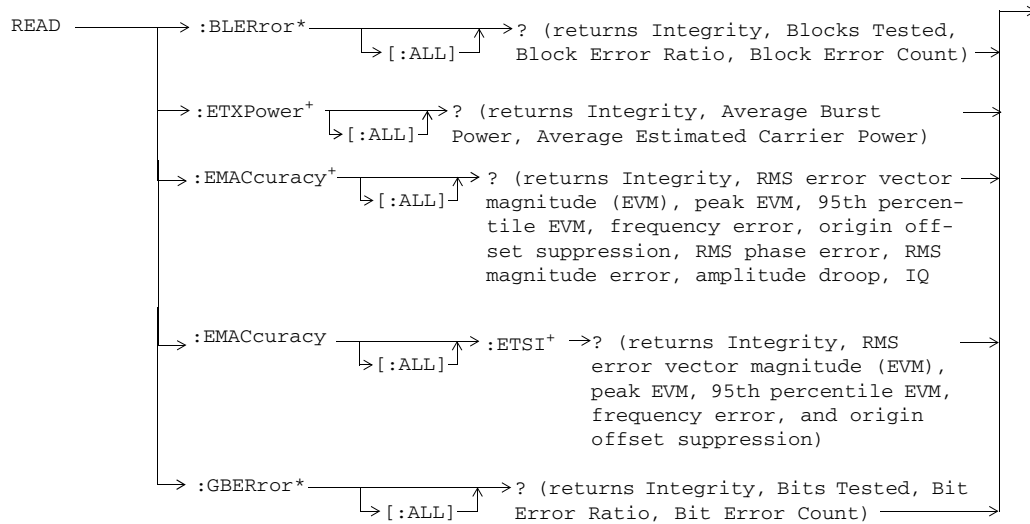

* These commands are not applicable to GSM.




⁺ This command is only applicable to EGPRS.

 GPIB Syntax for E1968A, E6701C and E6704A

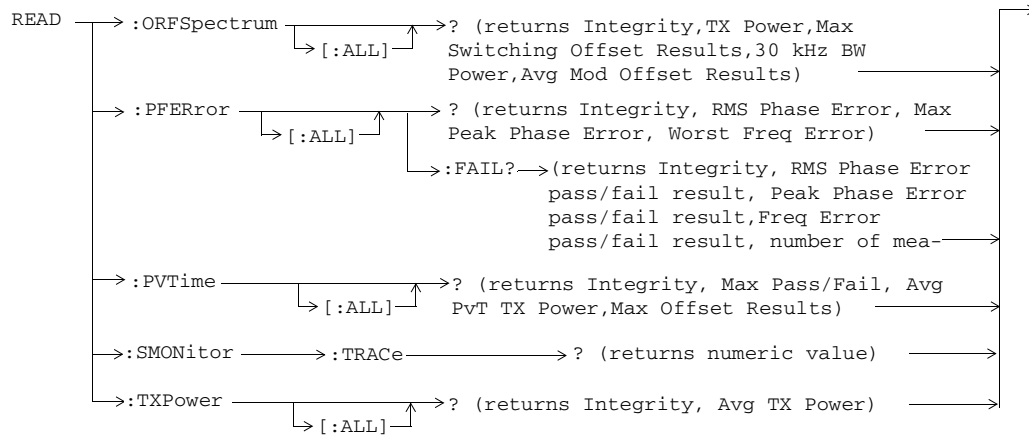


This command is not applicable to GSM.

RFANalyzer

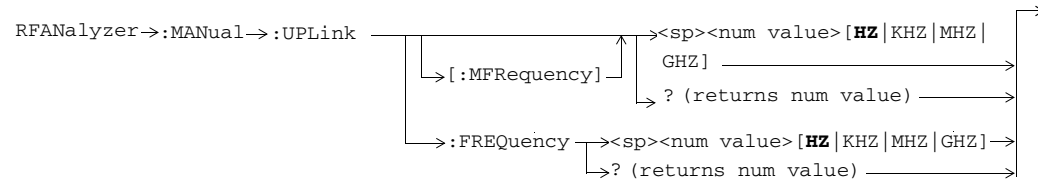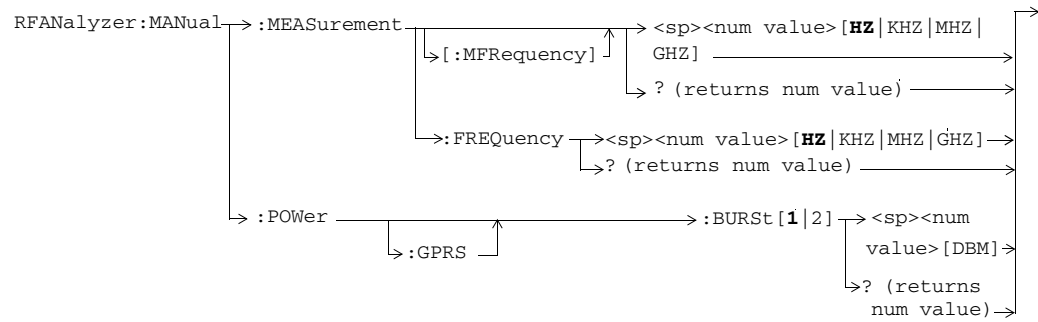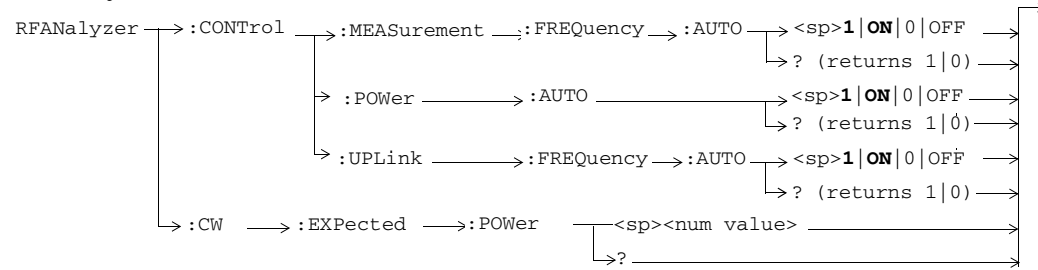


GPiB Syntax for E1968A, E6701C and E6704A

 
RFGenerator:OUTPut



SETup:AAUDio


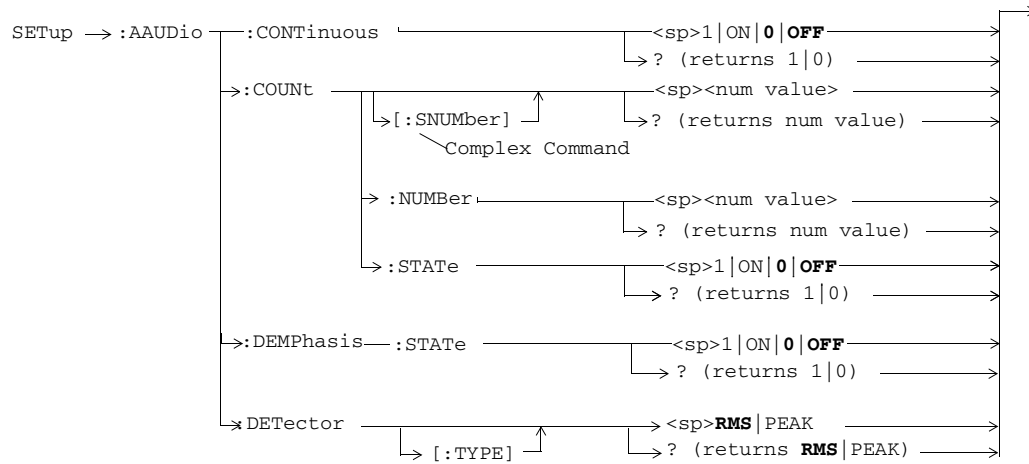


These commands are not applicable to GPRS.

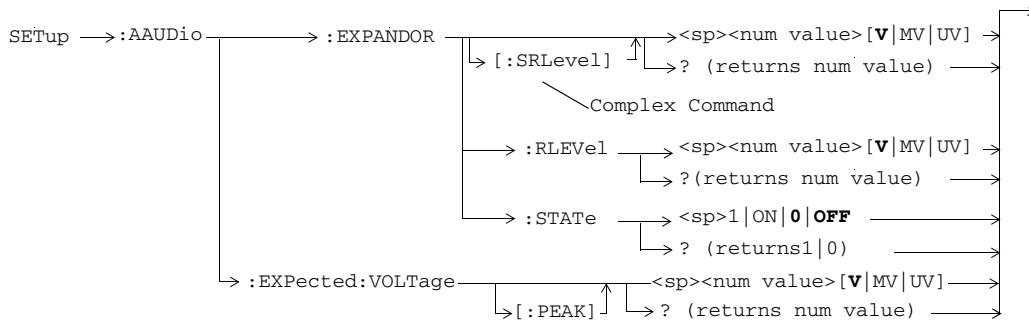


These commands are not applicable to GPRS.

GPIB Syntax for E1968A, E6701C and E6704A

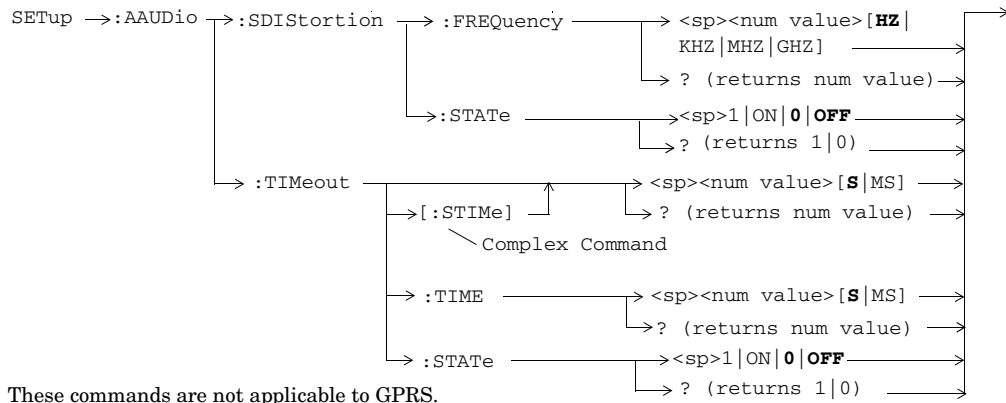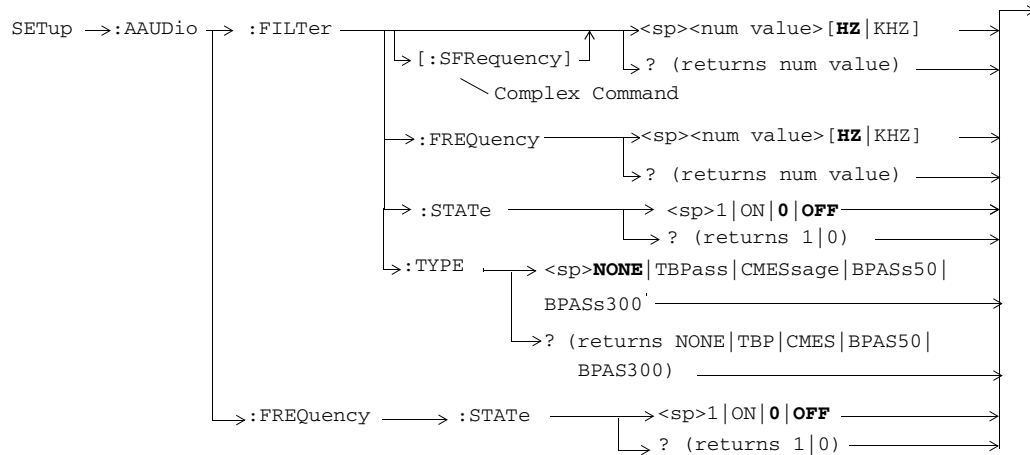


GPIB Syntax for E1968A, E6701C and E6704A

SETup:BERRor

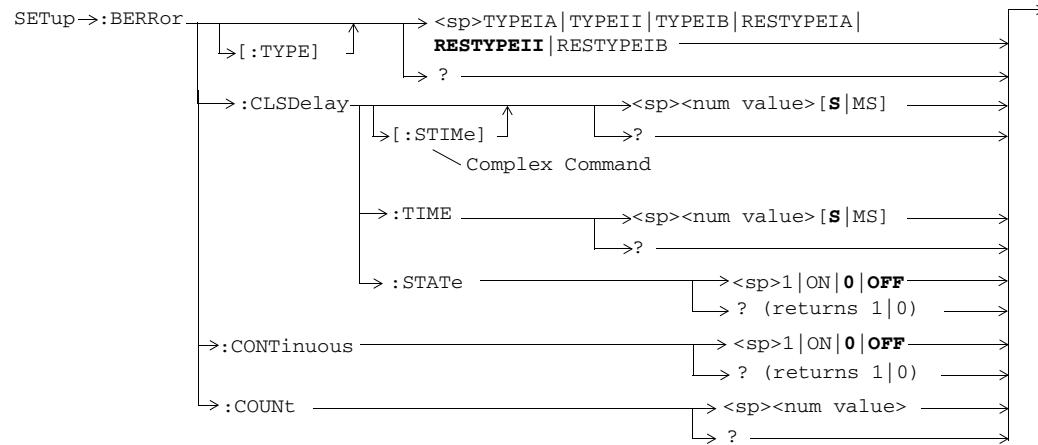


These commands are not applicable to GPRS.

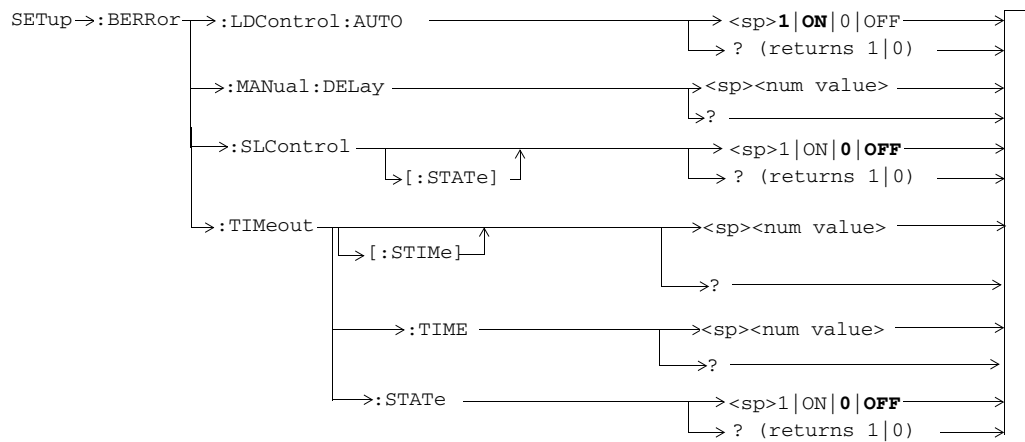


These commands are not applicable to GPRS.

SETup:<BFINDication|BFI>

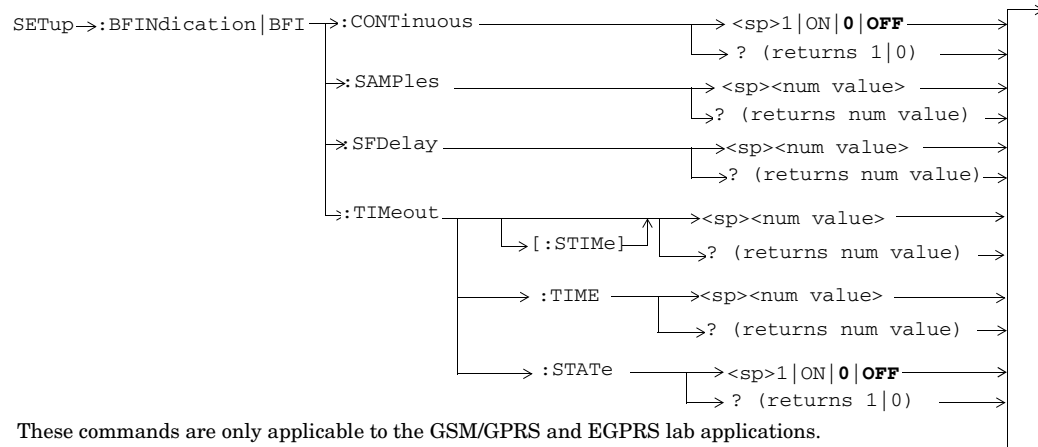

SETup:BLERror

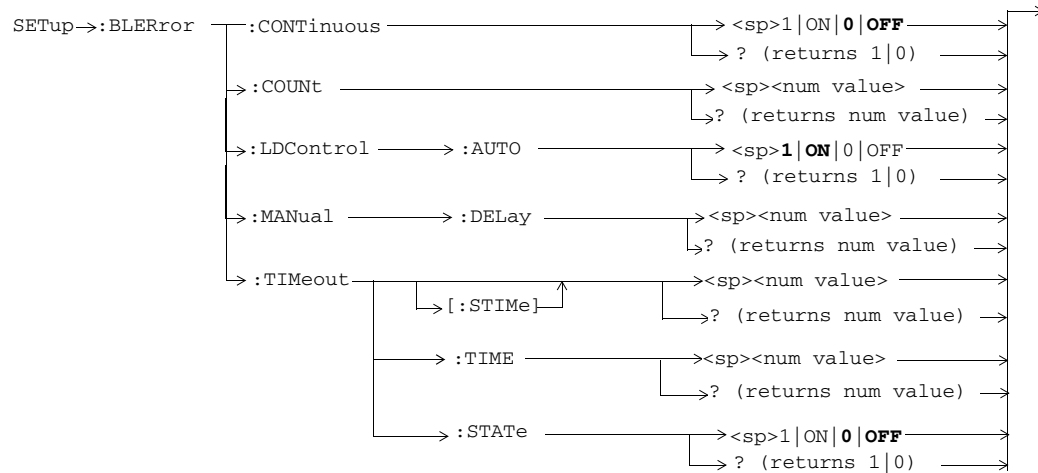


GPiB Syntax for E1968A, E6701C and E6704A


SETup:CONTinuous

SETup: ————┐ ————> :CONTinuous ————> :OFF | :ON ————>
 └─> [:ALL] —┘

SETup:DAUDio

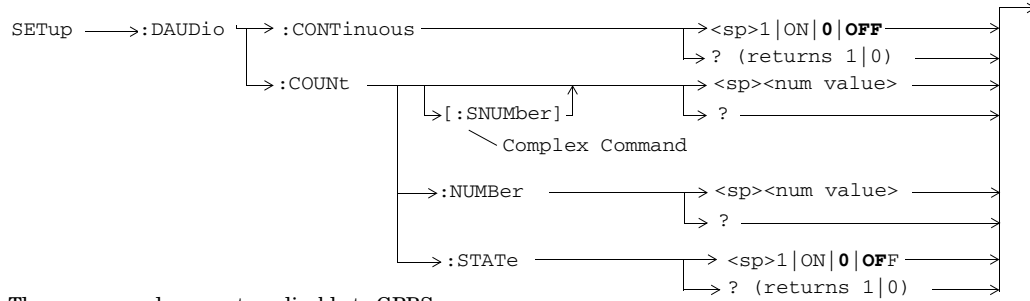



These commands are not applicable to GPRS.

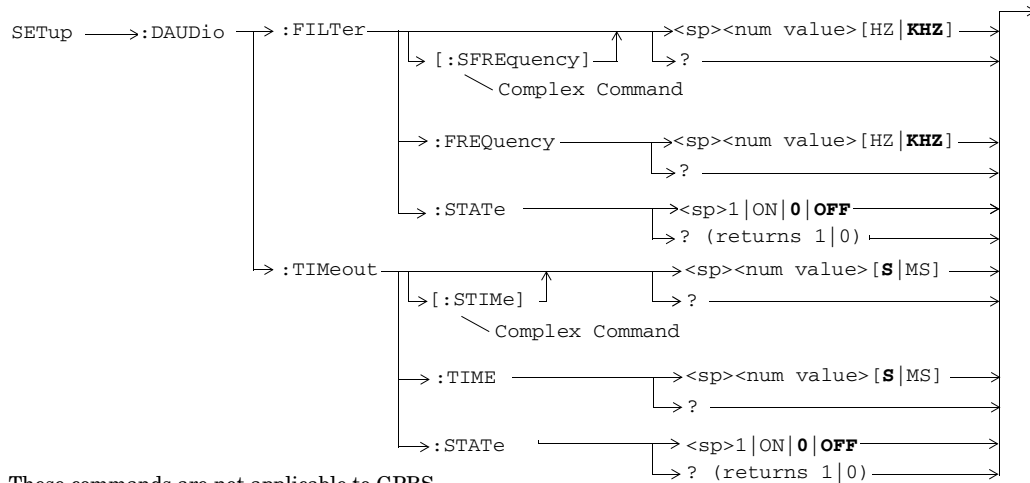


These commands are not applicable to GPRS.

GPIB Syntax for E1968A, E6701C and E6704A


SETup:DPOWer

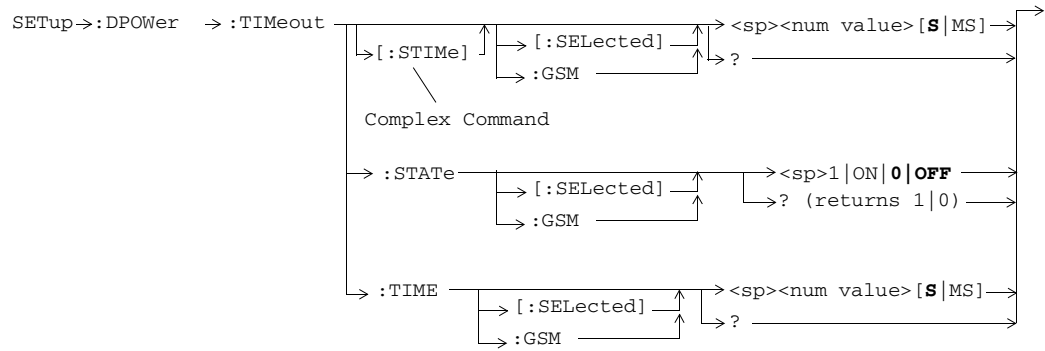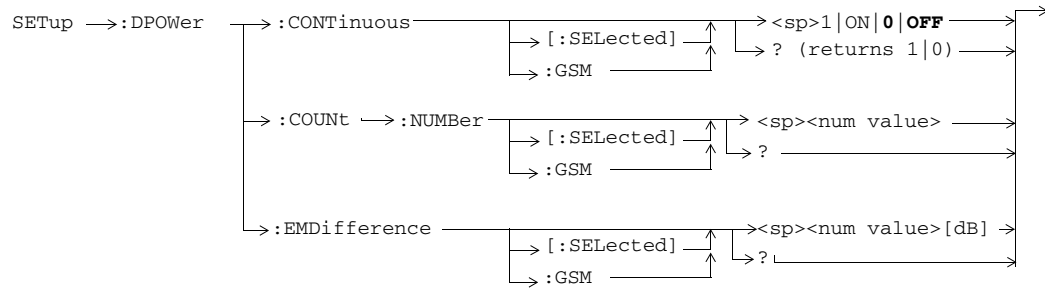

SETup:EMACcuracy


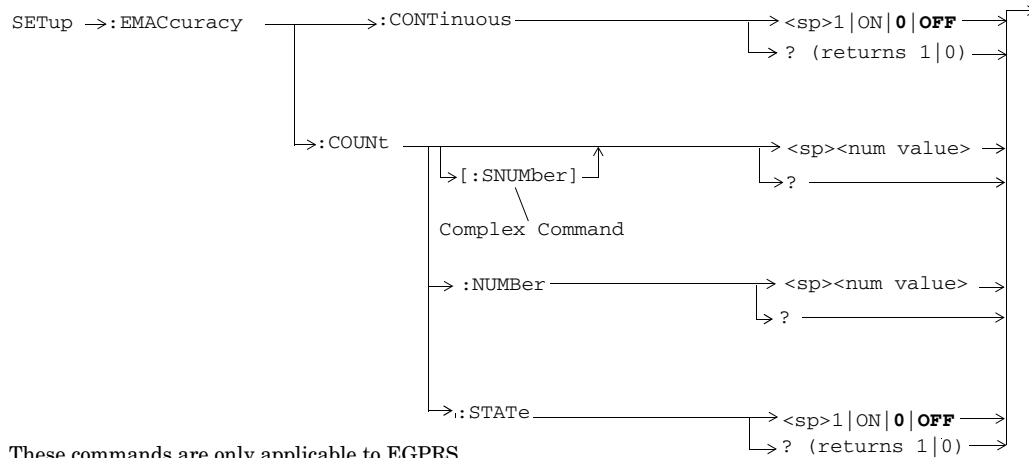




These commands are only applicable to EGPRS.

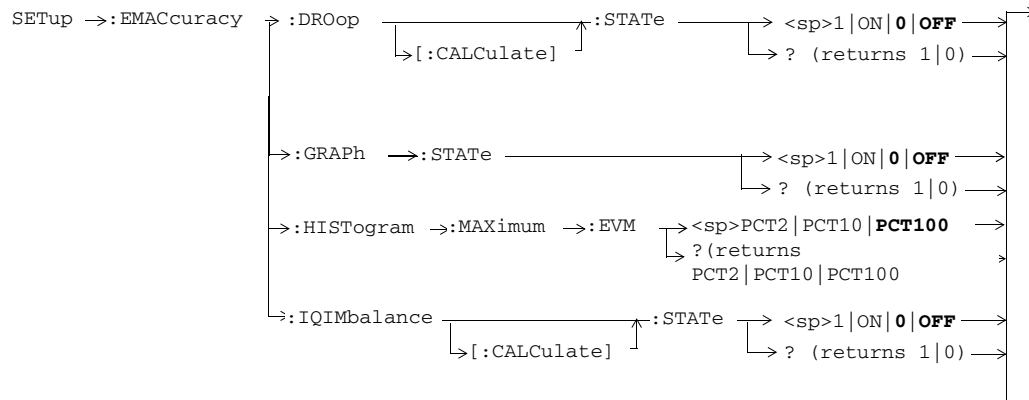


This command is only applicable to EGPRS.

  GPiB Syntax for E1968A, E6701C and E6704A

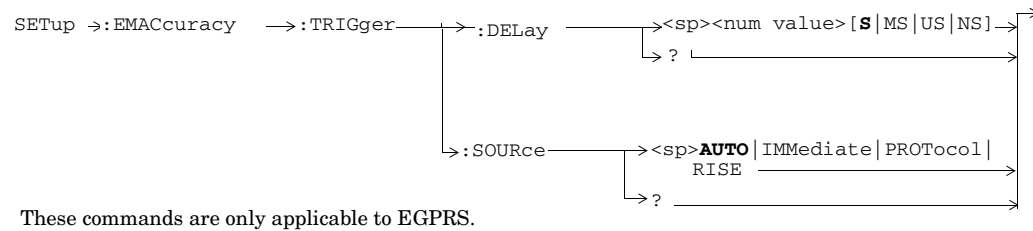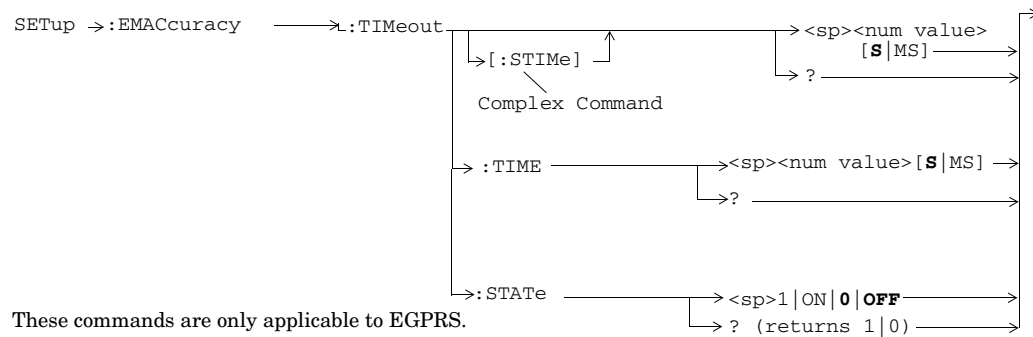




GPIB Syntax for E1968A, E6701C and E6704A

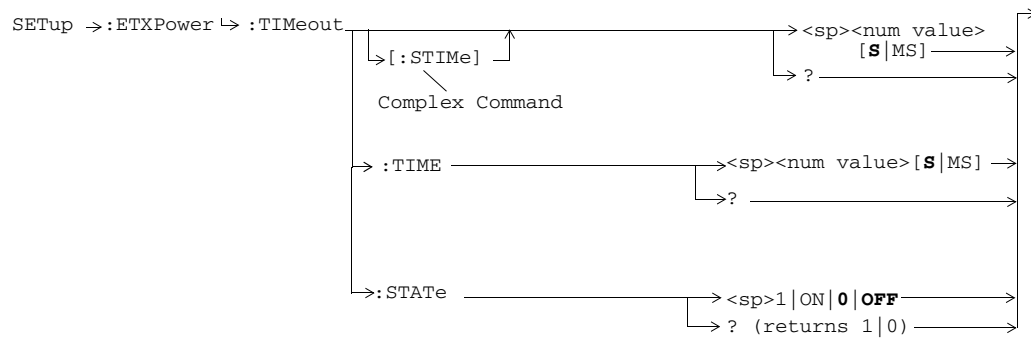

These commands are only applicable to EGPRS.


GPiB Syntax for E1968A, E6701C and E6704A

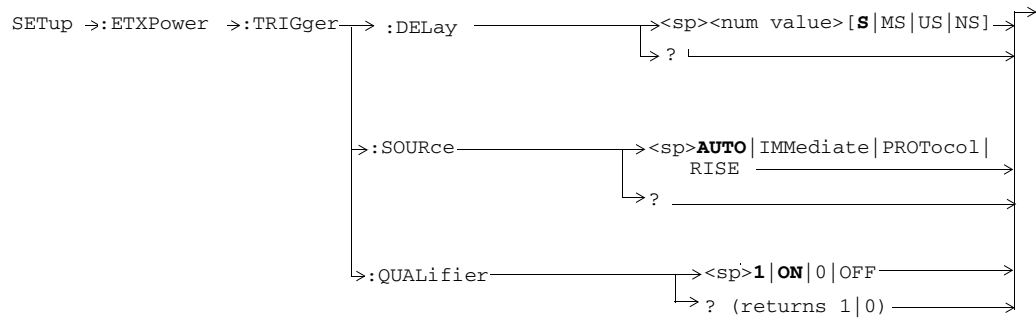


These commands are only applicable to EGPRS.

GPIB Syntax for E1968A, E6701C and E6704A

SETup:FBError

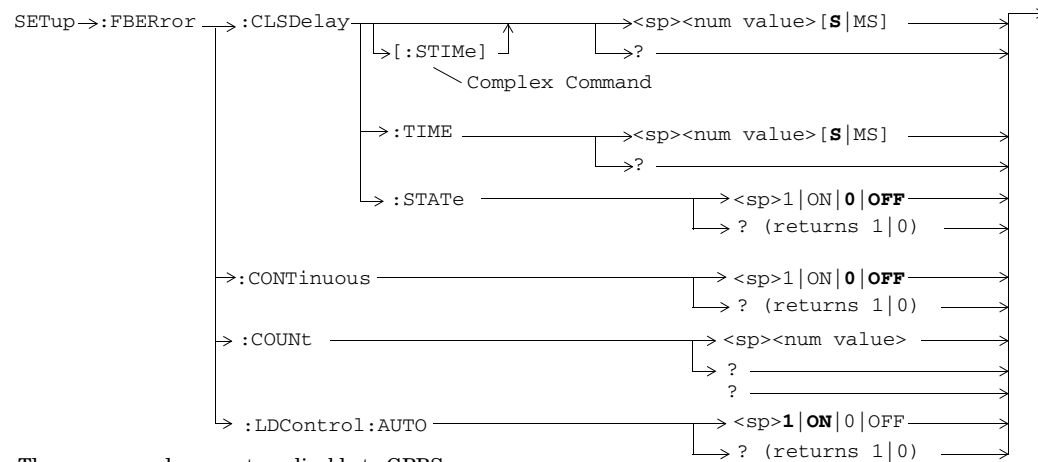


These commands are not applicable to GPRS.

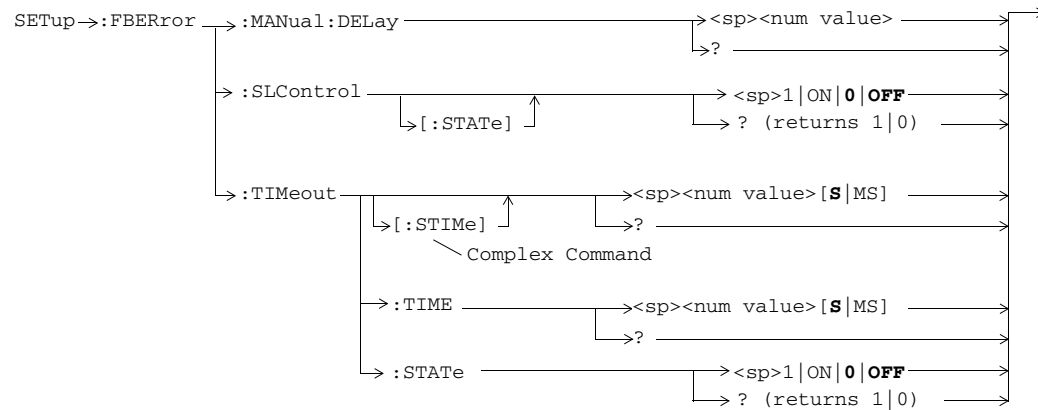

These commands are not applicable to GPRS.


SETup:FFERate

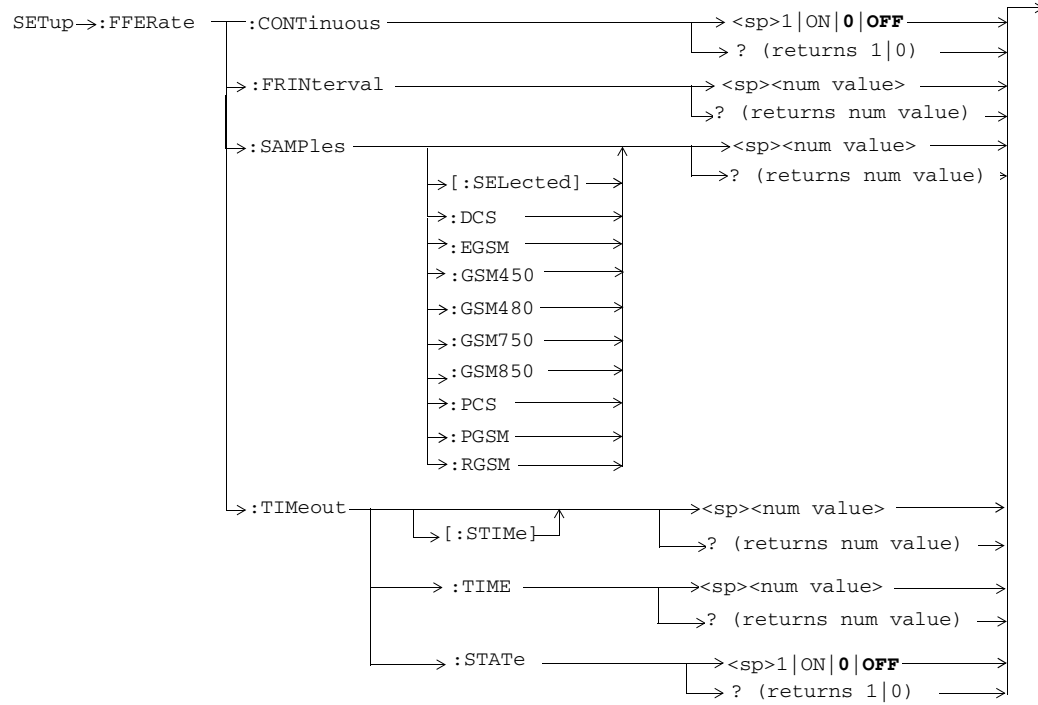

These commands are only applicable to the GSM/GPRS and EGPRS lab applications.


GPIB Syntax for E1968A, E6701C and E6704A

SETup:GBERror


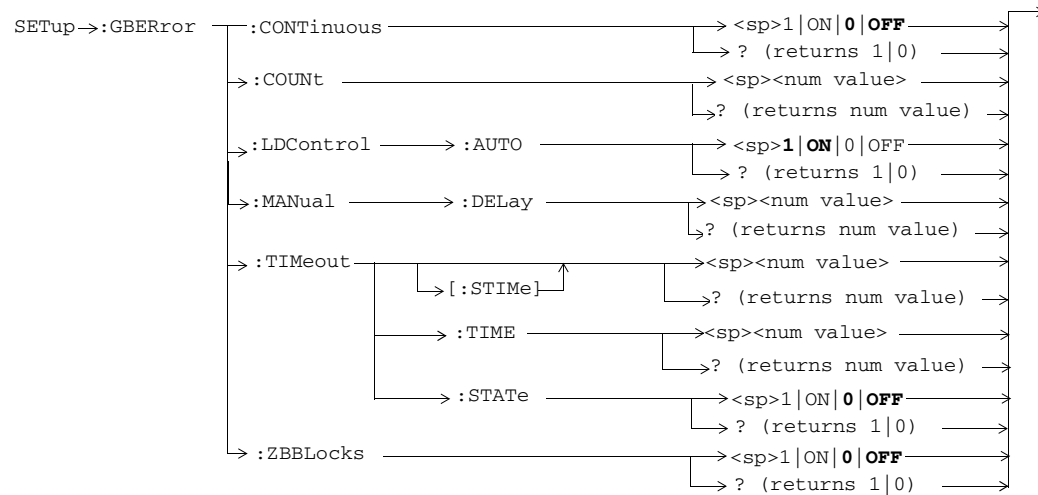


These commands are not applicable to GSM.


SETup:IQTuning

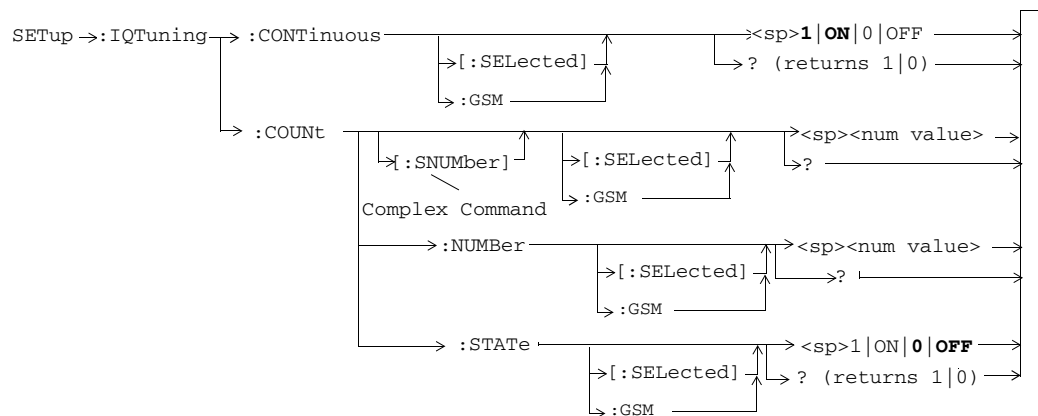


GPIO Syntax for E1968A, E6701C and E6704A

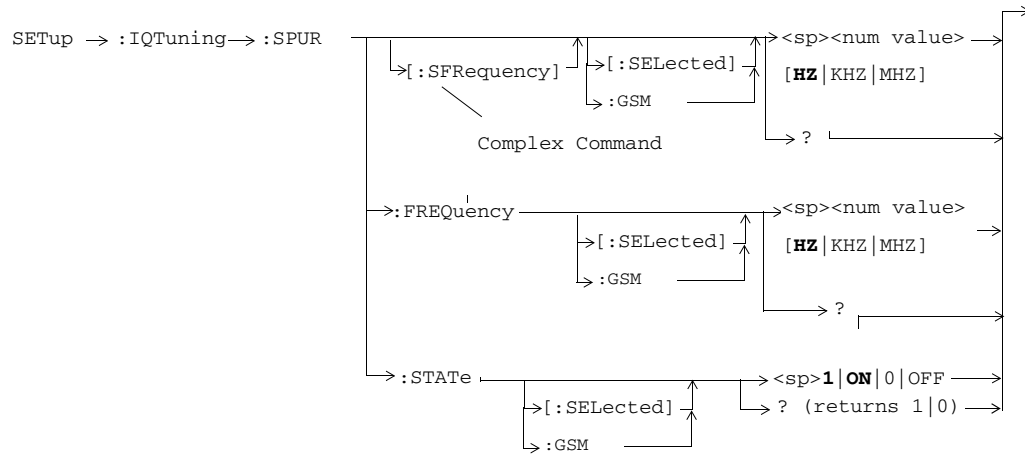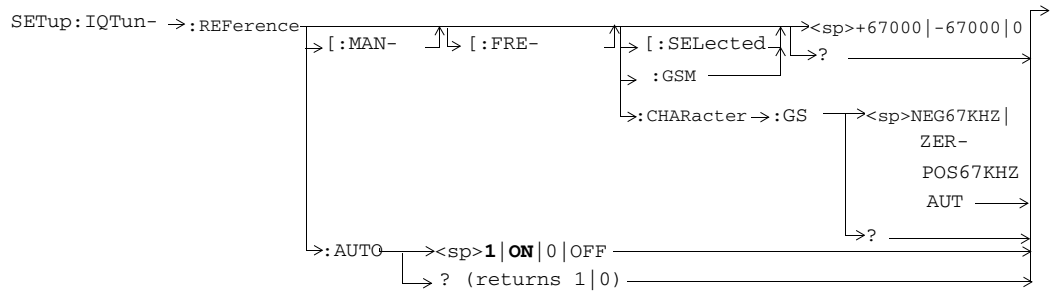


GPIB Syntax for E1968A, E6701C and E6704A

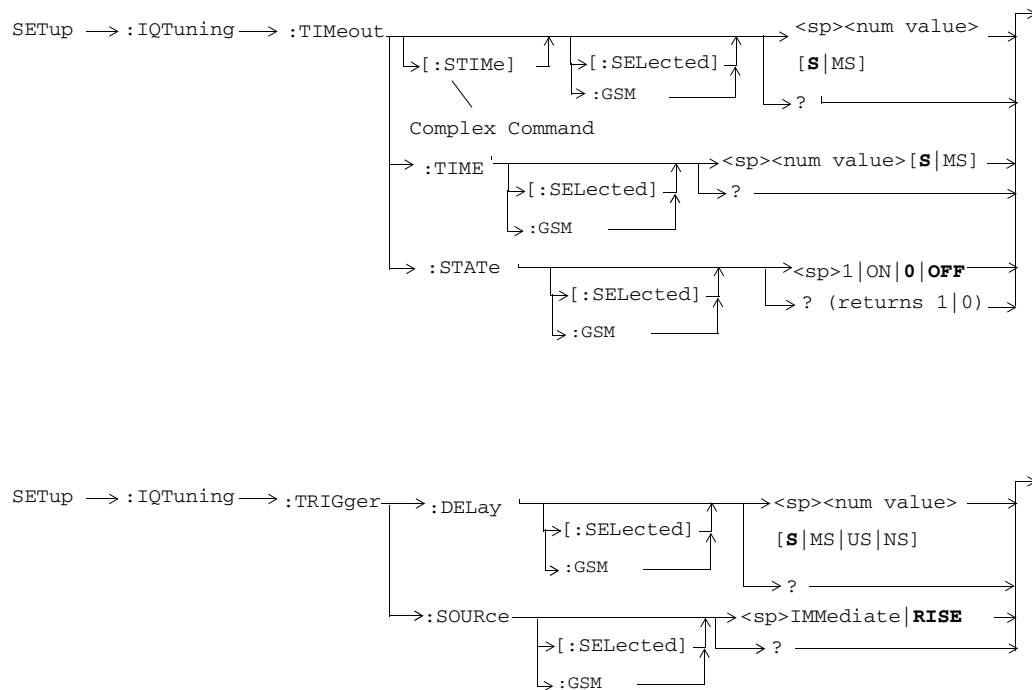

SETup:MTAudio

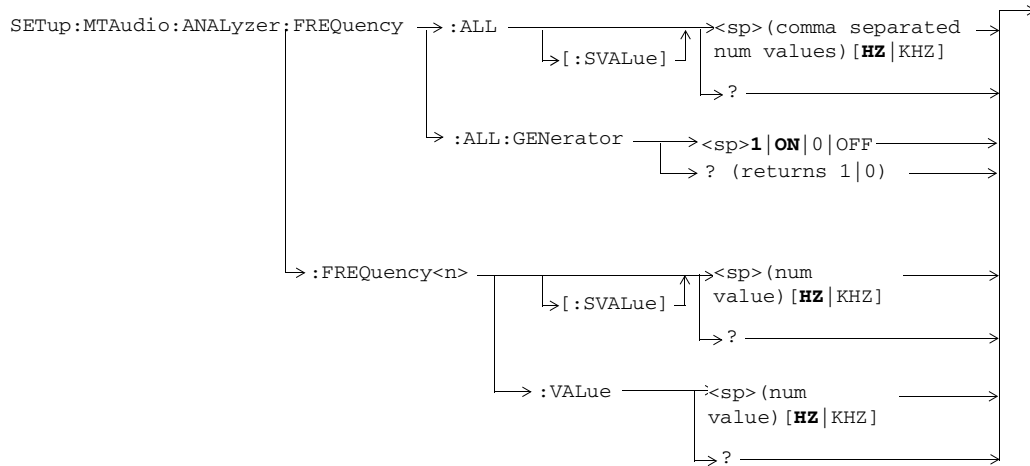


These commands are not applicable to GPRS or EGPRS.

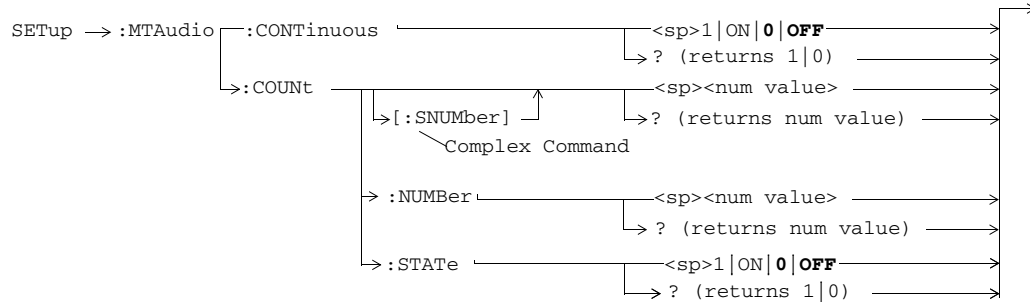


These commands are not applicable to GPRS or EGPRS.

GPiB Syntax for E1968A, E6701C and E6704A

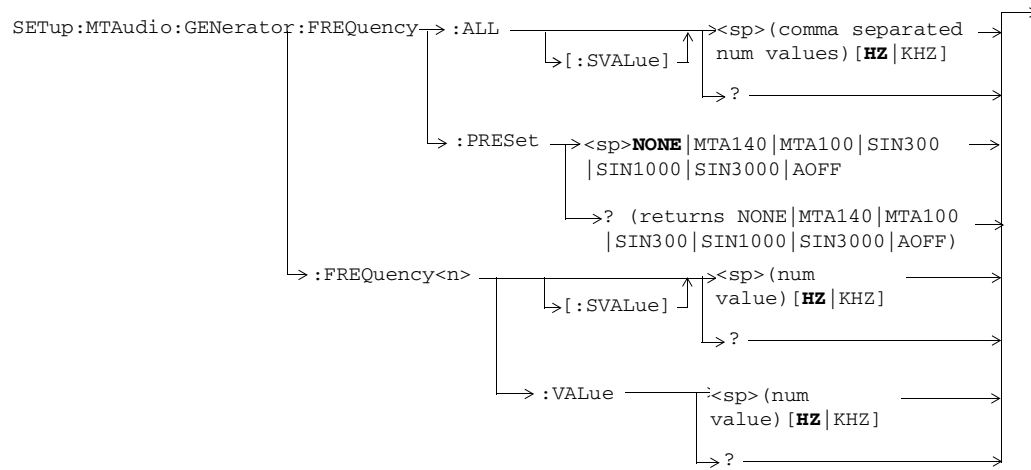


These commands are not applicable to GPRS or EGPRS.

GPIB Syntax for E1968A, E6701C and E6704A

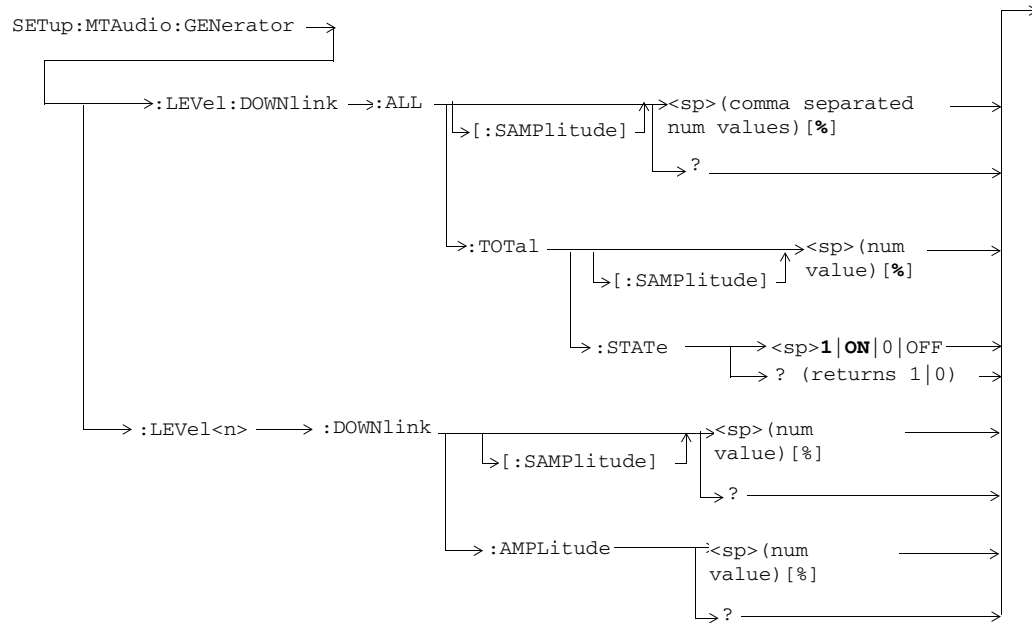


These commands are not applicable to GPRS or EGPRS.

GPIB Syntax for E1968A, E6701C and E6704A

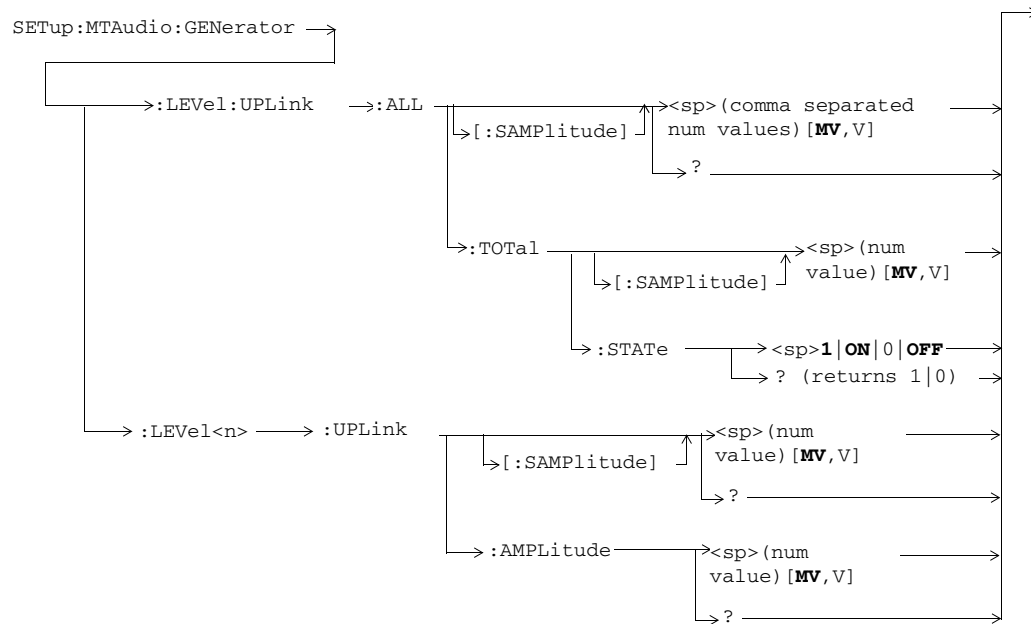


These commands are not applicable to GPRS or EGPRS.

GPiB Syntax for E1968A, E6701C and E6704A

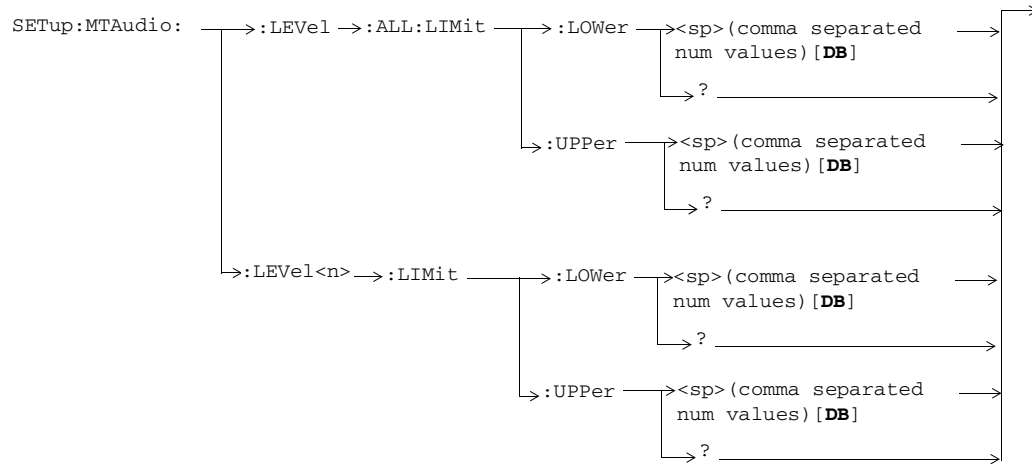


These commands are not applicable to GPRS or EGPRS.

GPIB Syntax for E1968A, E6701C and E6704A

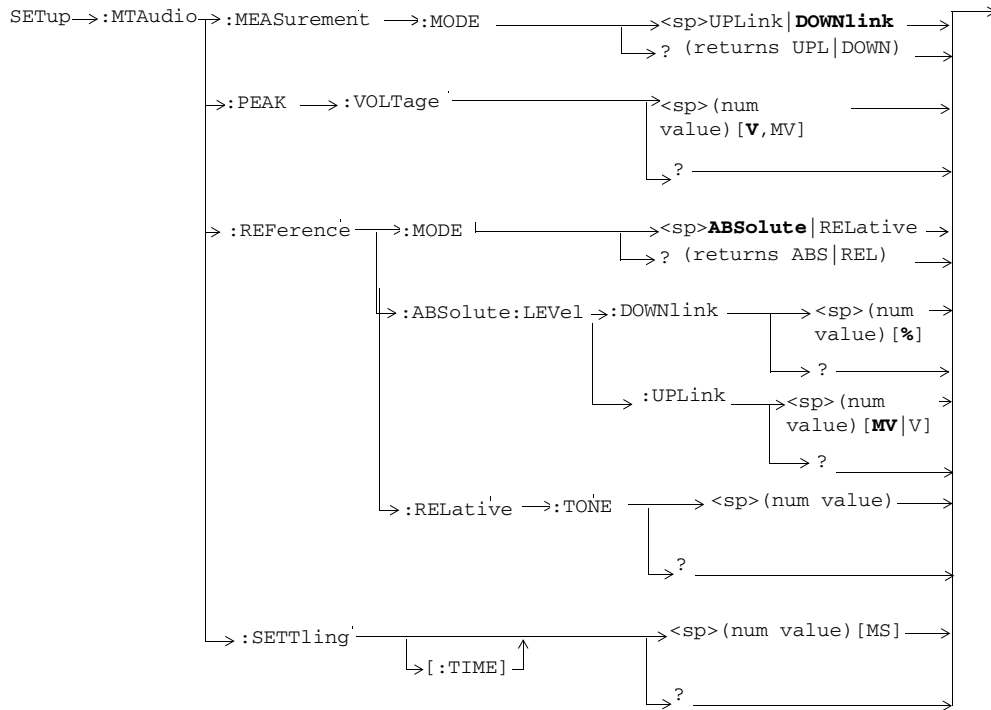

These commands are not applicable to GPRS.


GPIB Syntax for E1968A, E6701C and E6704A

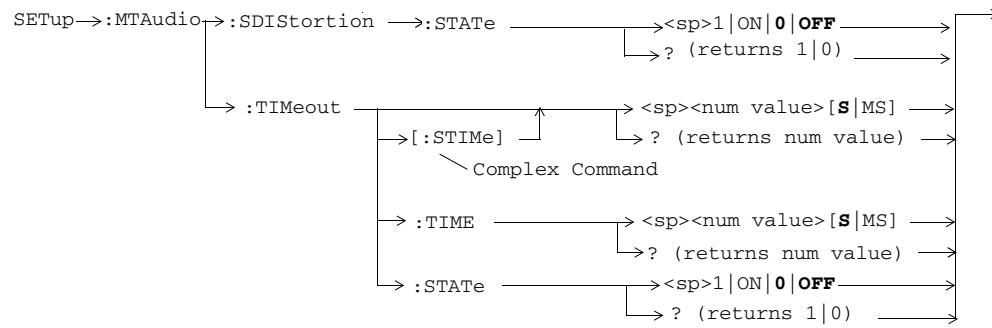




These commands are not applicable to GPRS and EGPRS.

GPIB Syntax for E1968A, E6701C and E6704A


SETup:ORFSpectrum

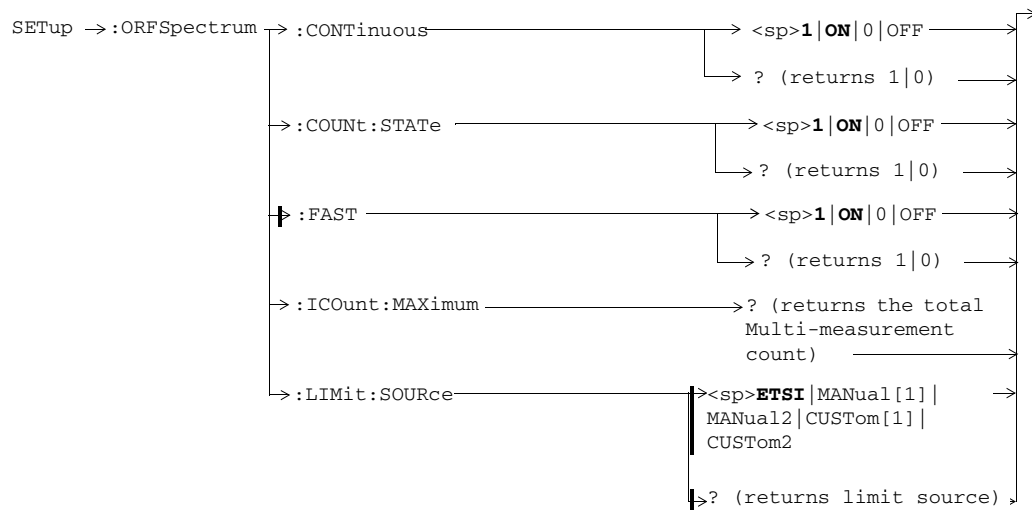



GPiB Syntax for E1968A, E6701C and E6704A

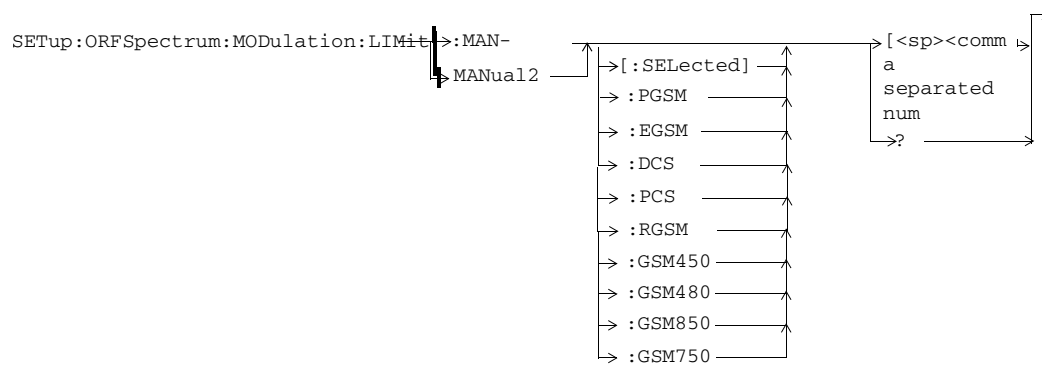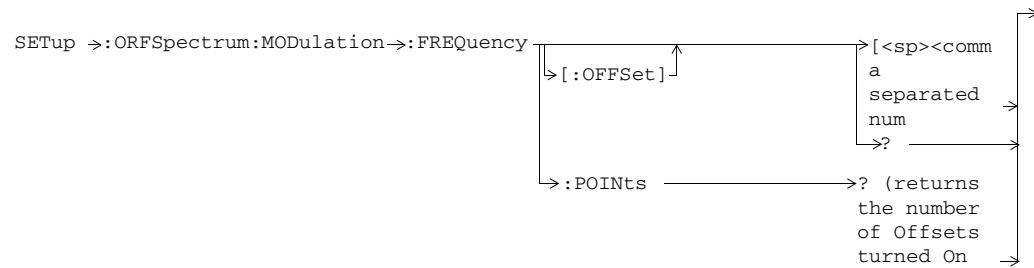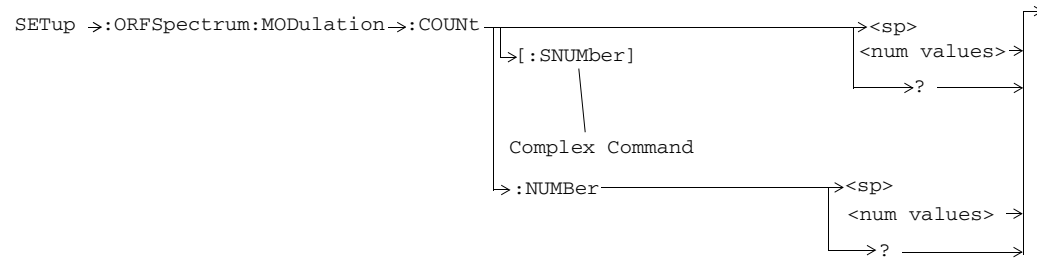



GPIB Syntax for E1968A, E6701C and E6704A

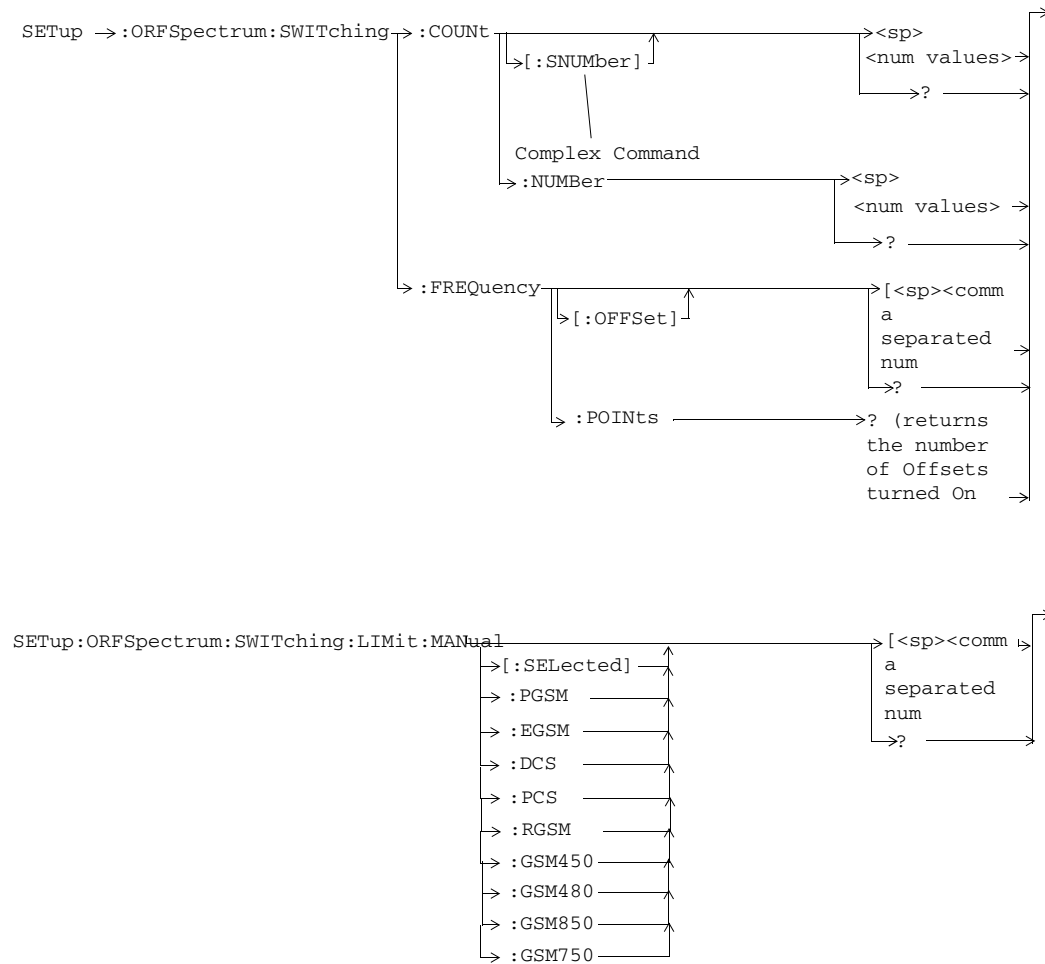



GPIB Syntax for E1968A, E6701C and E6704A

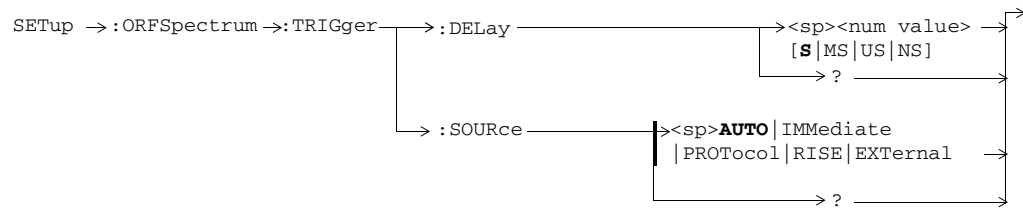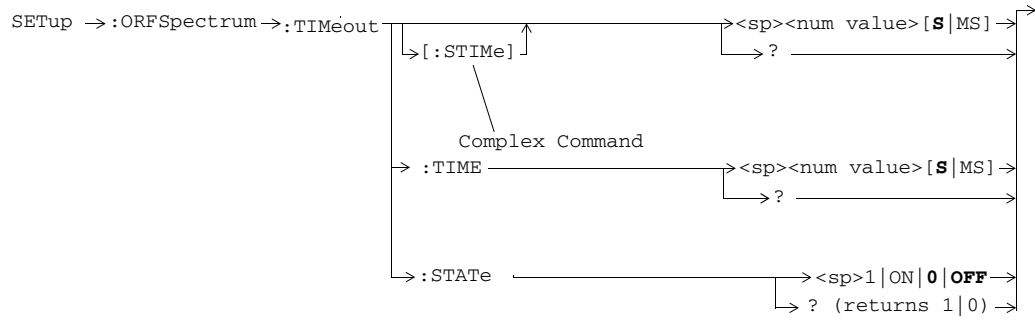


SETup:PFERror

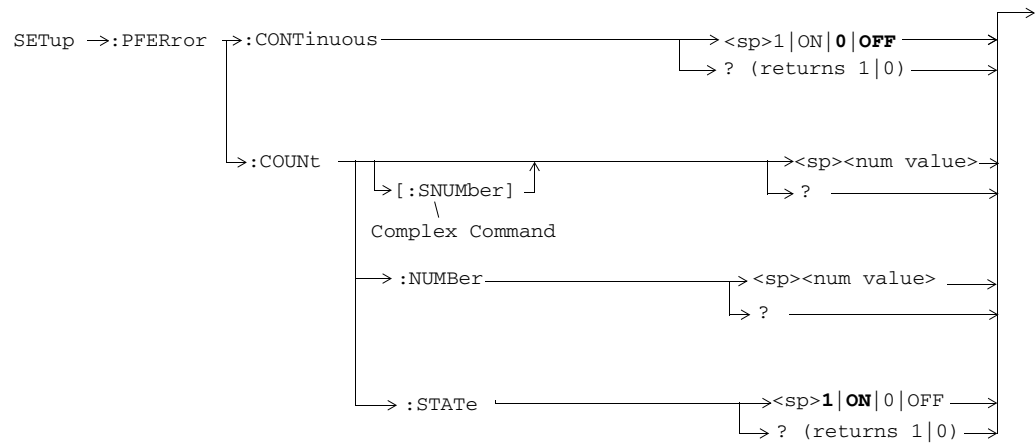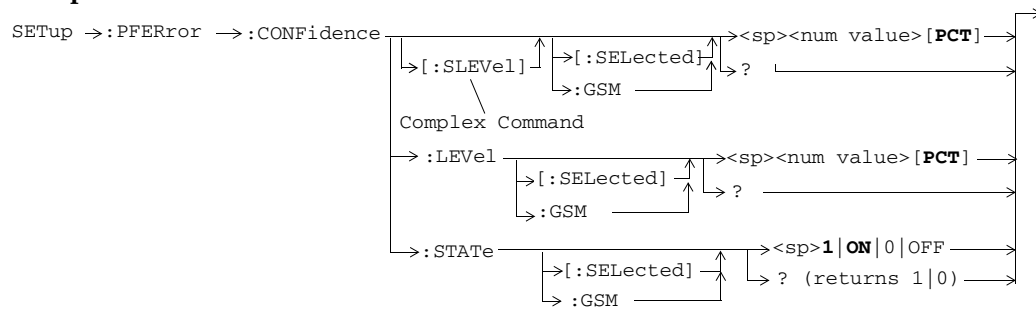



GPIB Syntax for E1968A, E6701C and E6704A

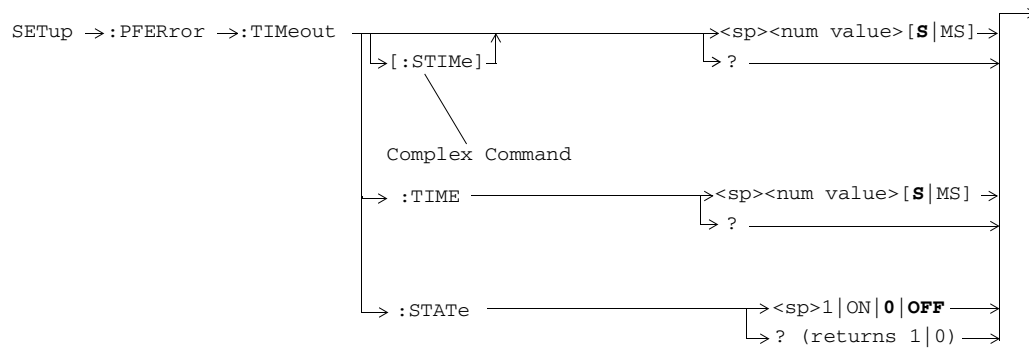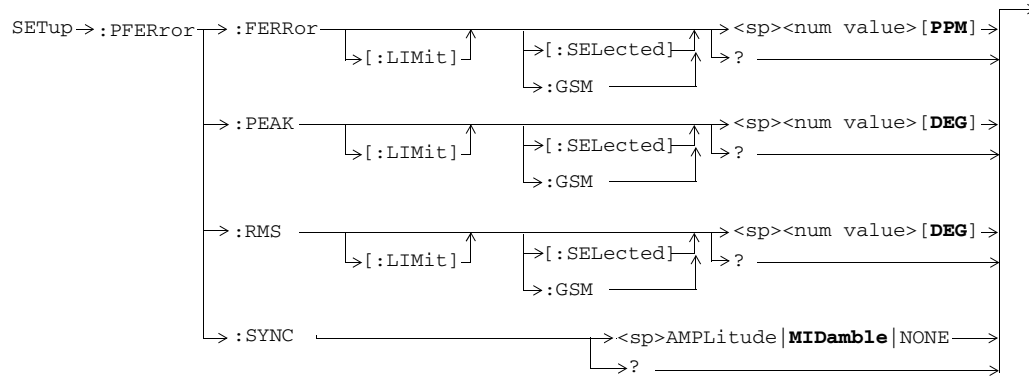


GPiB Syntax for E1968A, E6701C and E6704A

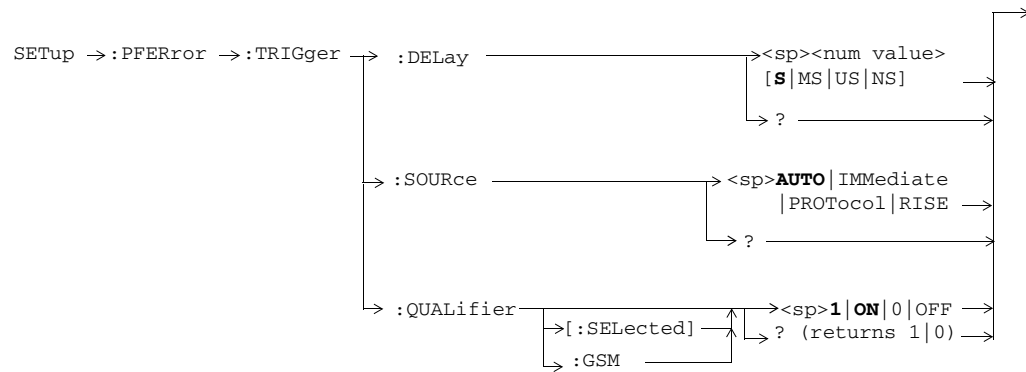



SETup:PVTime

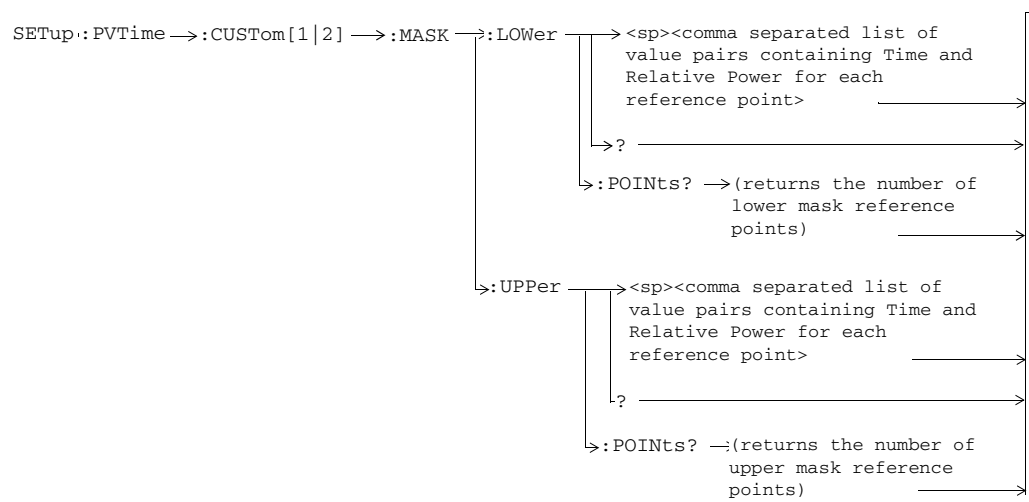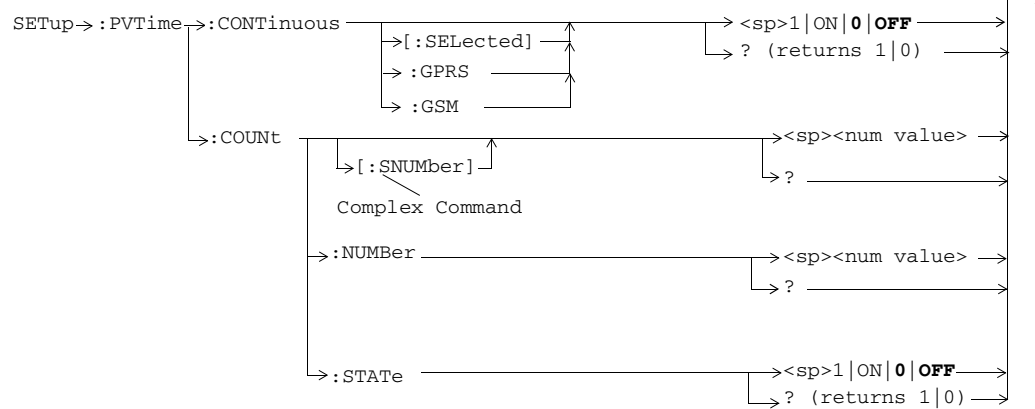


GPIB Syntax for E1968A, E6701C and E6704A

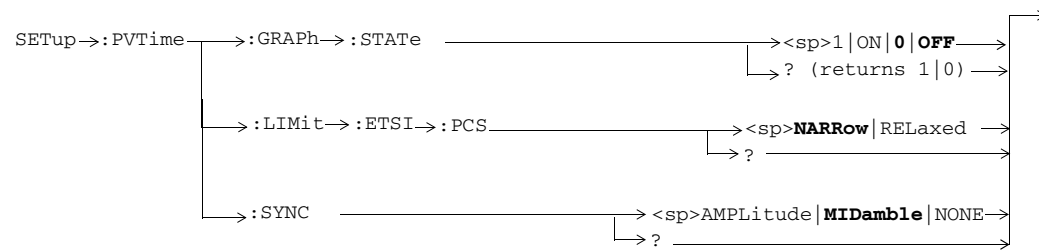


GPIB Syntax for E1968A, E6701C and E6704A

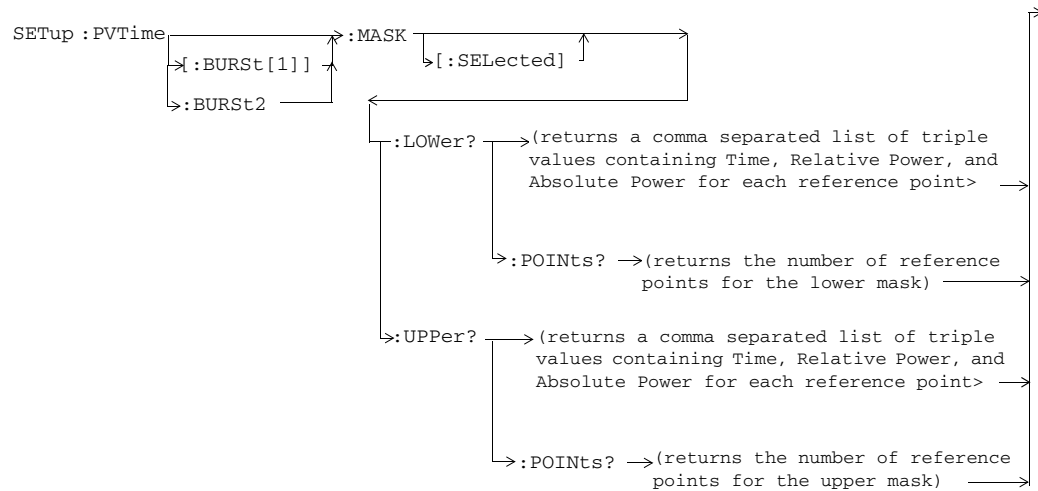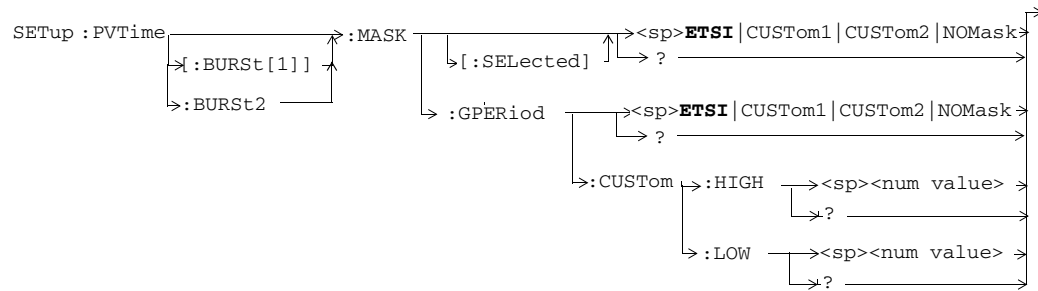


GPiB Syntax for E1968A, E6701C and E6704A

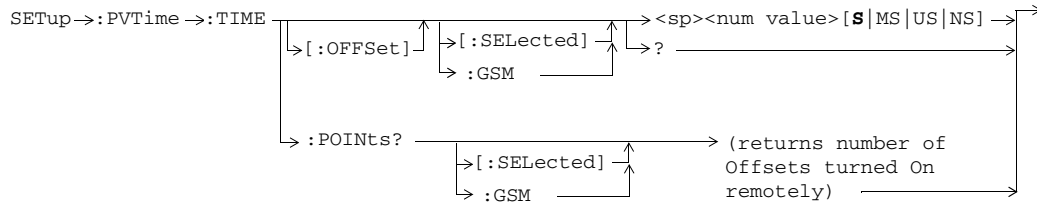


These commands are not applicable to GPRS.

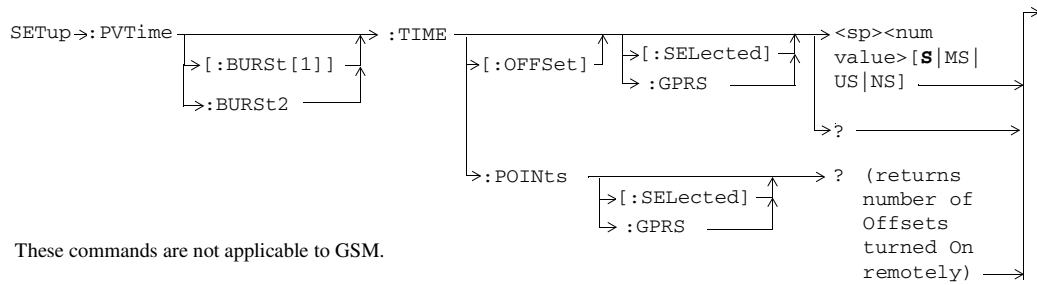

These commands are not applicable to GSM.


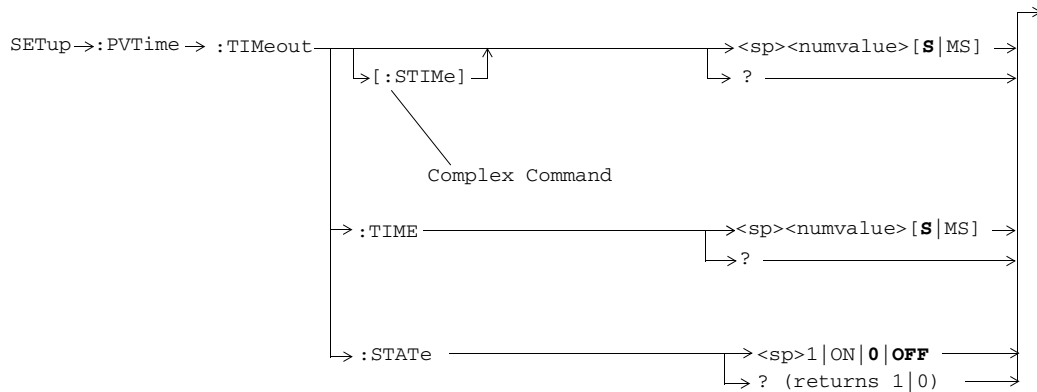


GPiB Syntax for E1968A, E6701C and E6704A

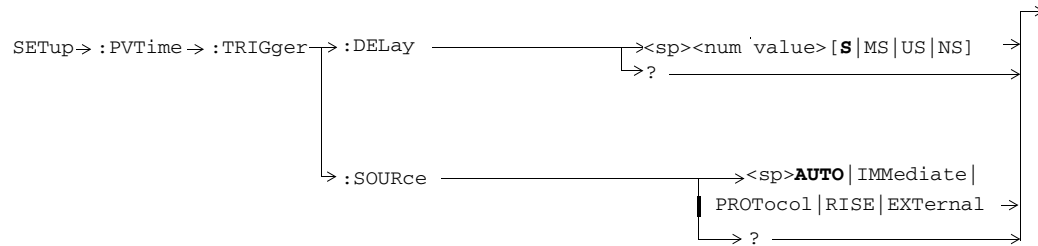


GPiB Syntax for E1968A, E6701C and E6704A

SETup:SMONitor

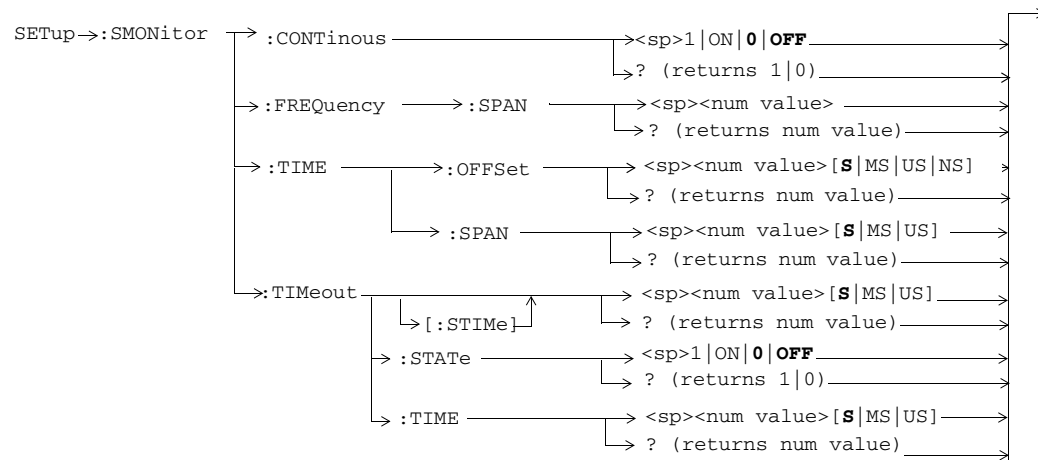
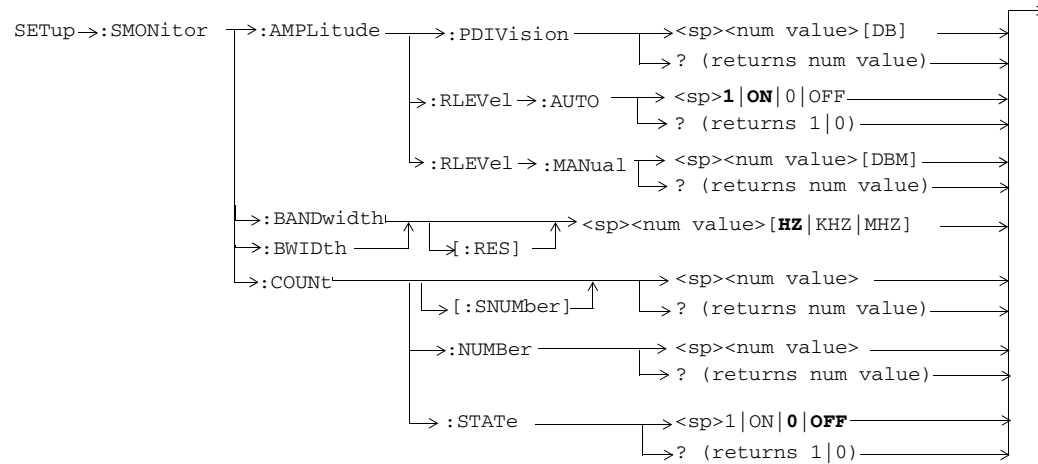


GPiB Syntax for E1968A, E6701C and E6704A

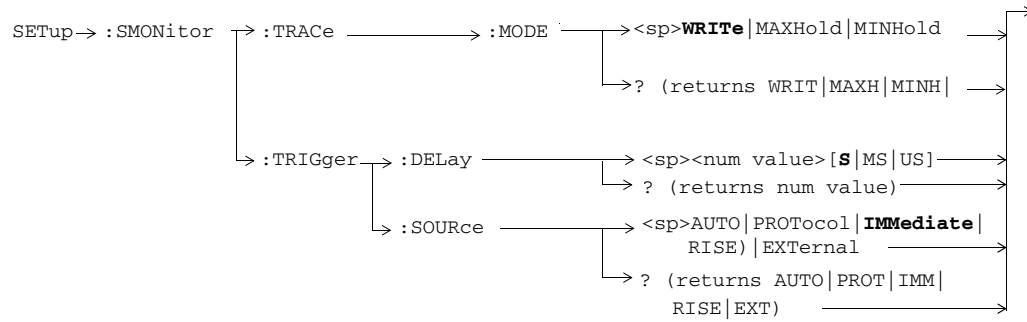


GPiB Syntax for E1968A, E6701C and E6704A

SEtup:TXPower

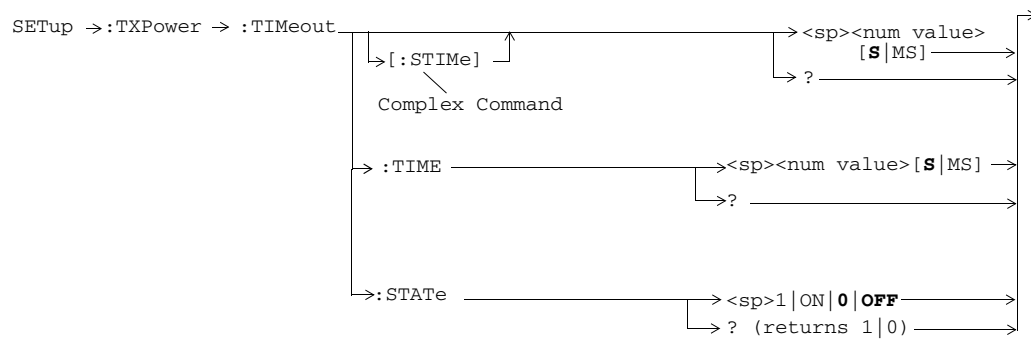
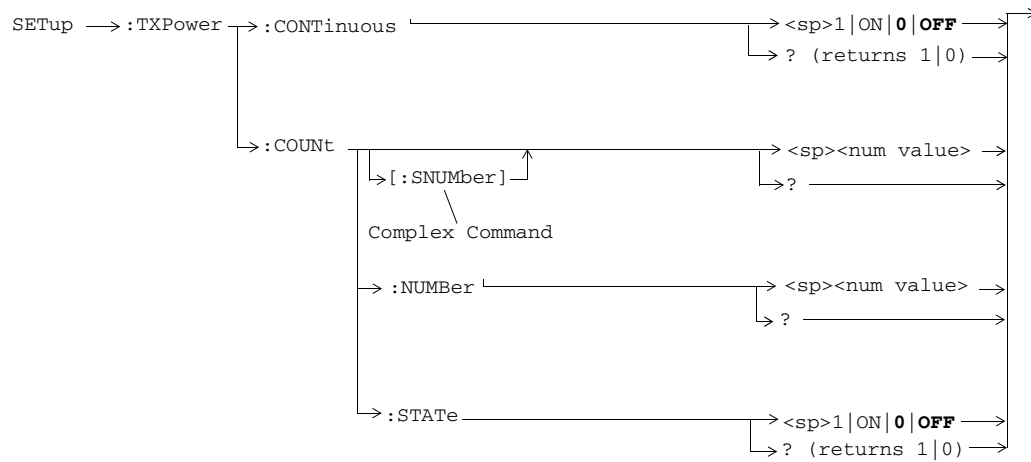


GPIB Syntax for E1968A, E6701C and E6704A


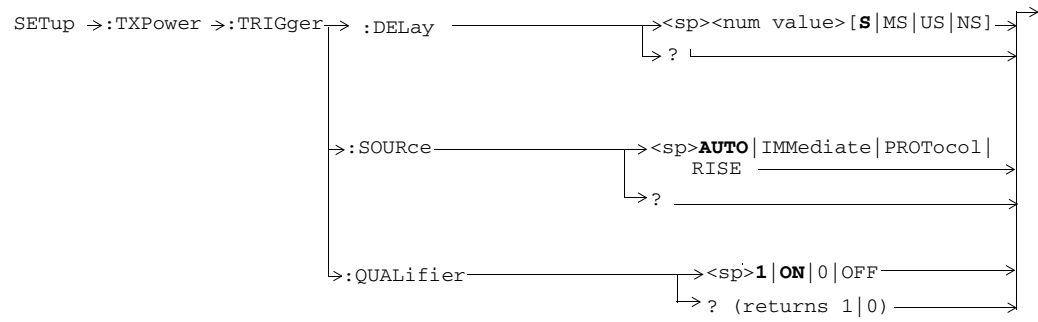


GPIB Syntax for E1968A, E6701C and E6704A



STATus:OPERation

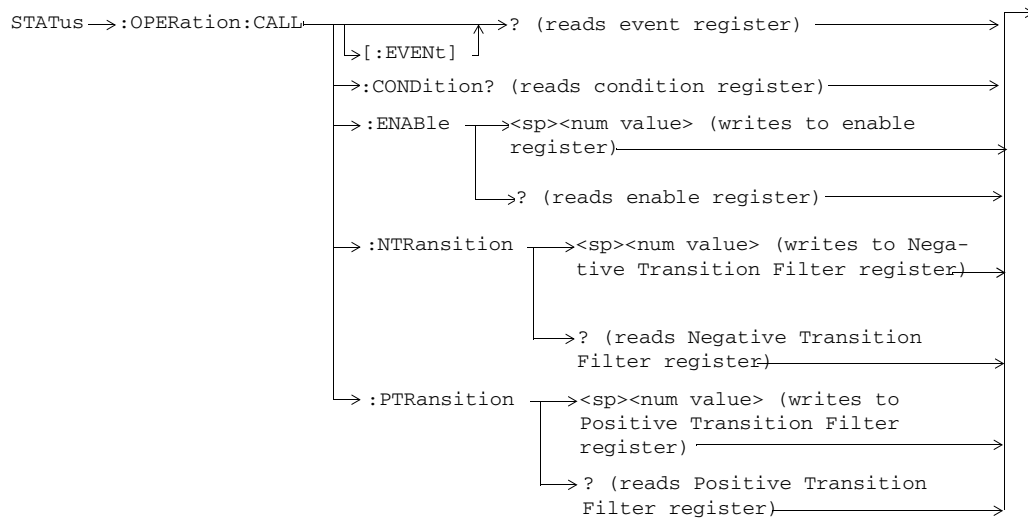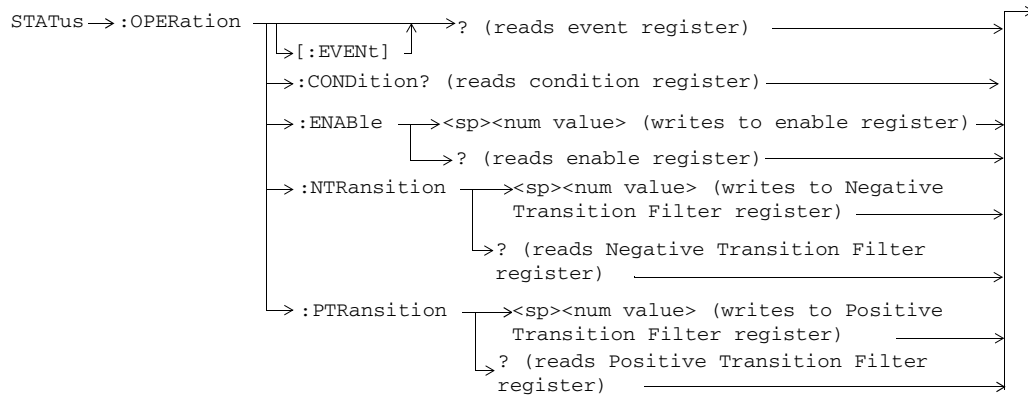



GPIB Syntax for E1968A, E6701C and E6704A

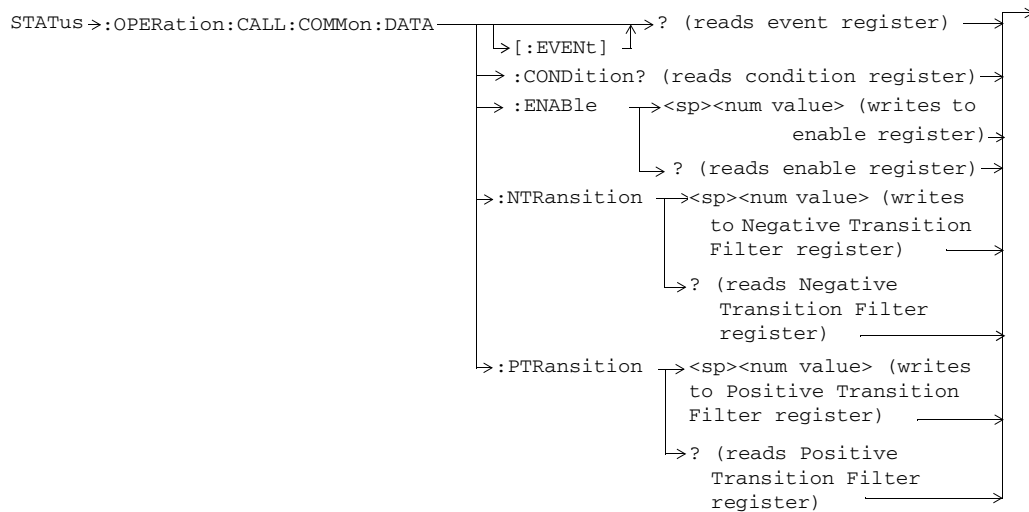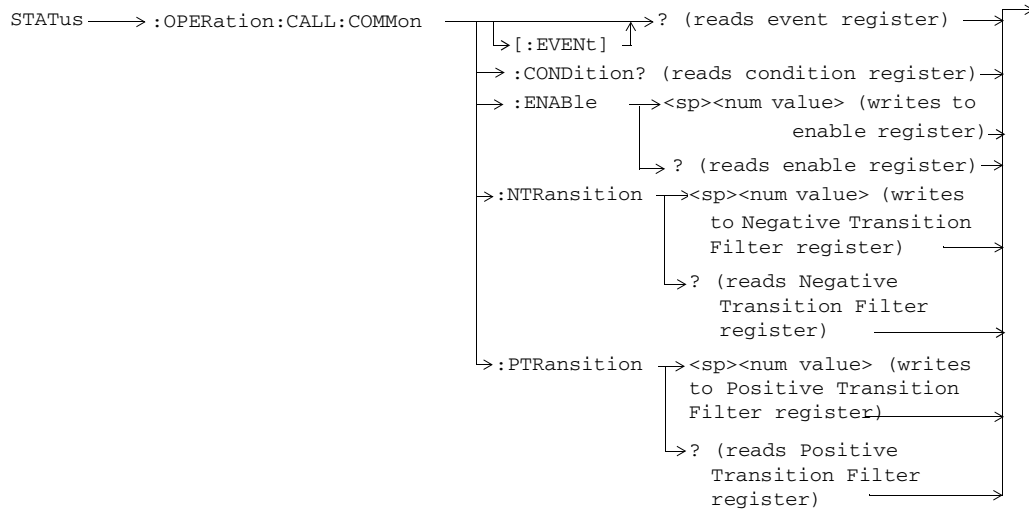



GPIB Syntax for E1968A, E6701C and E6704A

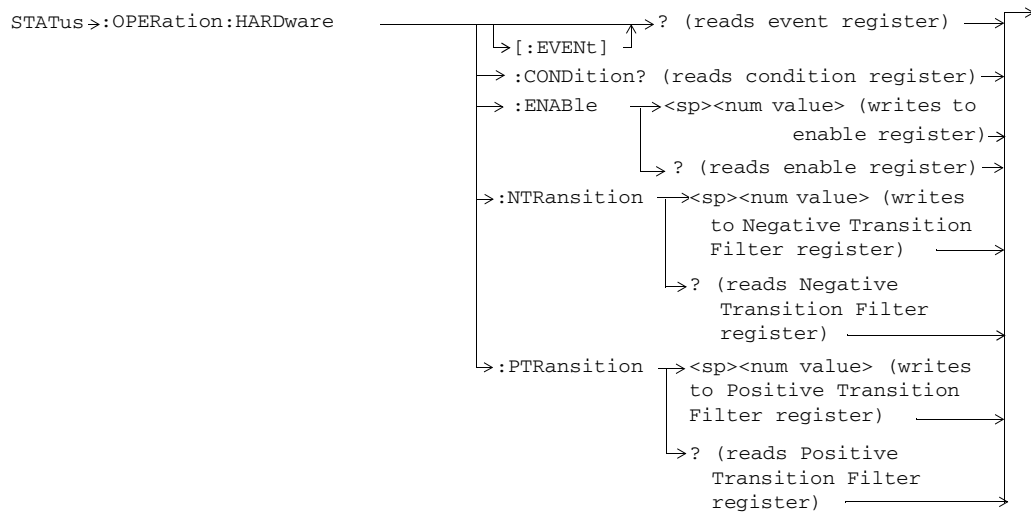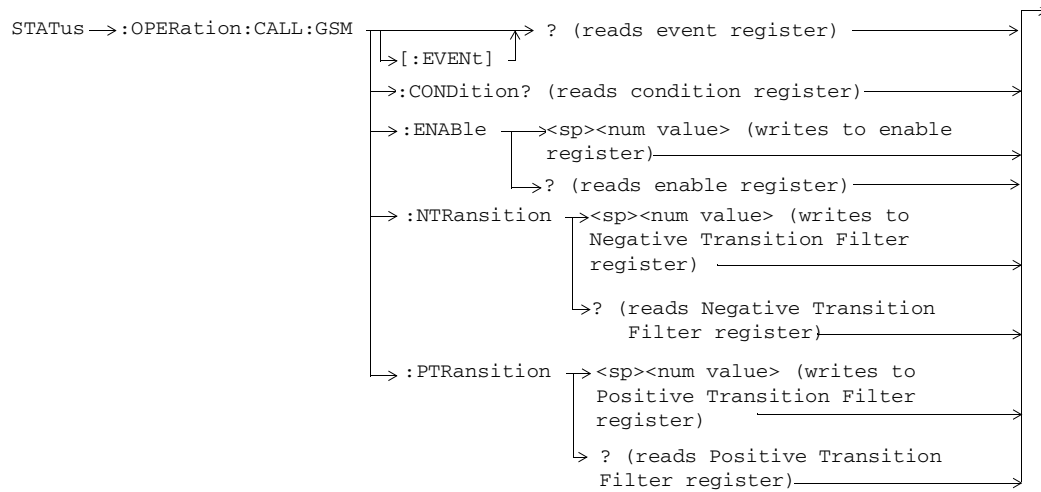

GPIB Syntax for E1968A, E6701C and E6704A

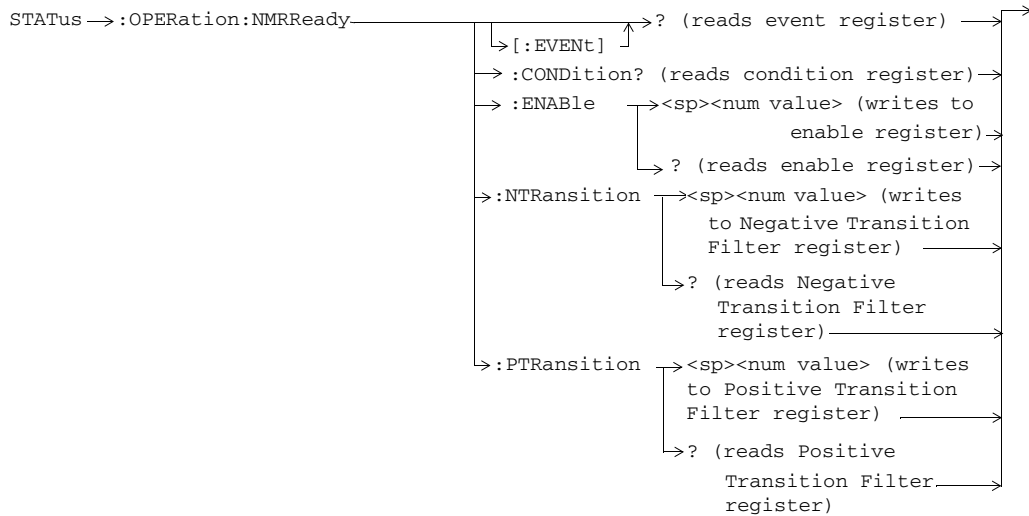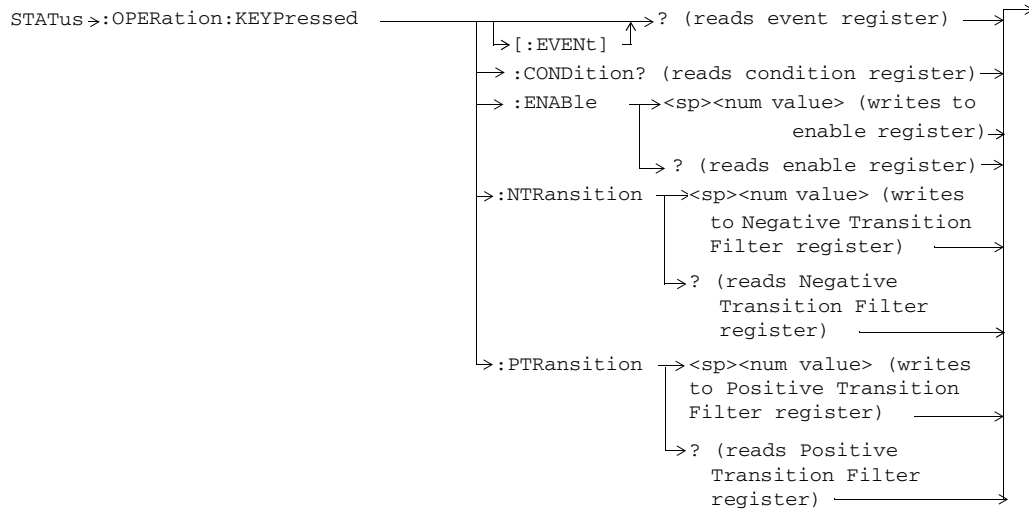


GPIB Syntax for E1968A, E6701C and E6704A

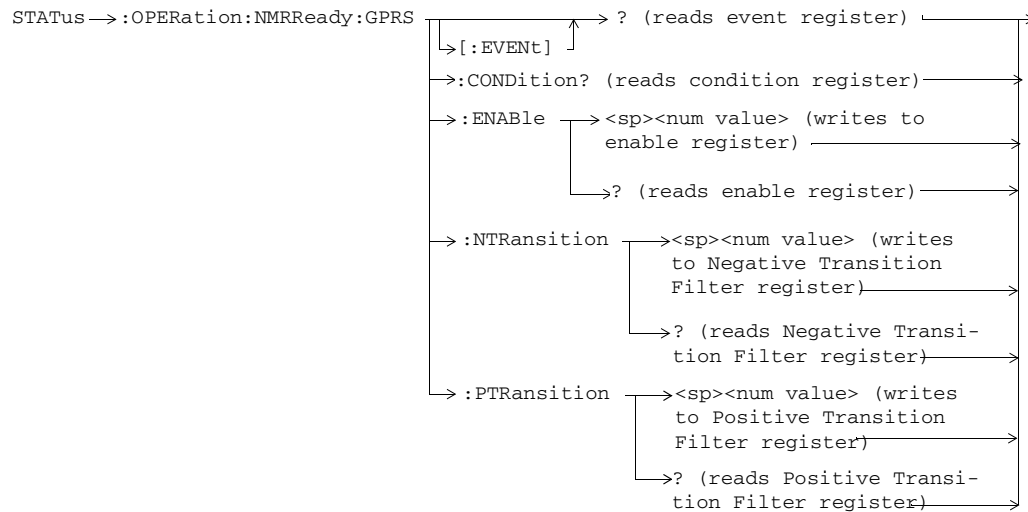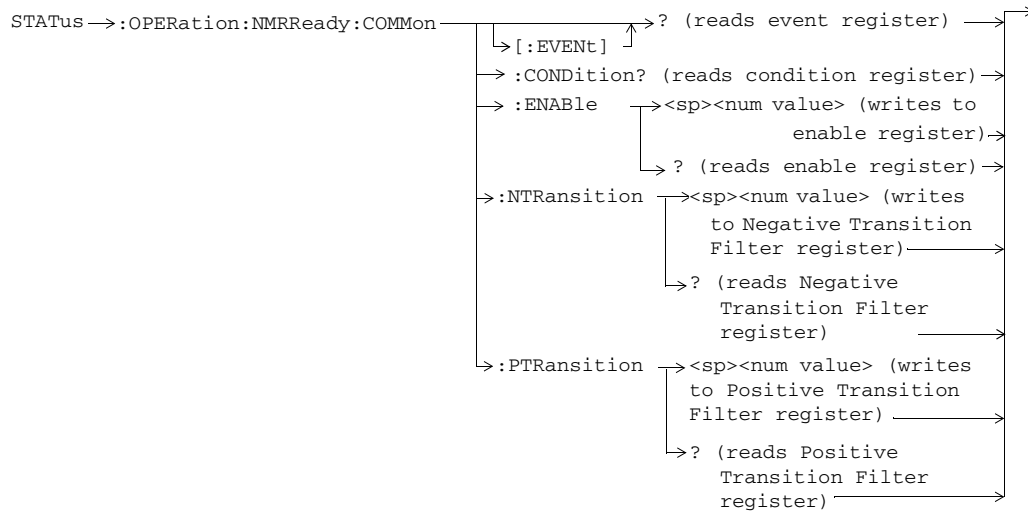



These commands are not applicable to GSM.

GPIB Syntax for E1968A, E6701C and E6704A


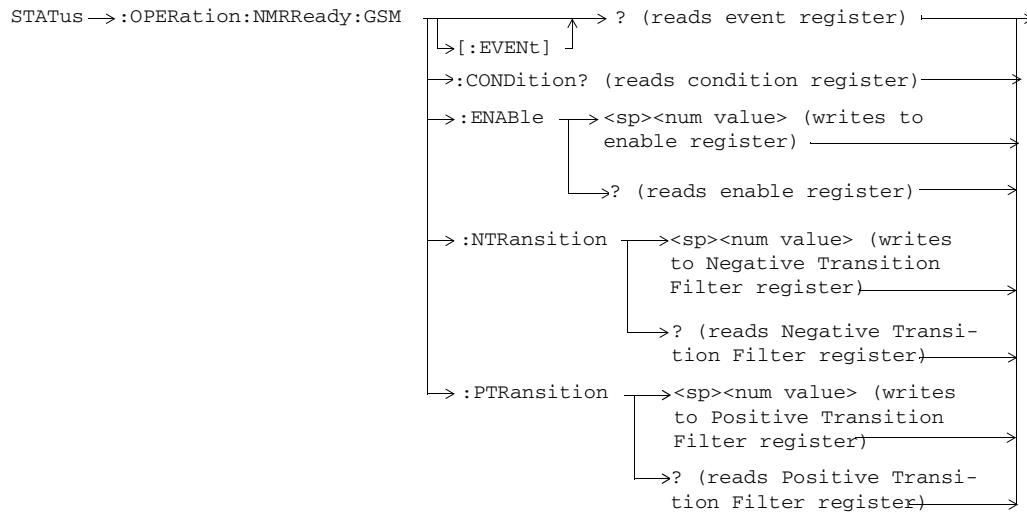


STATus:PRESet

STATus → :PRESet →

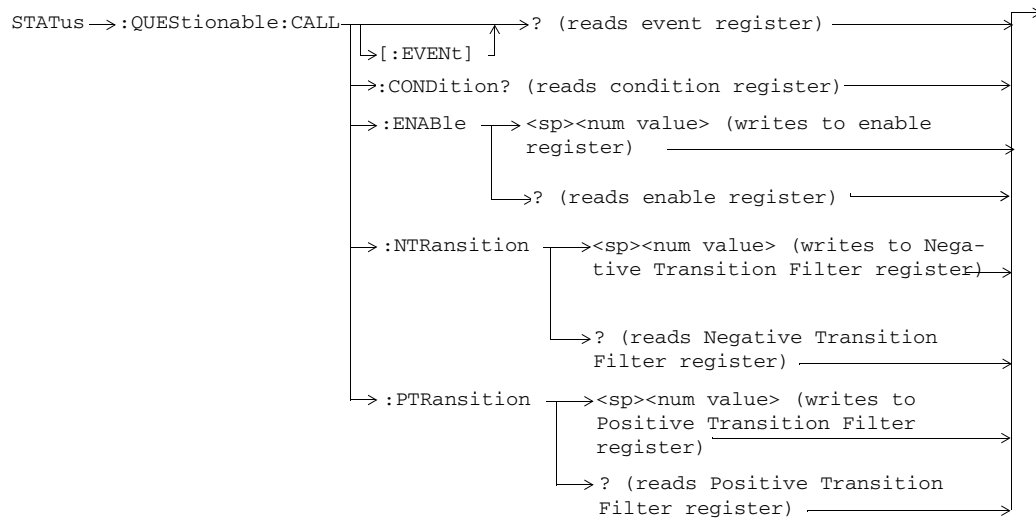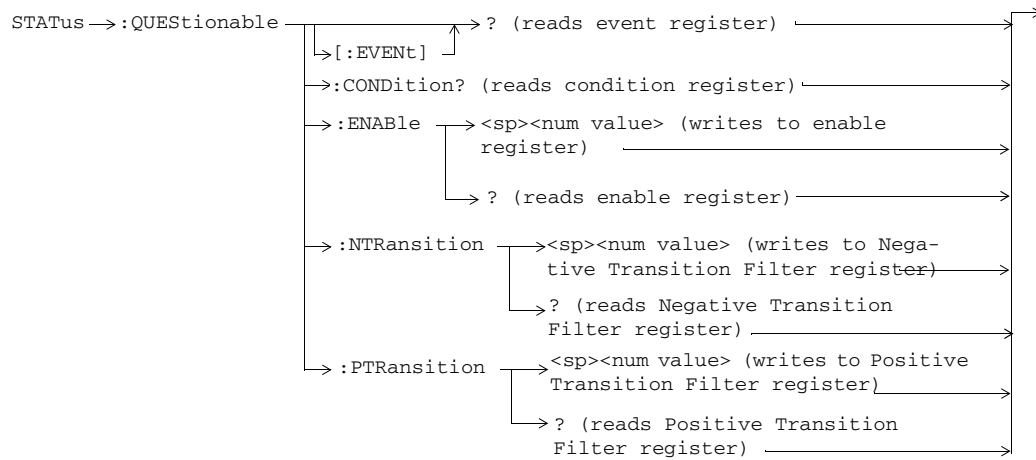
STATus:QUEStionable

GPIB Syntax for E1968A, E6701C and E6704A

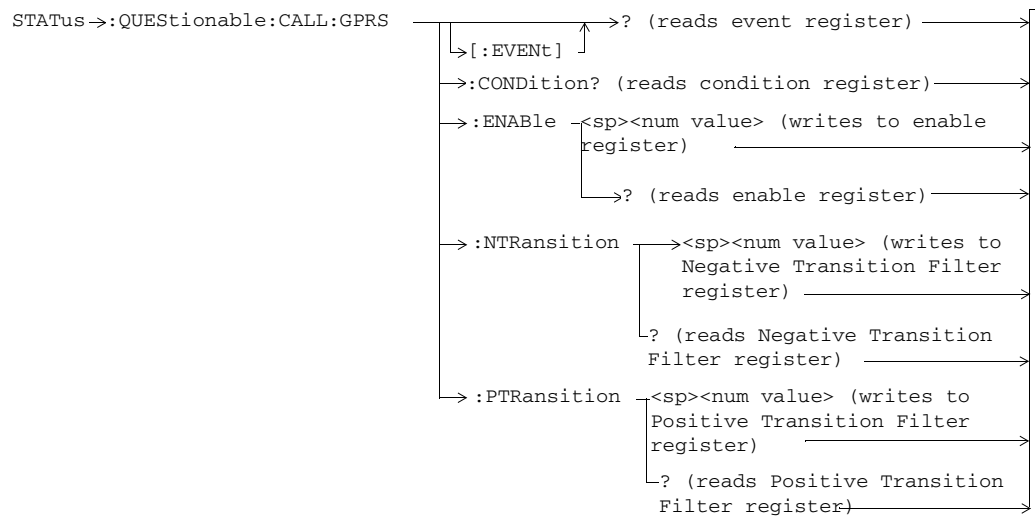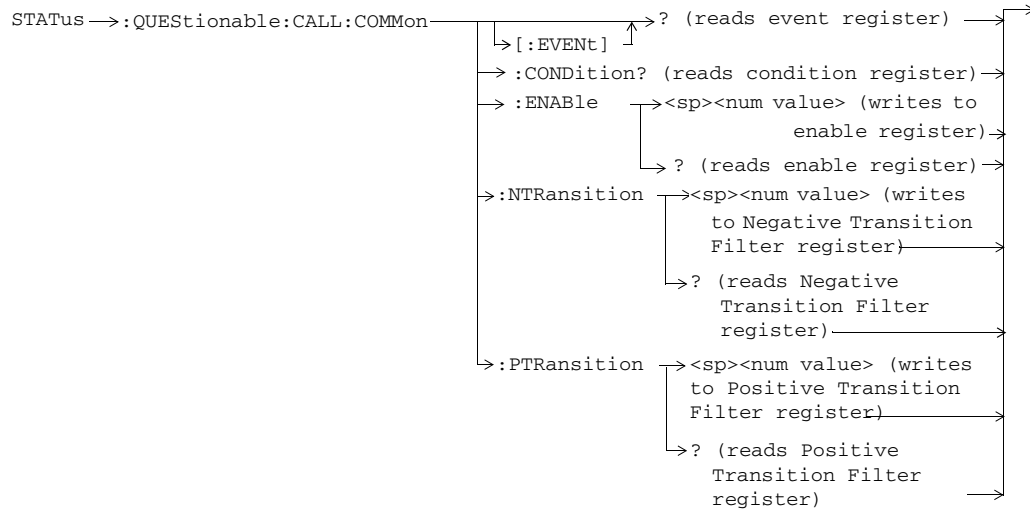


These commands are not applicable to GSM.



GPIB Syntax for E1968A, E6701C and E6704A

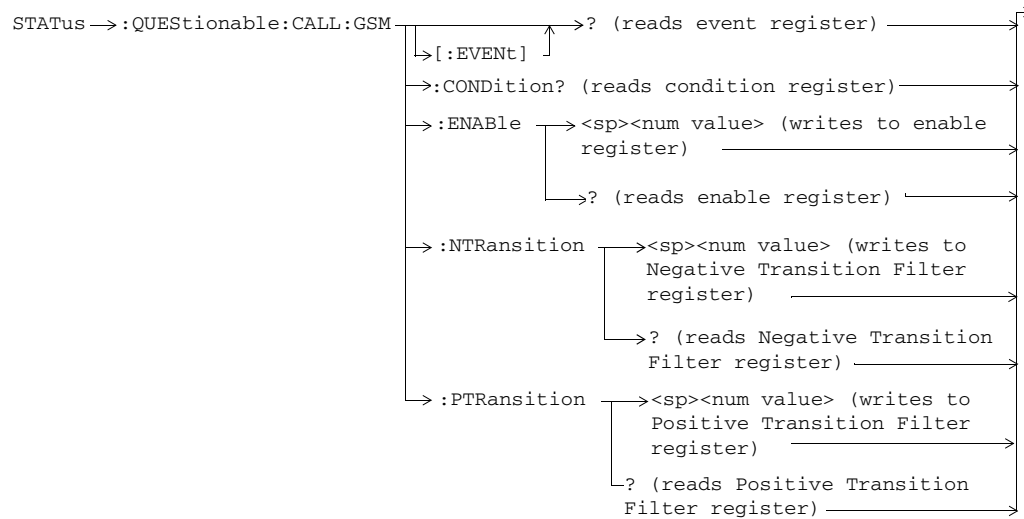

GPIB Syntax for E1968A, E6701C and E6704A

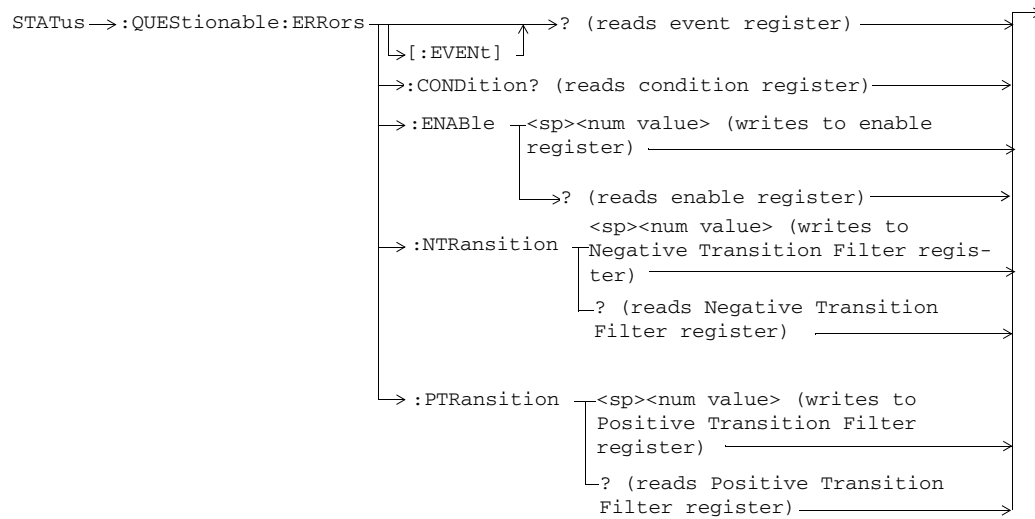


GPiB Syntax for E1968A, E6701C and E6704A

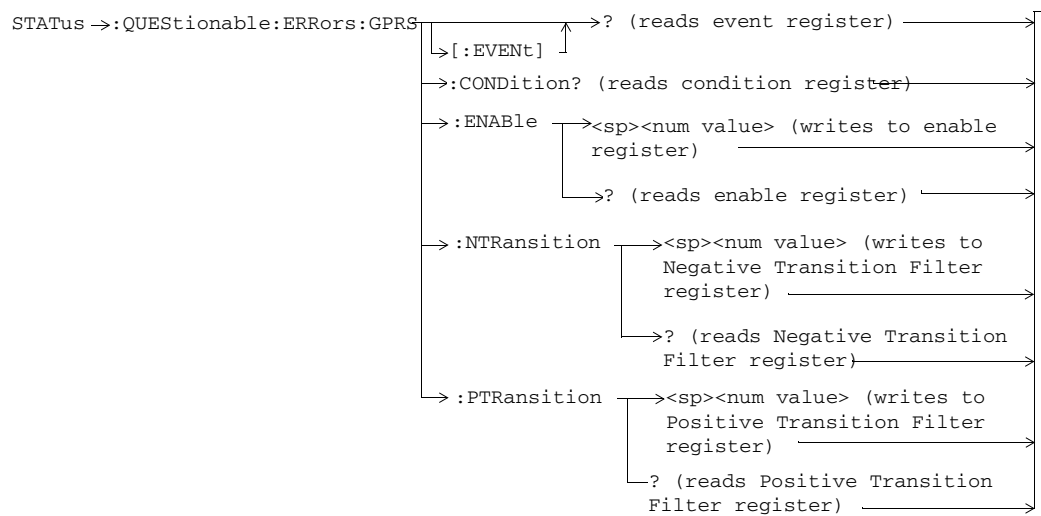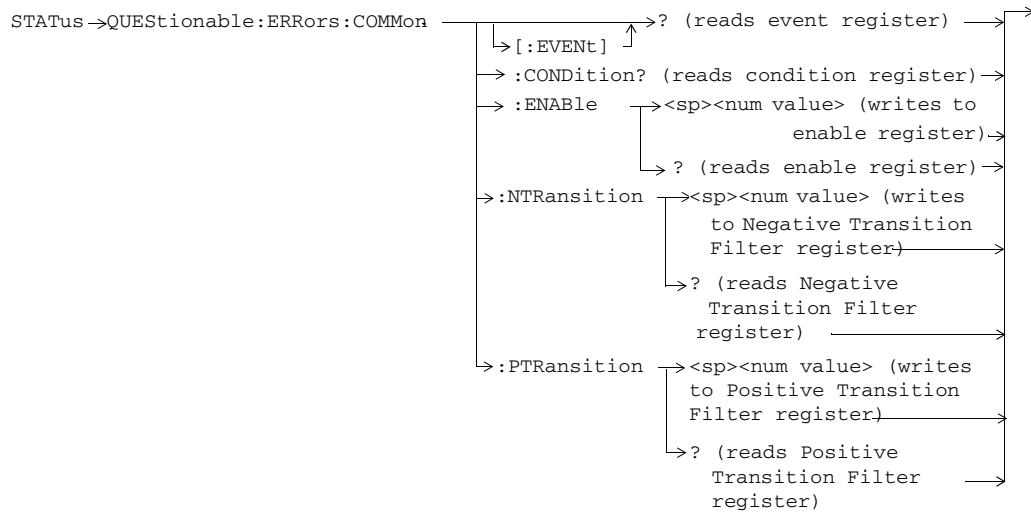


These commands are not applicable to GSM.

GPiB Syntax for E1968A, E6701C and E6704A

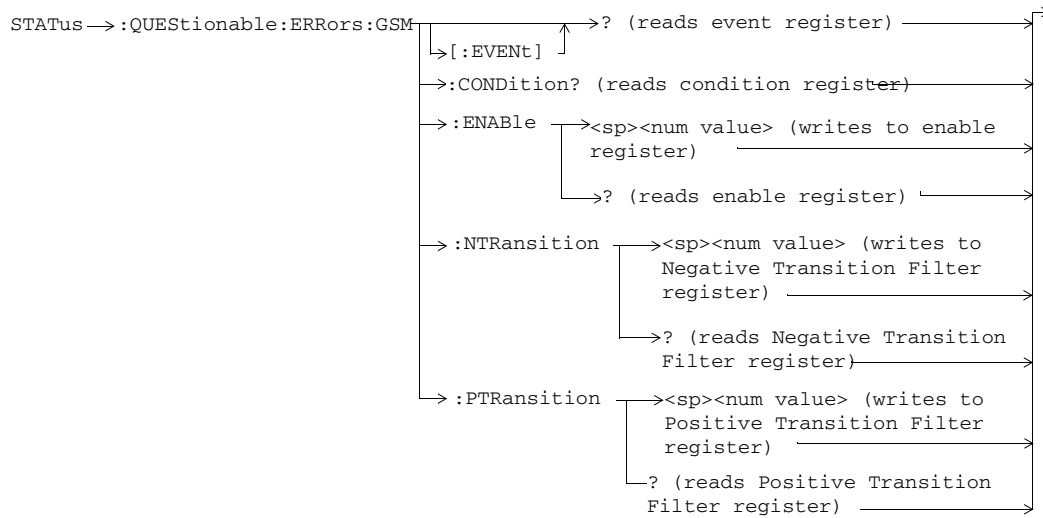

These commands are not applicable to GPRS.

GPIB Syntax for E1968A, E6701C and E6704A

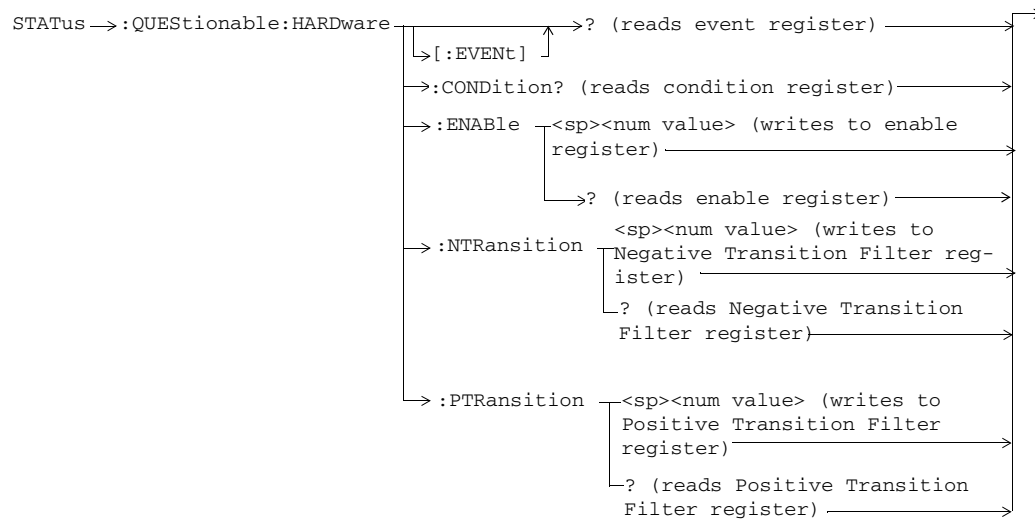

Status Byte Register

***STB?**
 *STB? →

Standard Event Status Register



***ESR?**
 *ESR? →
Reads and clears the Std Event Status Register.

***ESE?**
 *ESE? →
Reads the Std Event Status Register Enable Register



***ESE**
 *ESE →
Writes to the Std Event Status Register Enable Register

GPIB Syntax for E1968A, E6701C and E6704A


SYSTem:APPLication

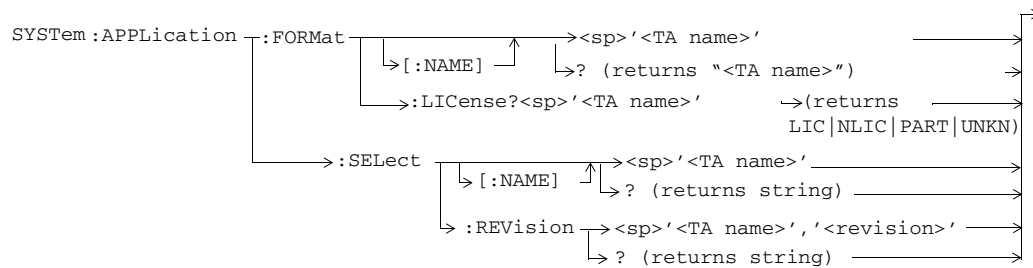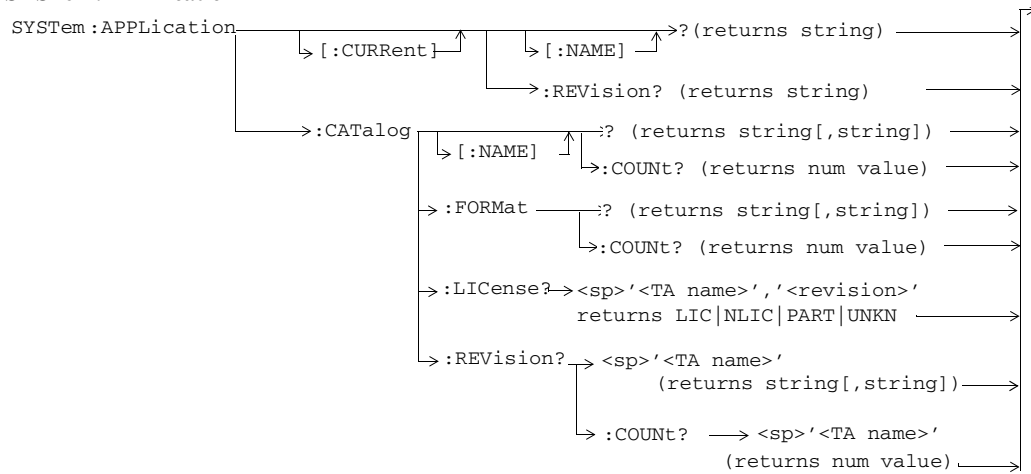


SYSTem:AUDio

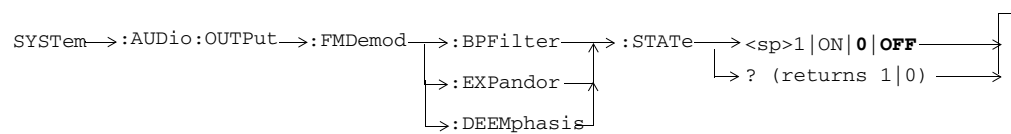 

SYSTem:BEEPer

 


SYSTem:CONFiGure


 


GPIB Syntax for E1968A, E6701C and E6704A


SYSTem:COMMunicate

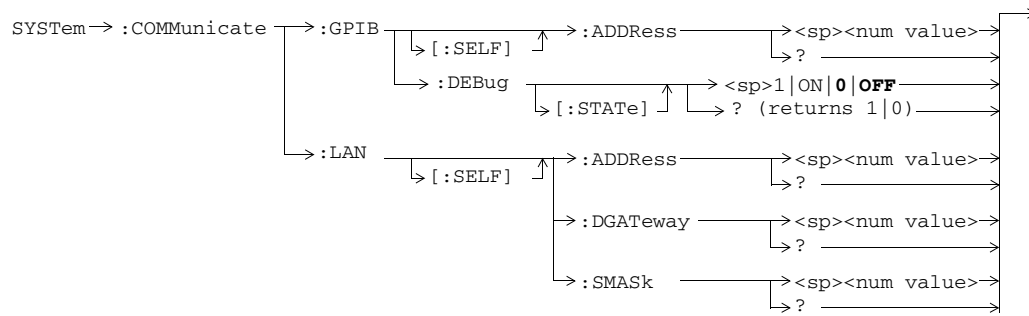


SYSTem:CORRection

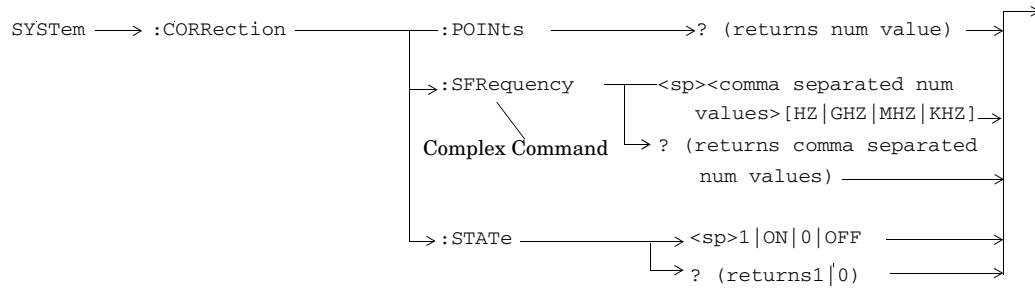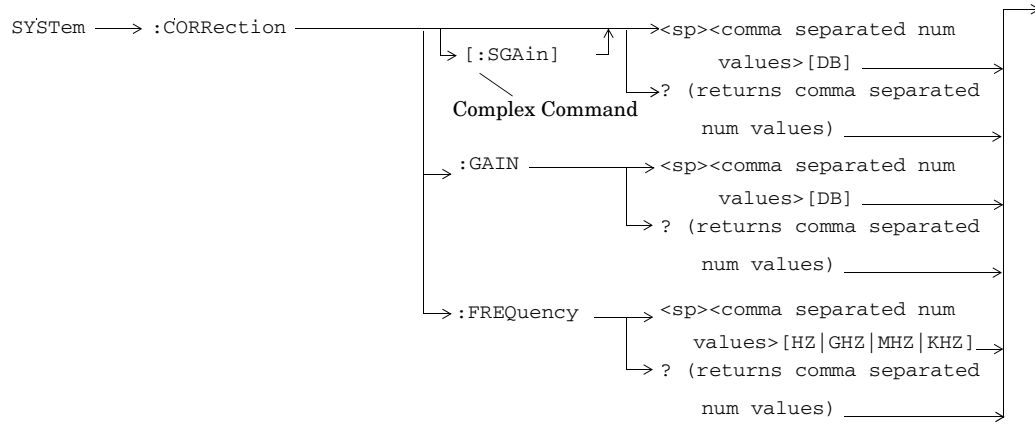


SYSTem:CURRent:TA

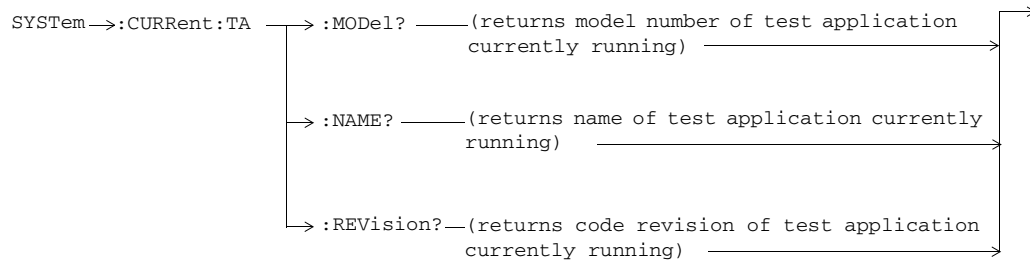

SYSTem:DATE

 


SYSTem:ERRor?

 


SYSTem:FTRigger


NOTE This command has been replaced by the command CALL:TRIGger[:OUTPut].

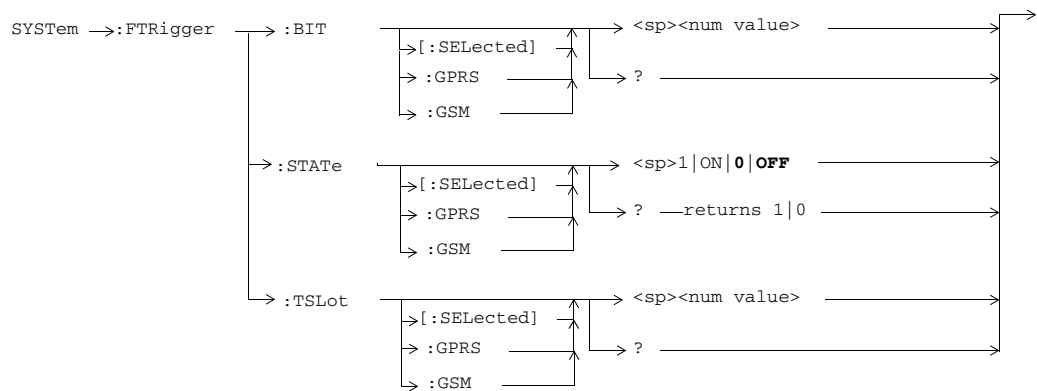

SYSTem:MEASurement

 


SYSTem:PRESet

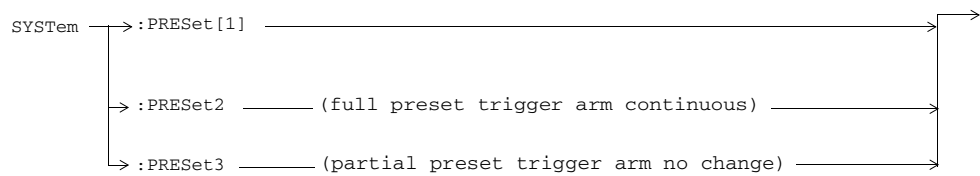


GPIB Syntax for E1968A, E6701C and E6704A


SYSTem:REGister

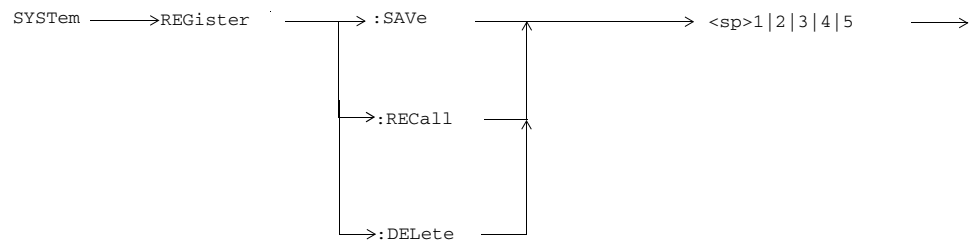


SYSTem:ROSCillator

 

SYSTem:SYNChronized

 

SYSTem:TIME

 

IEEE 488.2 Common Commands

Description

***CLS** The *CLS, clear status command, is defined in “IEEE Std 488.2-1992”, 10.3. This command will also clear and close the error message screen on the test set’s display.

***ESE** The *ESE, standard event status enable command, is defined in “IEEE Std 488.2-1992”, 10.10.

***ESE?** The *ESE?, standard event status enable query, is defined in “IEEE Std 488.2-1992”, 10.11.

***ESR?** The *ESR?, standard event status register query, is defined in “IEEE Std 488.2-1992”, 10.12.

***IDN?** The *IDN?, identification query, is defined in “IEEE Std 488.2-1992”, 10.14. *IDN? is used to retrieve information about the test set in ASCII format.

*IDN?, returns ASCII codes 32 through 126 excluding comma and semicolon in four comma separated fields. Field 1 returns the manufacturer, field 2 returns the instrument model number, field 3 returns the serial number, field 4 returns 0.

***OPC** The *OPC, operation complete command, is defined in “IEEE 488.2-1992”, 10.18. *OPC causes the test set to continuously sense the No Operation Pending flag. When the No Operation Pending flag becomes TRUE, the OPC event bit in the standard event status register (ESR) is set to indicate that the state of all pending operations is completed. The *OPC common command is not recommended for use as an overlapped command.

***OPC?** The *OPC?, operation complete query, is defined in “IEEE Std 488.2-1992”, 10.19. The *OPC? query allows synchronization between the controller and the test set using either the message available (MAV) bit in the status byte, or a read of the output OPC?. The *OPC? query does not effect the OPC event bit in the Standard Event Status Register (ESR). The *OPC? common command is not recommended for use as an overlapped command.

***OPT?** The *OPT?, option identification query, is defined in “IEEE Std 488.2-1992”, 10.20. Each option will have a unique name, that name will be returned with the query.

***RST** The *RST, full preset command, is defined in “IEEE Std 488.2-1992”, 10.32. *RST is the recommended command when performing a full preset on the test set. A *RST restores the majority of settings to their default values.

- *RST sets trigger arm to single
- PRESet2 sets trigger arm to continuous

***SRE** The *SRE, service request enable command, is defined in “IEEE Std 488.2-1992”, 10.34. The parameter range for this command is 0 through 255.

***SRE?** The *SRE?, service request enable query, is defined in “IEEE Std 488.2-1992”, 10.35. Values returned by this query range from 0 through 255.

***STB?** The *STB?, read status byte query, is defined in “IEEE Std 488.2-1992”, 10.36. Values returned by this query range from 0 through 255.

GPIB Syntax for E1968A, E6701C and E6704A

***WAI** The *WAI, wait-to-continue command, is defined in “IEEE Std 488.2-1992”, 10.39. The *WAI command prevents the test set from executing any further commands or queries until all pending operation flags are false. The *WAI common command is not recommended for use as an overlapped command.

GPB Syntax for E1968A, E6701C and E6704A

Index

To find a syntax equivalent for a field on the Test Set's display.

1. Find the field name on the Test Set's display.
2. Look up the name in the alphabetical listing.
3. Turn to the page indicated.

Numerics

3 Digit MNC for PCS 1900, 41

A

abort measurements, 9
Absolute Power Level Unused Bursts, 38
Activate PDP Context Accept, 42, 43, 44
Active Cell Status, 63
active cell, setting, 32
Active logging status, 40
Alternate Ping Address, 19
Amplitude, 10
Amplitude Offset, 161
Analog Audio Setup, 104
analog audio setup, 104
Application Selection, 158
Application Setup, 158
Application Switch, 158
Application, Revision, License, 158
ARFCN
 PDTCH, 34
Attached state, 12
Audio Analyzer
 Audio Frequency, 75
Audio Frequency, 75
Audio Out Port, 159

B

BA Table, 12
Band Pass Filter Frequency
 AAUD, 105
 DAUD, 109
base station colour code, 15, 54
BCC (Base Station Colour Code), 15, 54
BCH number, 16
Beeper State, 159
Bit Error Setup, 106

GPRS, 118
BLER
 data connection type, 22
BLER (Block Error Rate), 63
BLER Block Polling Interval, 21
BLER, payload pattern, 21
Block Delay, 107, 117, 118
Block Error Setup
 GPRS, 107, 117
Broadcast Chan, 16
Burst Synchronization
 PFER, 132
Burst Timing Error
 GPRS, 63
 GSM, 63

C

calibrate IQ modulators, 10
calibration date, querying, 10
CALL
 SMS, 60
call connected query, 17
call state detector, 17, 20
Call Status, 63
Cell Band, 15
Cell Info
 Cell Parameters, 15, 23, 24, 32, 41, 54
Cell Parameters, 15, 23, 24, 32, 41, 54
 BCC (Base Station Colour Code), 15
 LAC (Local Area Code), 23
 MCC (Mobile Country Code), 23
 MNC (Mobile Network Code), 24
 for PCS band, 41
 NCC (Network Colour Code), 32
 RAC (Routing Area Code), 54
Cell Power, 42
Cell Power State, 42
Coding Scheme, 34
Connection Parameters
 Uplink State Flag, 39
Corrupted Bursts, 12, 18, 23, 66
Counters, 18
Custom Mask Setup
 PVT, 135

D

Data Conn Type, 22
data connected query, GPRS, 20
data connection state
 attached, 12
 transferring, 66
Data Connection Status, 63
Data Connection Type, 22

Date (yyyy.mm.dd), 162
date of calibration, querying, 10
debug feature, 8
Decode Errors, 12, 18, 23, 66
Decoded Audio Setup, 109
Deferred Parameters, setup, 56
DELETE hardkey, 164
Detach mobile, 21
Device to Ping, 19
discontinuance reception mode, 33
Display mode, 73
Downlink Traffic Power, 38
DRX, 33
DUT IP Address, 25
DUT IP RX Bytes, 18
DUT IP RX Packets, 18
DUT IP TX Bytes, 18
DUT IP TX Packets, 18
DUT PDP Setup
 DUT IP Address, 25
dynamic power setup, 110

E

EGPRS
 Modulation Coding Scheme, 36
End Call, 20
End Data Connection, 22
error vector magnitude results, 81
Estimated Carrier Power State
 ETXP, 113
ETSI Type A, data connection type, 22
ETSI Type B, data connection type, 22
ETSI Type B, payload pattern, 21
ETX Power Setup, 113
Expected Audio Amplitude, 104
Expected Burst, 16
Expected Maximum Difference
 Dynamic Power, 110
Expected Peak Audio Amplitude, 104
Expected Power, 103
Expected Power Control (receiver control), 103
External trigger Bit Position, 163
External trigger state, 163
External trigger Timeslot, 163
External Trigger Type, 66

F

fast bit error results, 86
FBER Setup, 116
First Burst to Loop, GPRS, 37
Fixed Allocation, 39
FM Demodulation Setup

Index

-
- Bandpass Filter State, 159
 - Deemphasis State, 159
 - Expandor State, 159
 - for call connection, 17, 20
 - Format Switch, 158
 - Frequency, 10
 - frequency error results, 91
 - G**
 - Get IMEI at Call Setup, 23
 - GMM/SM, 40
 - GPRS Bit Error Setup, 118
 - GPRS Block Error Setup, 107, 117
 - GSM_L3, 40
 - Guard Period Length, 31
 - H**
 - Handover Execute, 23
 - Handover Setup
 - Modulation Coding Scheme, 56
 - Uplink State Flag, 57
 - Handover Setup, GPRS, 56
 - handover, making a, 23
 - HP-IB Address, 160
 - I**
 - I/Q Tuning Setup, 118
 - Idle logging status, 40
 - IMEI, 23
 - initiate measurements, 98
 - IP, 40
 - IP Data, data connection type, 22
 - IQ Tuning results, 87
 - L**
 - L1 Interface, 40
 - LAC (Local Area Code), 23
 - LAC (Location Area Code), 23
 - LAN IP Address, 160
 - license, 158
 - LLC, 40
 - LLC Frame Check Sequence, 21
 - location area code, 23
 - Logging
 - Active, 40
 - Idle, 40
 - M**
 - Manual Band, 103
 - Manual Channel, 103
 - Manual Frequency, 103
 - Mask Type
 - PVT, 137
 - Max Frames Allowed for
 - Assignment, 12, 18, 23, 66
 - MCC (Mobile Country Code), 23
 - Measurement Frequency
 - Auto (receiver control), 103
 - manual (receiver control), 103
 - Measurement Log, 162
 - Measurement Offsets
 - PVT, 138
 - PVT, GPRS, 138
 - Measurement Timeout
 - AAUD, 104
 - BERR, 106
 - BLER, 107, 117
 - DAUD, 109
 - Dynamic Power, 110
 - ETXP, 114
 - FBER, 116
 - GBER, 118
 - I/Q Tuning, 118
 - ORFS, 131
 - PFER, 133
 - PVT, 138, 139
 - TXP, 142
 - Measurement Type, 106
 - Measurement Unit, 79
 - measurements
 - initiate, 98
 - starting, 98
 - stopping, 9
 - Missing Bursts, 12, 18, 23, 66
 - MNC (Mobile Network Code), 24
 - for PCS band, 41
 - mobile country code, 23
 - Mobile Loopback, 65
 - mobile network code, 24
 - modulation accuracy (EVM)
 - results, 81
 - Modulation Coding Scheme
 - Handover Setup, 56
 - Modulation Coding Scheme,
 - EGPRS, 36
 - Modulation Format
 - ETXP, 113
 - Modulation Offset
 - ORFS, 128
 - Modulation Offset #
 - ORFS, 128
 - MS TX Level, GPRS, 37
 - Multi-Measurement Count
 - ETXP, 113
 - I/Q Tuning, 118
 - PFER, 132
 - PVT, 135
 - TXP, 142
 - Multi-Measurement Count (Modulation)
 - ORFS, 128
 - Multi-Measurement Count (Switching)
 - ORFS, 129
 - Multi-measurement Count
 - Decoded Audio, 109
 - Multislot Configuration, 37
 - N**
 - NCC (Network Colour Code), 32
 - network colour code, 32
 - Number of bits to test
 - BERR, 106, 118
 - BLER, 107, 117
 - FBER, 116
 - Number of Bursts
 - Dynamic Power, 110
 - O**
 - Observation Points
 - GMM/SM, 40
 - GSM_L3, 40
 - IP, 40
 - L1 Interface, 40
 - LLC, 40
 - RLC/MAC, 40
 - SNDCP, 40
 - Operating Mode, 32
 - ORFS results, 89
 - Originate Call, 32
 - P**
 - Packet Data Traffic Channel, 34
 - Packet Loss, 19
 - Packet Power Timing Advance, 38
 - Packet Timeslot Reconfigure, 38
 - Packets Received, 19
 - Packets Transmitted, 19
 - Pages, 12, 18, 23, 66
 - paging
 - IMSI, 33
 - mode, 33
 - multiframes, 33
 - repeat, 33
 - Paging IMSI, 33
 - Payload Pattern, 21
 - PBCCH, 33
 - PDTCH
 - Absolute Downlink Power, 38
 - ARFCN, 34
 - Band, 34
 - downlink power control, 38
 - MS TX Level, 37
 - P0 reference level, 38
 - PDTCH Protocol Control

Index

-
- Packet Power Timing Advance, 38
 - Phase & Freq Setup, 132
 - phase and frequency error results, 91
 - Ping, 19
 - Ping Count, 19
 - Ping Setup
 - Alternate Ping Address, 19
 - Device to Ping, 19
 - Ping Count, 19
 - Ping Timeout, 19
 - Ping Timeout, 19
 - Power Reduction Level One (PRL One), 38
 - Power Reduction Level Two (PRL Two), 38
 - Power Reduction Level Unused Bursts, 38
 - power versus time results
 - GPRS, 95
 - GSM, 93
 - mask error code for GPRS, 94
 - Power vs Time Measurement Setup, 135
 - preset, 149
 - programming, debug feature, 8
 - Protocol Logging, 40
 - Pulse, 10
 - R**
 - RAC (Routing Area Code), 54
 - RACHs, 12, 18, 23, 66
 - reading results, 100
 - Receiver Control, 103
 - Expected Power Control, 103
 - Measurement Frequency
 - Auto, 103
 - manual, 103
 - Uplink Frequency
 - Auto, 103
 - manual, 103
 - Receiver Control, GPRS, 103
 - Reference Offset Frequency
 - I/Q Tuning, 118
 - Register recall hardkey, 164
 - Repeat Paging, 33
 - results
 - fast bit error, 86
 - GPRS power versus time, 95
 - GSM power versus time, 93
 - IQ Tuning, 87
 - modulation accuracy (EVM), 81
 - ORFS, 89
 - phase and frequency error, 91
 - READ, 100
 - transmit power, 85, 97
 - Rev, License, 158
 - revisions, 158
 - RF Gen Freq, 104
 - RF generator, 55
 - RF generator calibration, 10
 - RLC/MAC, 40
 - RLC/MAC Header, GPRS, 33
 - Round Trip (ms) min/avg/max, 19
 - S**
 - SAVE hardkey, 164
 - setup
 - analog audio, 104
 - dynamic power, 110
 - SMS, 60
 - SNDCP, 40
 - Speech, 65
 - Speech Frames Delay, 106
 - Start Data Connection, 22
 - Start Logging, 40
 - start measurements, 98
 - Start Ping, 19
 - status byte, 157
 - status operation subsystem, 144
 - Stop Logging, 40
 - stop measurements, 9
 - Stop Ping, 19
 - Summary Results
 - Packet Loss, 19
 - Packets Received, 19
 - Packets Transmitted, 19
 - Round Trip (ms) min/avg/max, 19
 - Switching Offset
 - ORFS, 129
 - synchronization, 16
 - T**
 - TBF Frame Starting Position, 21
 - TDMA Frames Delay, 116
 - test application, 158
 - test applications installed, 158
 - Test Function, 21
 - test modes, setting, 32
 - Test Set Initiated Detach, 21
 - Time (hh.mm), 164
 - Time Offset
 - PVT, 138
 - Time Offset for each burst
 - PVT, GPRS, 138
 - Time Zone (hh.mm), 165
 - timeout, 17, 20
 - for call connection, 17
 - for data connection, 20
 - Timeslot, 65
 - Traffic Band, 64
 - Traffic Band, GPRS, 34
 - Traffic Channel, 64
 - Traffic Channel, GPRS, 34
 - Transferring state, 66
 - transmit power results, 85, 97
 - Trigger Arm
 - AAUD, 104
 - BERR, 106, 118
 - BLER, 107, 117
 - DAUD, 109
 - ETXP, 113
 - FBER, 116
 - I/Q Tuning, 118
 - ORFS, 128
 - PFER, 133
 - PVT, 135
 - TXP, 142
 - Trigger Delay
 - ETXP, 115
 - I/Q Tuning, 118
 - ORFS, 131
 - TXP, 143
 - Trigger Qualifier
 - ETXP, 115
 - PFER, 134
 - TXP, 143
 - Trigger Source
 - ETXP, 115
 - I/Q Tuning, 118
 - ORFS, 131
 - PFER, 134
 - PVT, 139
 - TXP, 143
 - triggering, 108
 - TX Power Setup, 142
 - U**
 - Universal Coordinated Time (UTC), 165
 - Universal Coordinated Time (UTC) Date, 165
 - Uplink Frequency
 - Auto (receiver control), 103
 - manual (receiver control), 103
 - Uplink State Flag
 - Connection Parameters, 39
 - Handover Setup, 57
 - Use 3 Digit MNC for PCS 1900, 41
 - Z**
 - Zero Bad Blocks, 118